

07/2014

Mod: MPS18/1


Production code: P6



Diamond
catering equipment

SPARE PARTS

GB

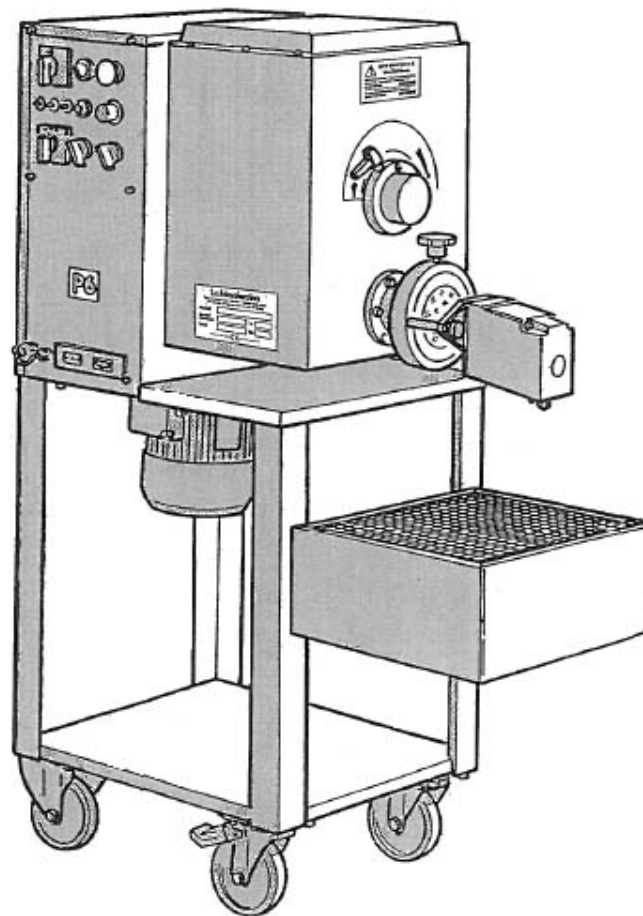

If in doubt do not proceed!
Telephone the **DIAMOND** After Sales Service immediately.



Components subject to wear and mechanical fatigue



Caution!

The components subject to wear caused by the relevant functioning are to be checked at regular intervals and replaced as soon as they show significant signs of wear.

The manufacturer has designed and built the machine for a rational life, taking into account the normal use conditions of the Customer; in any case all these components have to be meticulously checked periodically.

Should “mechanical cracking” or permanent or cyclic structural deformation be found, immediately contact the Manufacturer and expert technicians who will take the necessary action.

Electrical wires, especially if exposed to heat, humidity and/or low temperatures lose their insulating characteristics over time.

With the aid of skilled technicians, check the integrity.

All electrical components with mechanical parts in motion during the work cycle (pushbuttons, selector switches, relays, etc.) are guaranteed by the manufacturer for a certain number of cycles, high, but still limited.


Check their condition frequently and contact skilled technicians for any periodical replacement within the guaranteed working life indicated.



Environment!

Removed parts that have been replaced are to be delivered to the specific collection centres for disposal.

Table 1

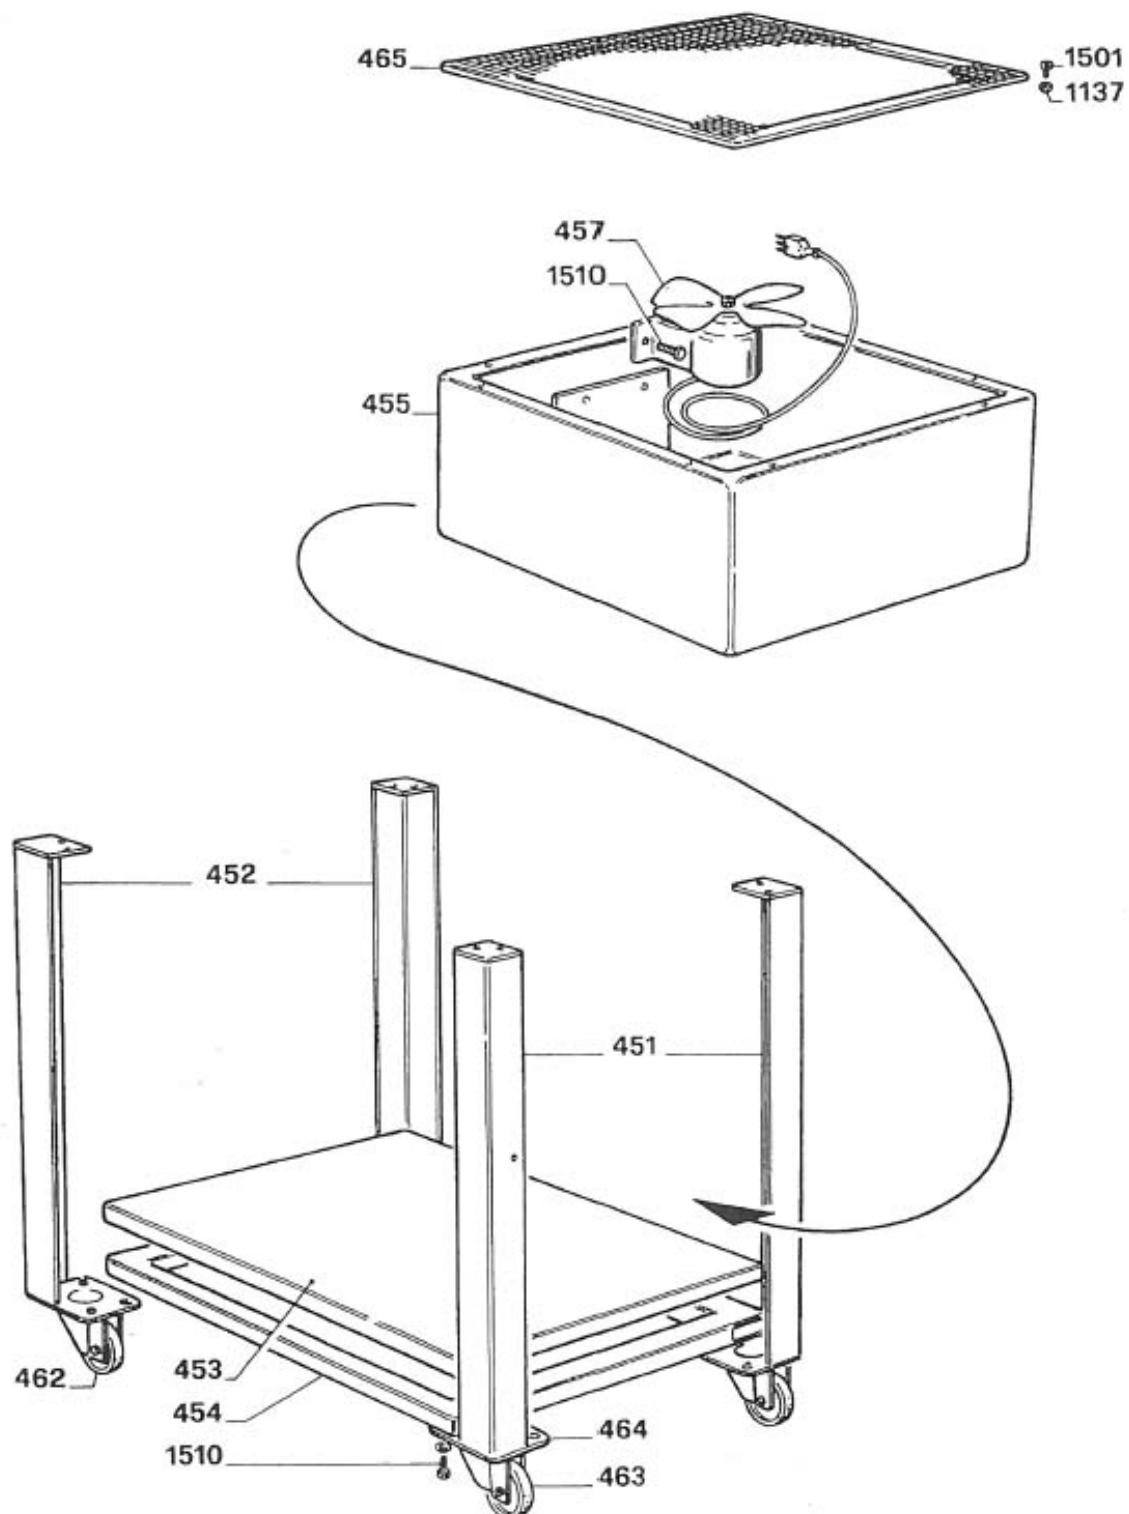




Spare parts

GB

Code	Description
451	Upright
452	Upright
454	Platform
454	Wheel frame
455	Cooling blower box
457	Cooling blower
462	Fixed wheel
463	Swivelling wheel
464	Wheel fixing plate
465	Cover
1137	Hexagonal nut
1501	TSTC screw
1510	TCE screw



Table 2

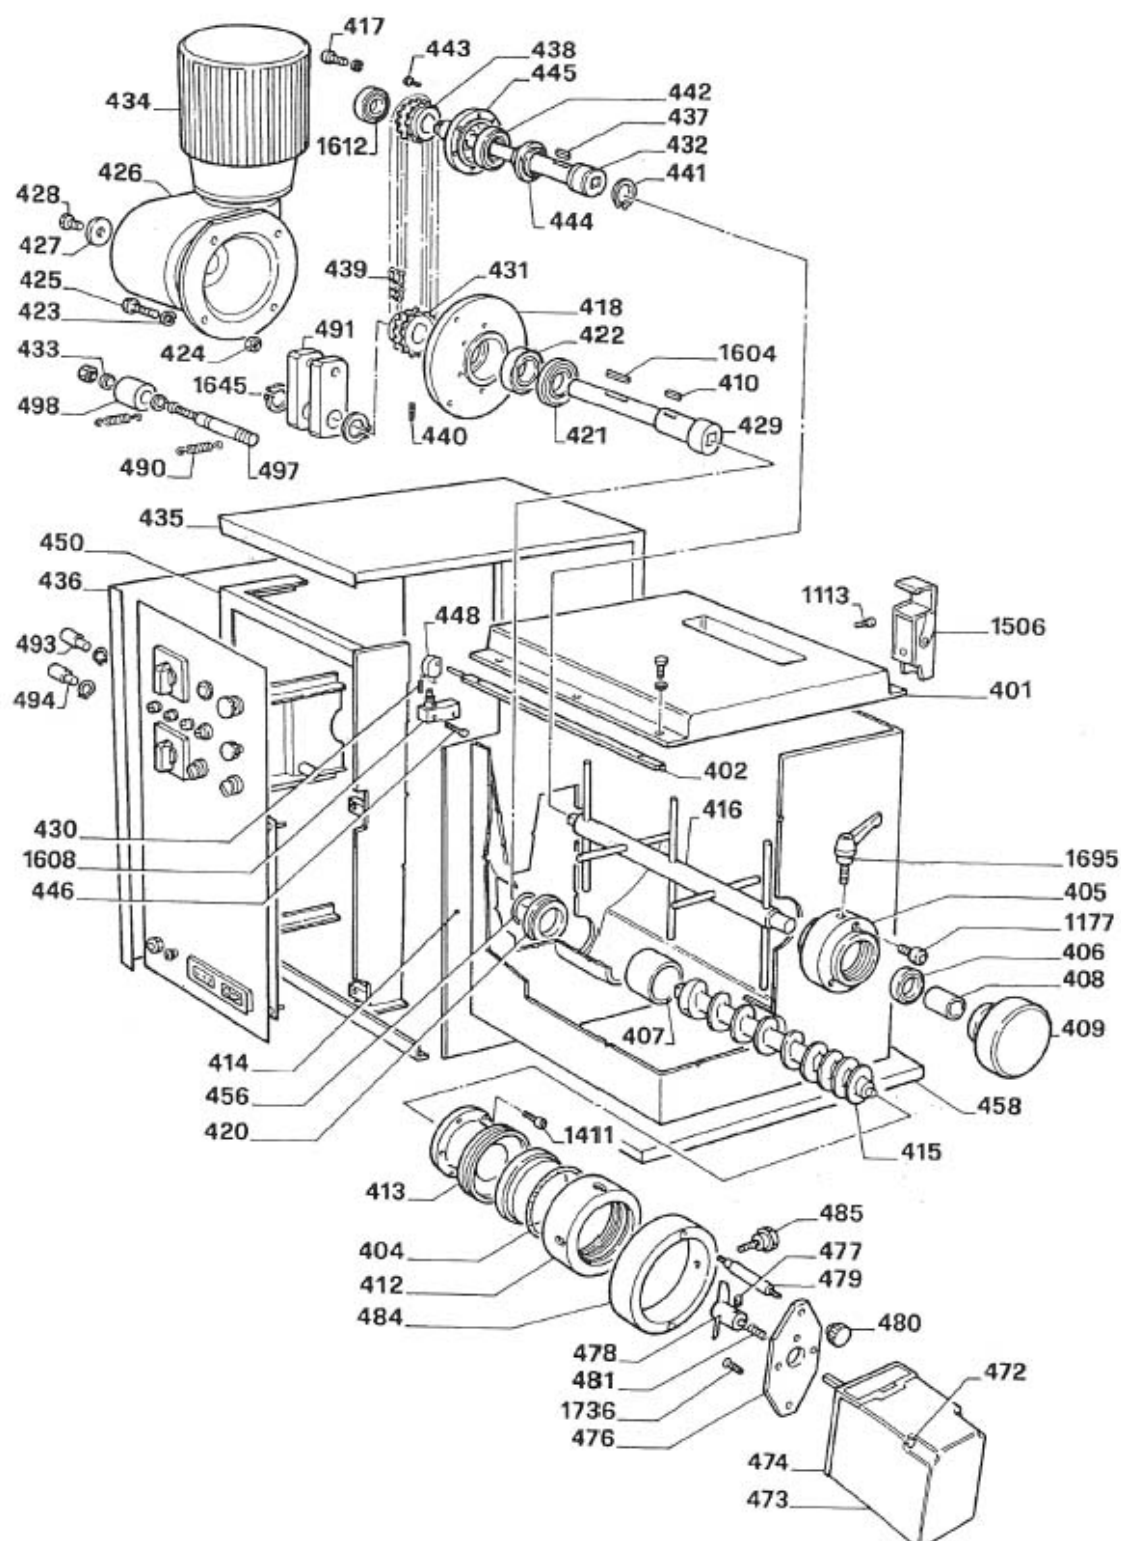

GB



Spare parts

GB

Code	Description
401	Tank cover
402	Rod
404	Seal
405	Flange
406	Shaft seal
407	Tank bushing
408	Bushing
409	Knob
410	Tang
412	Ring nut
413	Plate holder
414	Tank
415	Feeder
416	Mixer shaft
417	TCE screw
418	Flange
420	OR ring
421	Shaft seal
422	Bearing
423	Plain washer
424	Hexagonal nut
425	TCE screw
426	Reducer
427	Washer
428	TCE screw
429	Reducer shaft
430	Dowel pin
431	Pinion
432	Driven shaft
433	Seeger ring




Code	Description
434	Electric motor
435	Casing
436	Rear guard
437	Tang
438	Pinion
439	Double roller chain
440	P.P. dowel pin
441	Seeger ring
443	TCE screw
444	OR ring
445	Flange
446	TCE screw
448	Cam
450	Frame
456	OR seal
472	TCE screw
473	Casing
474	Motor
476	Cross-member
477	Dowel pin
478	Blade
479	Spacer dowel
480	Handweel
481	Spring
484	Ring
485	Knob
490	Chain tightener spring



Spare parts

Code	Description
491	Chain tightener
493	Pin
494	Pin
497	Chain tightener pin
498	Chain tightener roller
1113	TCTC screw
1177	TCE screw
1411	TCE screw
1506	Quick fastener
1604	Tang
1608	Microswitch
1612	Bearing
1645	Seeger
1695	Snap handle
1736	Screw

Table 3

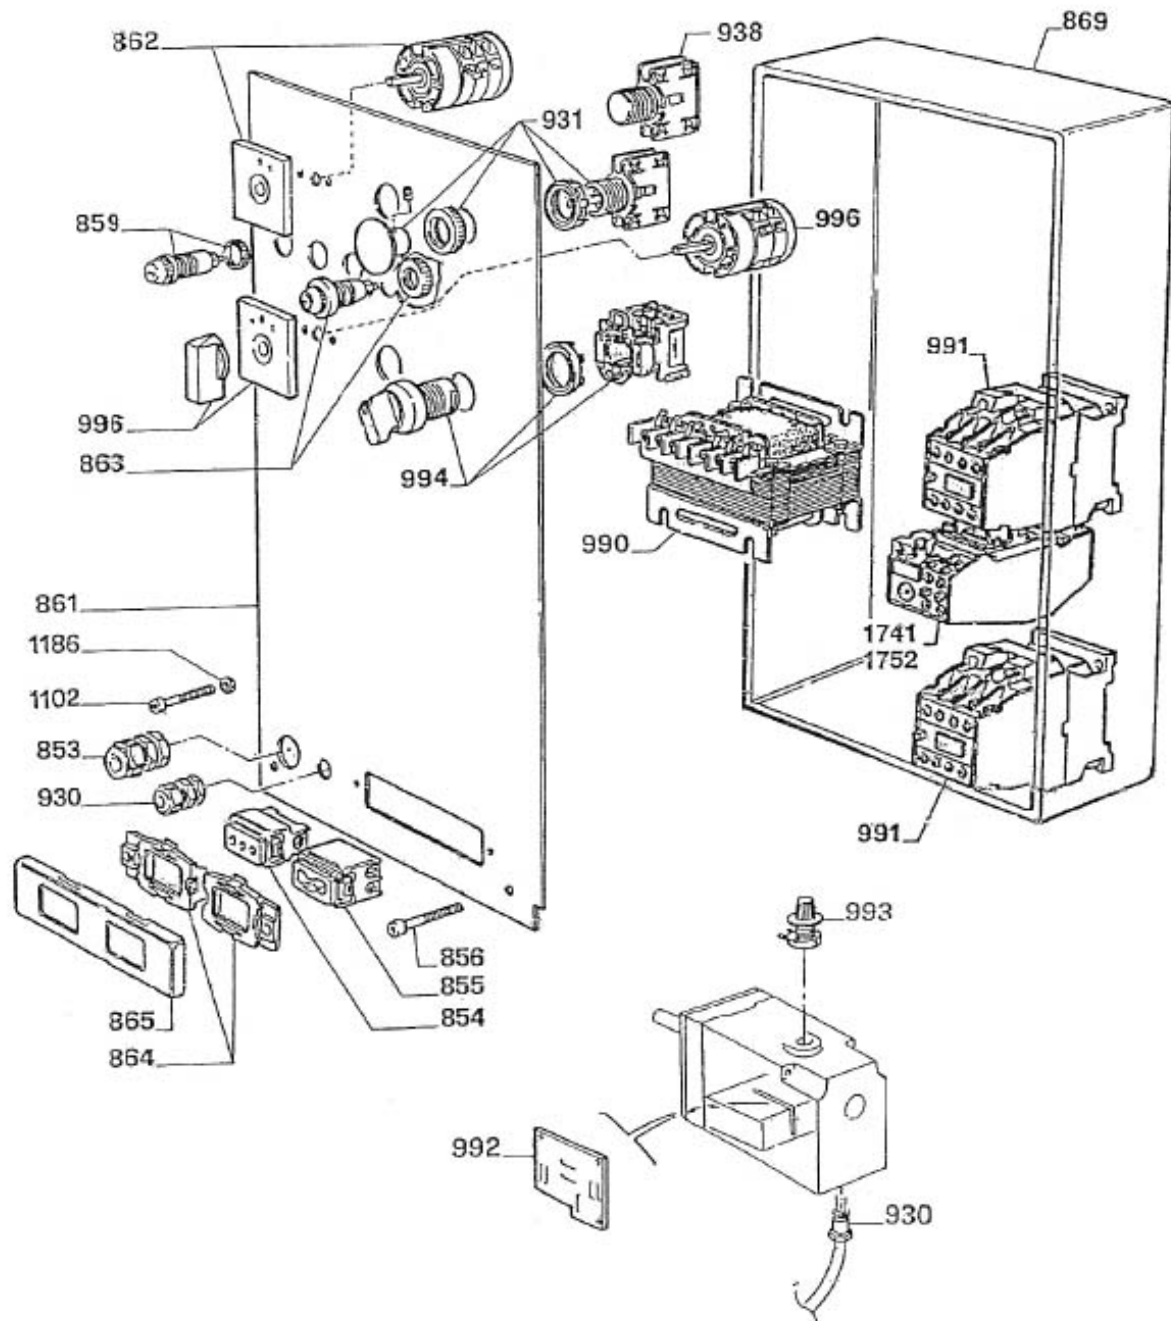

GB



Spare parts

Code	Description
852	Terminal block
853	Cable holder
854	Socket
855	Socket
856	Screw
859	Fuse box
861	Panel
862	Switch
863	Indicator light
864	Supports
865	Plate
869	Casing
870	Button A
930	Cable holder
938	Button M
990	Transformer
991	Contactor
992	Electrical card
993	Potentiometer
994	Selector
996	Reversing gear
1102	Screw
1186	Nut
1741	Thermal switch 220 V
1752	Thermal switch 380 V