

01/2018

Mod: BBM/4N-A1

Production code: SB 40 C4



Diamond
catering equipment

**INSTRUCTIONS FOR INSTALLATION AND
USE WARMING SALAD'BAR
SB 40 C B / SB 60 C B**



Made in France

Avril 2015

WARMING SALAD'BAR

SB 40 C B / SB 60 C B

Congratulations for the acquisition of this upmarket appliance made in France. You chose an appliance which alloys the best technical qualities with a big user-friendliness. We wish you the biggest contentment.

1. SECURITY INSTRUCTIONS

Please respect these instructions scrupulously to avoid any risk of fire, electric shock, scald or other wounds and damage. During the use of this appliance, fundamental circumspection of security must always be noticed, such as :

- Take into account the instructions to be systematically kept with the appliance.
- Install the appliance always in instructions respect. A 10 cm distance minimum with the partition or the wall is necessary.
- Protect the appliance from direct light of the sun, frost and humidity.
- Never leave the appliance within the reach of children or disabled persons without surveillance.
- The machine has to be used only by qualified person.
- Never move the appliance when it is working.
- Check that the appliance is definitely off before connecting it up or disconnecting it.
- Do not touch the hot surfaces of the appliance. The temperature of the hot surfaces can be very important when the appliance is working. Always use handles and control knobs.
- Do not use the appliance for other functions than determined use.
- Do not leave the electrical cord in contact of hot surfaces.
- The appliance should not be used close to combustible materials.
- During use, look after not to obstruct hearings of aeration of the appliance
- To avoid any electric shock, never plunge the cord or plug in water or quite other liquid.
- If the cord is harmed, it must be replaced by the producer, its after sale service or persons of similar skills to avoid any risk.
- Entrust repairs only to a skilled person.
- Use only spare parts of origin.
- Before cleaning the appliance, do not forget to disconnect it.

2. CONTENTS OF CARDBOARD PACKAGING

Device : A salad'bar

Accessories : A roof, two upright, two wires cover, two glasses, screws.
The present note

3. CONFORMITY OF USE

Use the salad'bar only to keep warm your hot starters, meat, vegetables, readymade dishes...at a temperature between +20°C and +90°C during working and service hours.

It enables you keeping warm products already cooked or hot.

4. WAY OF FUNCTIONING

These salad'bars exist in 2 versions : SB 40 C B, SB 60 C B.


They respectively keep 4 containers GN 1/1 and 6 containers GN 1/1 hot.

To turn on your salad'bar, press on the switch (n°1 on picture) : the green pilot light (n°2 on picture) ignites. Turn on the thermostat control knob (n°3 on picture) on the desired temperature.

Press on the upper switch (n°4 on picture) to turn on the light (n°5 and 6 on picture).

A valve under the tank enables to remove the water from the tank (n°7 on picture)

Once water is hot, you can place the GN containers.

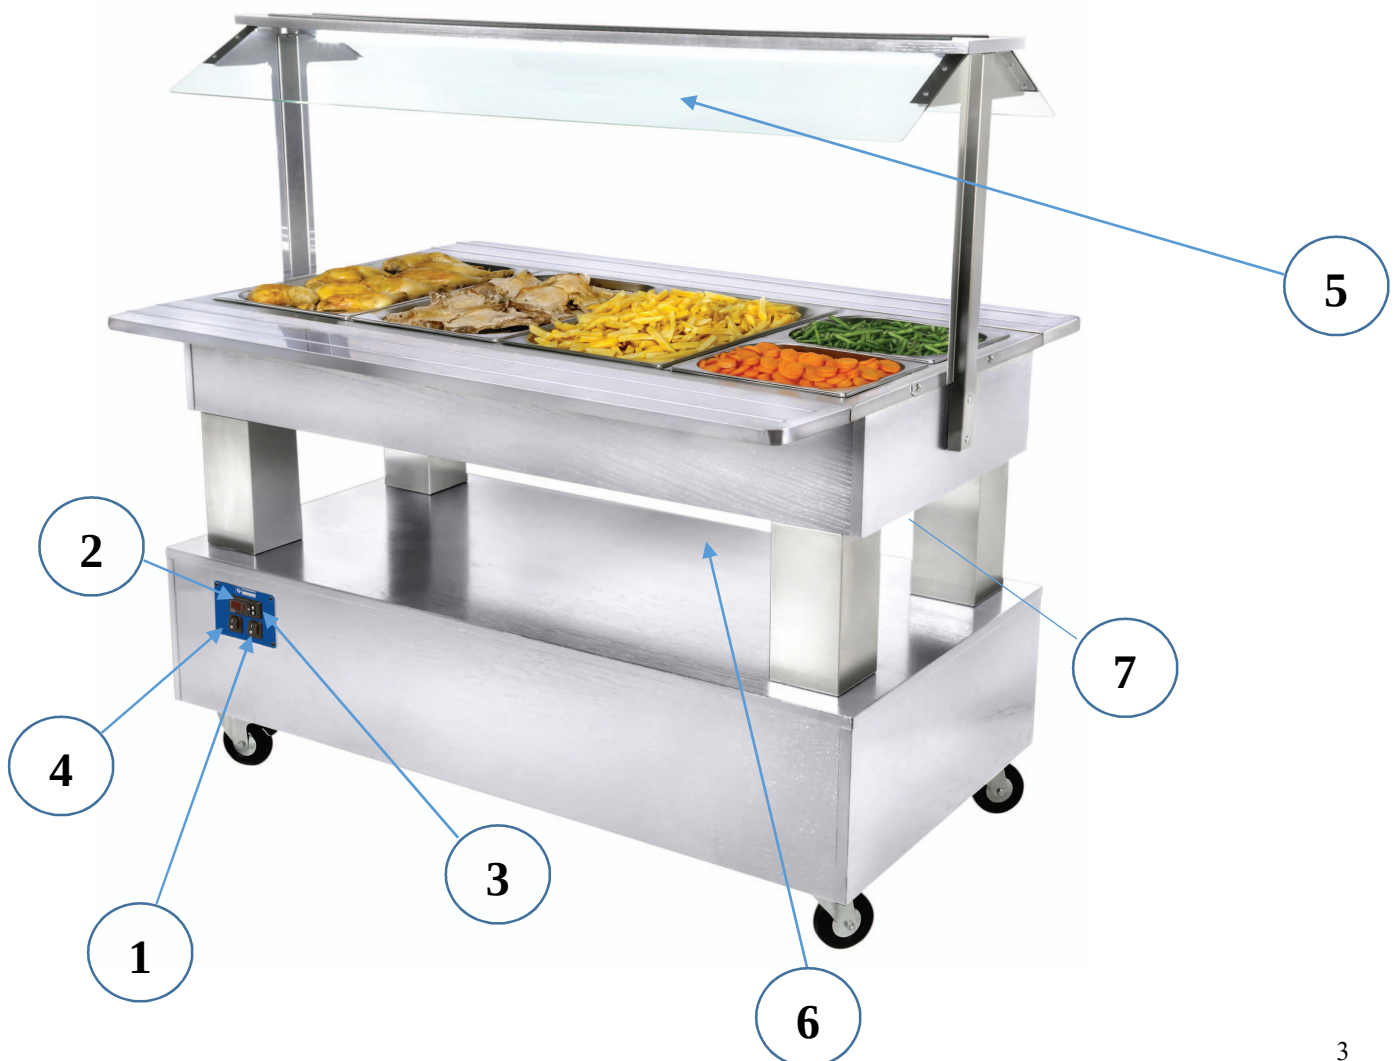

5. FUNCTIONING / MANIPULATION

a) Installation / Assembly :

- Place the equipment on a stable and heatproof surface.
- Never place the device near a wall or near a partition made of combustible materials even if it is very well isolated.
- A distance of 10 cm from the partition or the wall is considered enough.

b) First starting :

Fill the container with water (about 5 cm above the heating elements) before switching on the salad'bar.

Do not let it run without water : it could damage the heating elements and irremediably bend the container.

To avoid quick evaporation, cover the whole tank with containers or lids.

First cleaning

Clean the device before the first use. (See 6 Cleaning)

Connection of the device

- Check that the tension and the frequency of the electricity network suit to the values indicated on the descriptive plate.
- Check that neither the cord nor the plug are damaged
- Make sure that every control knob is positioned on 0.
- Unwind completely the electric power cable and connect it in a normalized plug with the earth.
- The device is connected.

NB: in case of connection of the device in a plug without earth protection or directly on the electricity network, confide its connection to a qualified person.

c) Use of device :

Elements of command and display

Command/Display	Function
Thermostat (n°3 on picture)	Temperature setting
Switch 0/I (n°4 on picture)	Light on / Light off
Switch 0/I (n°1 on picture)	On/off
Green pilot light (n°2 on picture)	Machine on (pilot light on) Machine off (pilot light off)

Starting

Press on the switch (n°1 on picture), the green pilot light (n°2 on picture) ignites.

Turn on the thermostat (n°3 on picture) on the desired position.

Press on the switch (n°14 on picture) to turn on light.

Temperature setting

Set the temperature by positioning the thermostat (n°3 on picture) to the desired temperature.

Stopping the appliance

Set each switch on 0: the appliance is no longer functioning.

Let the device cool.

Disconnect the power cable.

Clean the appliance. (See 6. Cleaning)

d) Breakdown / repair :

In case of breakdown or of damaged part, please call your after-sales service and confide any technical operation to qualified person.

When you contact the after-sales service of your distributor or your store, give him the complete reference of your device (commercial name, type and serial number). This information appears on the visible descriptive plate behind the device.

6. CLEANING AND MAINTENANCE

Disconnect the device

- Let cool completely the device before any technical intervention or cleaning.
- Clean regularly the metallic parts after each use by using only use non-abrasive products, warm water and wash liquid: avoid the abrasive toweling. Rinse your device with a wet sponge and dry it with a soft cloth.
- Never clean the device under a water jet, the infiltrations would risk to damage it in an irreparable way.
- Never immerse the cord or the plug in the water or quite other liquid to avoid any electric shock.
- Regularly change the water to avoid any scale deposit
- Never use abrasive product or vinegar; it could damage the container in irremediable way.

7. TECHNICAL SPECIFICATIONS

Model	SB 40 C B	SB 60 C B
Dimensions	1442x953x1374 mm	2092x953x1374 mm
Weight	115 Kg	150 Kg
Temperature	+20° à +90° C	+20° à +90° C
Power	3000 W	3600 W
Nb heating element	1	2
Current	12.5 A	15.5 A
Voltage	220-240 V ~	220-240 V ~
Colours	Wenge/Light oak/ Mahogany/Limed white wood	Wenge/Light oak/ Mahogany/Limed white wood

Wires colours correspondence :

Phase	Brown or Black or Grey
Neutral	Blue
Earth	Yellow-Green

8. NORMS AND LEGALS DISPOSALS

The device is conform to :

IEC/EN 60335-1
IEC/EN 60335-2-49
EN 55014-1 + 55014-2
EN 61000-3-2 + 61000-3-3

9. ELIMINATION OF THE ELECTRIC AND ELECTRONIC WASTE

The device respects the directives :

2002/96/CE (DEEE)N°34270064800021
2002/95/CE (ROHS)
2066/95 CE
2004/108 CE



Reach rule

Never put the device among household waste.

The device must be put down in a center of recycling for the electric equipments. The materials of the device are indeed reusable. By eliminating correctly the electric and electronic wastes, the recycling and quite other shape of re-use of worn equipments, you participate in a significant way in the environmental protection. For any information about the collection of electric and electronic waste, please contact your distributor.

10. GUARANTEE

Conditions of guarantee

The guarantee applicable to any device is the commercial guarantee of the distributor or the retailer. Please contact the store where you bought your device to know the precise conditions.

The guarantee grants no right for damages.

The dispositions which follow are not exclusive of the profit of the legal guarantee planned by articles 1641 and following ones of the Civil code relative to the defects and the latent defects.

Exclusion clauses of the guarantee

Bad installation and bad maintenance, in particular if they do not respect current regulations or instructions appearing in this user guide.