

12/2015

Mod: FSM-WP

Production code: CW 12



Diamond
catering equipment

INSTRUCTIONS FOR USE AND INSTALLATION FRIES WARMER

CW 12



Made in France

Décembre 2015

FRIES WARMER

CW 12

Congratulations for the acquisition of this upmarket appliance made in France. You chose an appliance which alloys the best technical qualities with a big user-friendliness. We wish you the biggest contentment.

1. SECURITY INSTRUCTIONS

Please respect these instructions scrupulously to avoid any risk of fire, electric shock, scald or other wounds and damage. During the use of this appliance, fundamental circum-spection of security must always be noticed, such as:

- Take into account the instructions and keep it systematically with the appliance.
- Install the appliance always in instructions respect. A 10 cm distance minimum with the partition or the wall is necessary.
- Protect the appliance from direct light of the sun, frost and humidity.
- Never leave the appliance within the reach of children or disabled persons without surveillance.
- Ensure that only trained personnel operate the appliance.
- Never move the appliance when it is working.
- Check that the appliance is definitely off before connecting it up or disconnecting it.
- Do not touch the hot surfaces of the appliance. The temperature of the hot surfaces can be very important when the appliance is working. Always use control knobs.

- Do not use the appliance for other functions than determined use.
- Do not leave the electrical cord in contact of hot surfaces.
- The appliance should not be used close to combustible materials.
- During use, look after not to obstruct hearings of aeration of the appliance.
- To avoid any electric shock, never plunge the appliance, the cord or plug in water or quite other liquid.
- If the cord is harmed, it must be replaced by the producer, his after sale service or persons of similar skills to avoid any risk.
- Entrust repairs only to a skilled person.
- Use only spare parts of origin.
- After use, let the appliance cooling down before cleaning it. Do not forget to unplug it.

2. CONTENTS OF CARDBOARD PACKAGING

Device: A fries warmer

Accessories: - One strainer

- The present note

See exploded view for Fries warmer at the end of the document

3. CONFORMITY OF USE

Use the device only to keep warm fries, vegetables, fried food... once cooked

4. WAY OF FUNCTIONING

This all stainless steel fries warmer is fitted with a thermostat, a commutator, a top ceramic heating element, two bottom heating elements located under the container and one draining tap with safety system on the front.

To turn on the fries warmer, just turn on the commutator (n°1 on picture) on the desired way of cooking (top, bottom, all). The green pilot light (n°2 on picture) ignites. Turn on the thermostat control knob (n°4 on picture) according to the desired temperature. The orange pilot light (n°3 on picture) ignites. Your machine is warming up.



1 Commutator

2 Pilot light

3 Thermostatic pilot light

4 Thermostat

5. FUNCTIONING / MANIPULATION

a) Installation / assembly:

- Unpack carefully the device of its packaging.
- Place the fries warmer on a plane and heatproof surface.
- Never place the device near a wall or near a partition made of combustible materials even if it is very well isolated.
- A distance of minimum 10 cm with the partition or the wall is necessary.
- Place the product to enable easy access to the plug.
- Remove the protective films

b) First cleaning :

Clean the device and the accessories before the first use. (See 6. Cleaning)

Connection of the device

- Check that the tension and the frequency of the electricity network suit to the values indicated on the descriptive plate.
- Check that neither the cord nor the plug are damaged. If necessary, it has to be replaced by the manufacturer, its after sale service or any qualified person to avoid any risk.
- Make sure that every control knob is positioned on 0.
- Unwind completely the electric power cable and connect it in a plug connected with the earth.
- The device is connected.

NB: in case of connection of the device in a plug without earth protection or directly on the electricity network, entrust its connection to a qualified person .

c) Use of device :

Elements of command and display

Command/Display	Function
Commutator 4 positions (n°1 on picture) : Position 0 Position 1 Position 2 Position 3	Stop Top heating element only Bottom heating element only Top and bottom together
Green pilot light (n°2 on picture)	Machine is on (pilot on) Machine is off (pilot off)
Orange pilot light (n°3 on picture)	Warming
Thermostat (n°4 on picture)	Temperature setting

Putting on

Turn on the commutator (n°1 on picture) on the wished position.
Turn on the thermostat control knob (n°4 on picture) on the wished temperature.
The orange pilot light (n°3 on picture) ignites. The machine is on.

Temperature setting

Set the temperature by positioning the thermostat control knob on the desired temperature

Stopping the appliance

Set the thermostat (n°4 on picture) on 0.

Set the commutator (n°1 on picture) on 0: the appliance is no longer functioning.

Let the device cool.

Disconnect the power cable.

Clean the appliance. (see 6. Cleaning)

d) Breakdown / repair:

In case of breakdown or of damaged part, please call your after-sales service and confide any technical operation to qualified person.

When you contact the after-sales service of your distributor or your store, give him the complete reference of your device (commercial name, type and serial number). This information appears on the visible descriptive plate behind the device.

6. CLEANING AND MAINTENANCE

- Disconnect the device.
- Let cool completely the device before any technical intervention or cleaning.
- Clean regularly the external walls of your device with warm water and wash liquid: avoid the abrasive towelling. Rinse your device with a wet sponge.
- Never clean the device under a water jet, the infiltrations would risk to damage it in a irreparable way.
- Never immerse the device, the cord or the plug in the water or quite other liquid to avoid any electric shock.
- During a prolonged non-use, we recommend you strongly to keep the device shielded from the humidity.

7. TECHNICAL SPECIFICATIONS

Model	CW 12
Outside dimensions	400x600x570 mm
Weight	20 Kg
Power	850 W
Nb element	2
Current	3.7 A
Volt	220-240 V ~

Wires colours correspondence

Phase
Neutral
Earth

Brown/Black/Grey
Blue
Yellow-Green

The equipotential connection marked by this symbol  must be linked with the equipotential conductive connection of your installation by means of a minimum conduction of a 2.5 mm² section.

8. NORMS AND LEGALS DISPOSALS

The device is conform to :

IEC/EN 60335-1
IEC/EN 60335-2-48
EN 55014-1 + 55014-2
EN 61000-3-2 + 61000-3-3

9. ELIMINATION OF THE ELECTRIC AND ELECTRONIC WASTE

The device respects the directives:

2002/96/CE (DEEE) N°34270064800021
2002/95/CE (ROHS)
2006/95 CE
2004/108 CE



Reach rule

Never put the device among household waste.

The device must be put down in a centre of recycling for the electric equipments.

The materials of the device are indeed reusable. By eliminating correctly the electric and electronic wastes, the recycling and quite other shape of re-use of worn equipments, you participate in a significant way in the environmental protection.

For any information about the collection of electric and electronic waste, please contact your distributor.

10. GUARANTEE

Conditions of guarantee

The guarantee applicable to any device is the commercial guarantee of the distributor or the retailer. Please contact the store where you bought your device to know the precise conditions.

The guarantee grants no right for damages.

The dispositions which follow are not exclusive of the profit of the legal guarantee planned by articles 1641 and following ones of the Civil code relative to the defects and the latent defects.


Exclusion clauses of the guarantee

Bad installation and bad maintenance, in particular if they do not respect current regulations or instructions appearing in this user guide.

Cannot benefit from the guarantee the repairs required as a result of false operations, of inappropriate use, of carelessness or of excess loads of the device, as well as those resulting from variations of the power supply, over tension or from defective installations.

The damage due to shocks, bad weather is not flatware by the guarantee. The material travels at the risks of the user; in case of delivery by carrier, the consignee has to have reservations towards the carrier before any delivery of the device.

The guarantee comes to an end in case of intervention, of repair, of modification by no qualified persons, or of use in inappropriate purposes.

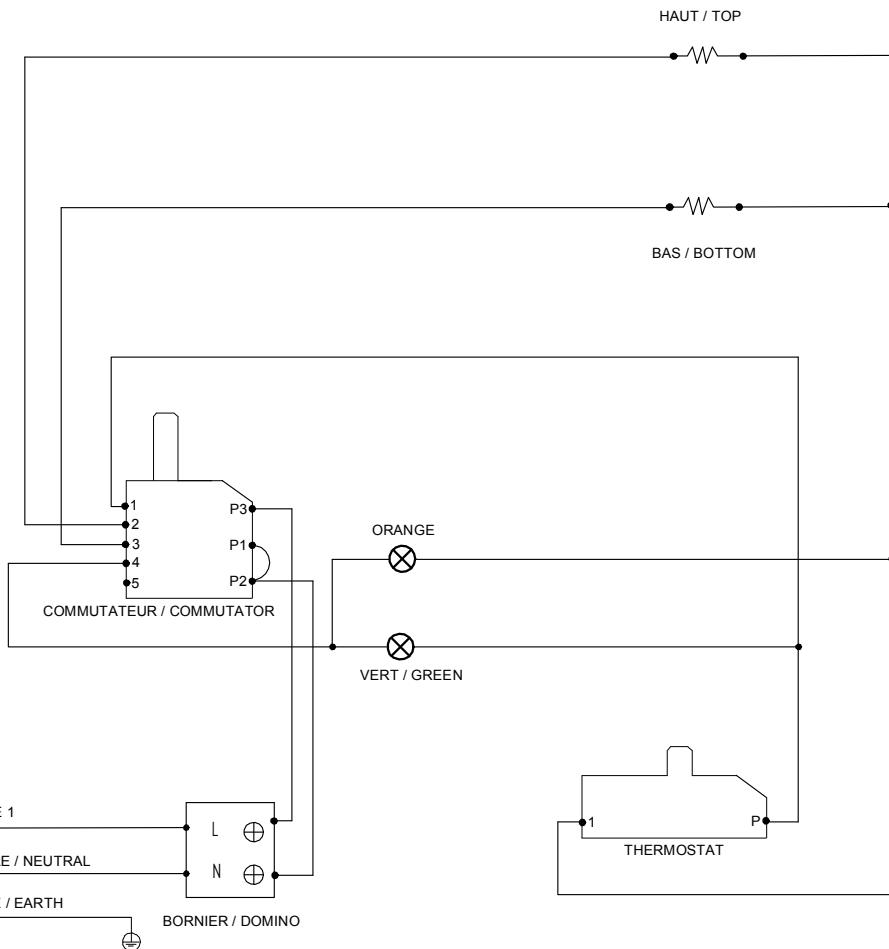

Câblage : C02422

CW 12

Schéma électrique

DT121

Date :
02/02/2016

Dessiné par :
R.L.

Approuvé par :
S.Grenon

Date :
02/02/2016


Indice
B

CODE	QTE	PIECE	SPARE PART
07187	1	COTE DROIT RFE 12	RIGHT SIDE RFE 12
07188	1	COTE GAUCHE RFE 12	LEFT SIDE RFE 12
07192SE	1	CUVE FRITEUSE RFE 12 ASSEMBLEE	TANK ASSEMBLY RFE 12
07195SE	1	FOND DE SOCLE RFE 12	BOTTOM CASING RFE 12
07235SE	1	S/E BOITIER HAUT ET BAS CW 12	TOP AND BOTTOM BOX FRIES WARMER ASSEMBLY
07236	1	ARRIERE BOITIER CW 12	BOX REAR CW 12
07237	1	EGOUTTOIR CW 12	COLANDER CW 12
07238SE	1	ARRIERE CW 12	REAR CW 12
07239	1	BANDEAU CW 12	CONTROL PANEL CW 12
40302	1	SERRE BULBE THERMOSTAT BAIN MARIE	THERMOSTAT HOLDER BAIN MARIE
A01001_1	1	COMMUTATEUR 4924215001 PSM 60	COMMUTATOR 4924215001
A06021	1	THERMOSTAT	THERMOSTAT
A08003	1	VOYANT ORANGE DIAM 12	ORANGE PILOT LIGHT DIAM 12
A08009	1	VOYANT VERT DIAM 12	GREEN PILOT LIGHT DIAM 12
A10032	1	PRESSE ETOUPE	CORD CLOSER
A13006	4	VERIN MOLETTE NOIR (PIED)	FOOT
A14078	2	BOUTON 12 H ELECT	KNOB 12 H FOR ELECTRIC
A16003	2	BARRETTE CREPIERE RV25, DH, D	BARRETTE CREPE MACHINE RV25, DH, D
A16012	1	BORNIER 2 PLOTS	2 HOLES DOMINO
A16026	2	MINI BORNE 2x4mm²	MINI TERMINAL 2x4mm²
B04110	1	TUBE VIDANGE LG 114 mm RFE 12	DRAINING PIPE LG 114 mm RFE 12
B08004	1	RIVET TERRE	EARTH RIVET
B08005	1	ENTRETOISE RBE/RBG 4-8-12	SPACER RBE/RBG 4-8-12
B10014	1	ROBINET VIDANGE FRITEUSE	DRAINING DEVICE TAP FRYER
B10020	1	MANCHON DD 1/2 RFE 12	UNION DD 1/2 RFE 12
C03P04077	1	CORDON	CORD
C05018	1	BORNE EQUIPOTENTIEL	EQUIPOTENTIAL TERMINAL
D02173	2	ELEMENT CHAUFFANT 230 V 170 W WARM IT	HEATING ELEMENT 230 V 170 W WARM IT
D02190	1	RESISTANCE CERAMIQUE 500 W 230 V	CERAMIC HEATING ELEMENT 500 W 230 V
G06939	1	CADRAN	FRONT PANEL
H02074	1	ISOLANT CW 12	INSULATION CW 12

CW 12

Nomenclature

DT121	Date : 02/02/2016	Dessiné par : R.L.	Approuvé par : J.Godéré	Date : 02/02/2016	Indice B
-------	----------------------	-----------------------	----------------------------	----------------------	-------------

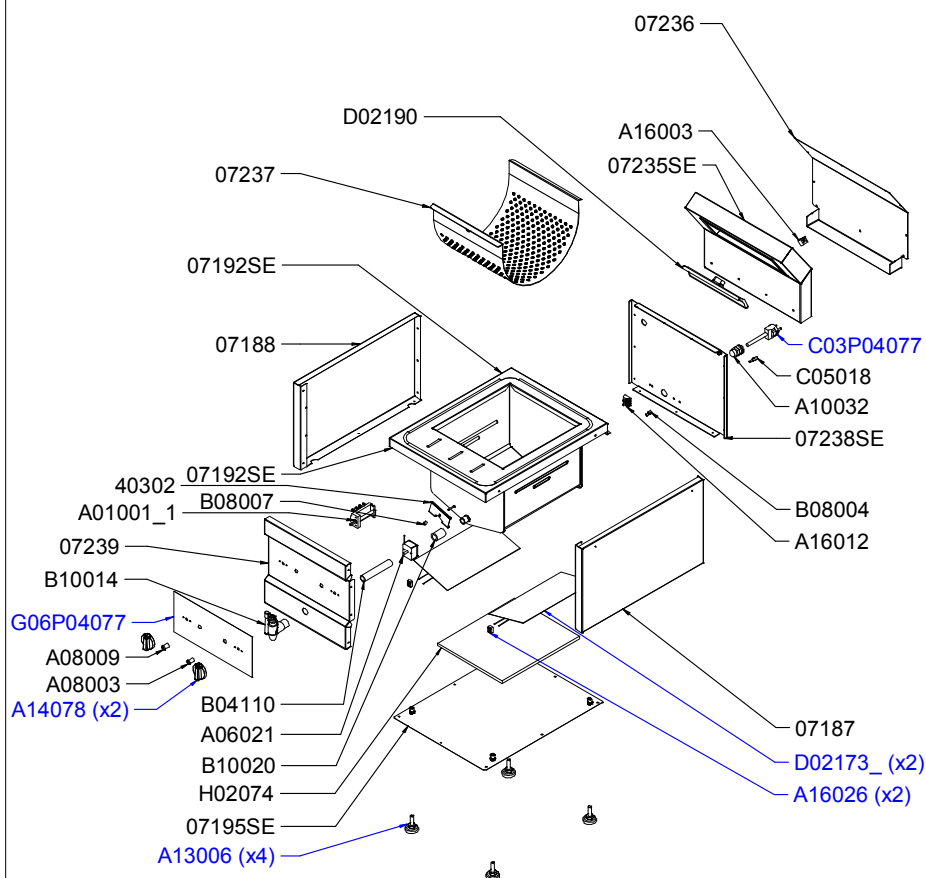

CW 12

Vue éclatée

DT121

Date :
02/02/2016

Dessiné par :
R.L.

Approuvé par :
S.Grenon

Date :
02/02/2016

Indice
B