

Mod: **WR-TSE2-D**

Production code: **TKD1T-RB NV**



Mod.	Desc.	Power Puissance	Tension Voltage
WR-TSE1-S	Toaster-salamander 1 level, with timer	2200W	230V
WR-TSE2-D	Toaster-salamander 2 level, with timer	3300W	230V

EN - USER INSTRUCTIONS

Read carefully these instructions before using the toaster for the first time. Keep it for future needs.

- Chose a proper location for the device.

- a) The toaster should not be close to combustible materials or susceptible of deformation with the heat. In case it is not possible, the place must be insulated with a material with good heat insulation and non-combustible.

- b) Chose a place without humidity.

- Connect the toaster in an electric installation properly dimensioned according to the information in the rating label.

- This is a class I device. Only connect the toaster in a plug with earth connection.

- Do not place the toaster in the proximity of faucets.

- Do not place the toaster too close of an electrical plug.

- The power switches should be disconnected when plugging or unplugging the device.

- Do not use the device with wet hands.

- Uncoil the cable before using the device.

- Always use the toaster in the vertical position.

- Do not leave the toaster in operation without monitoring, especially near the children. This toaster should not be used by children.

- Do not disconnect the toaster unplugging the cable.

- Before doing cleaning, verify if the toaster is disconnected and if it is cold.

- Do not submerge the toaster in water or any other liquid.

- It does not use a toaster with a chronometric control system or any other device that puts it into automatic operation.

- Never use auxiliary extensions to increase the length of the cable or adapters type "T".

- Do not use the toaster if the cable or the plug were spoiled or if it is not working correctly.

- The cable repairs and changes have to be done exclusively by an authorized technical service.

USAGE

1. Make sure that the sliding grids (3) and the crumb tray (4) are well positioned before using the toaster.


2. Pull the switches (1) to use cameras that you wish.

3. In case that the toaster has a timer, rotate the timer knob (2) for the desired "time to off".

4. Use the sliding grids (3) to place the bread in the cameras.
5. During the operation of the toaster, do not touch in the metallic parts, because it can have high temperatures.
6. IMPORTANT NOTE: The crumb tray should only be removed after switching off the toaster and wait for it to cool down. Do not touch the crumb tray or the body of the toaster during operation: danger of high temperatures.

ATTENTION

- A. In case of a waterfall on the toaster, the toaster must be disconnected from the power supply and well dried before using it again.
- B. To carry out the cleaning and maintenance of the toaster, always make sure to unplug the unit first.
 - B.1 - Use a damp cloth to clean the toaster and never jets of water for cleaning.
 - B.2 - When the protection grills of the heating elements are removed, make sure to assemble them again before start using the toaster.

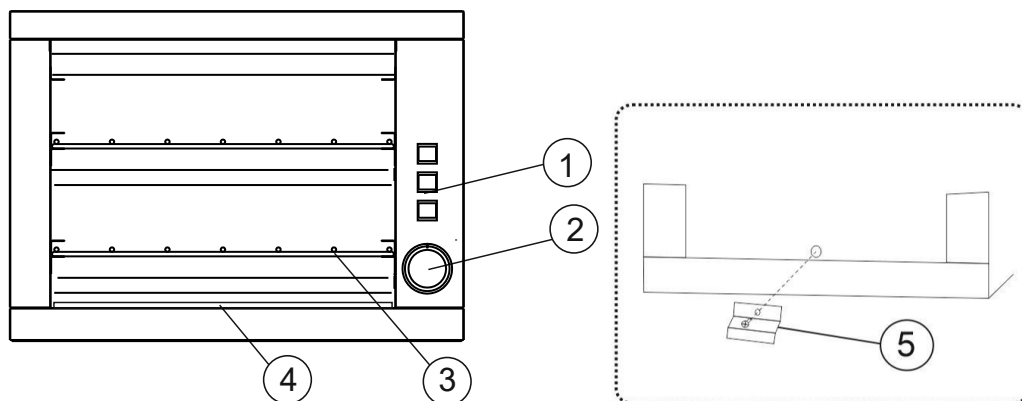

Structure of the toaster-salamander:

1. Power switches
2. Timer (if applicable)
3. Removable grille
4. Crumb tray
5. Rear spacer and screw