

MOD : WR-MS41-16

Production code : 716



EN

WR-MS41-16

IMPORTANT SAFETY INSTRUCTIONS

Before using your appliance, read carefully the instructions contained in this booklet, which furnish important information regarding installation, use and maintenance safety. The booklet must be kept and delivered to the new user in case of cession of the machine. The Manufacturer reserves the right to vary the features of the product without prior notice. The technical data are merely indicative.

1. This appliance is intended exclusively for the use for which it was created, to dry the hands by means of flowing warm air, and the Producer would not be considered responsible for any damage caused by its improper use.
2. After unpacking, make sure that the appliance is complete and shows no signs of visible damage or tampering.
3. Keep packing materials, which are potential dangers, away from children (plastic bags, styrofoam packing pellets, nails, etc.).
4. Before inserting the plug make sure that the voltage is the same as indicated on the device and the line supply is corresponding to the effective rules.
5. Do not use in presence of gas, inflammable or explosive liquids or substances.
6. Some fundamental rules which apply to all electrical devices must be observed when using the appliance:
 - do not touch the heater with wet hands;
 - do not handle with bare feet;
 - do not pull the electric cord or the device itself to unplug it from the socket; pull the plug directly.
7. The device can be used by children at least 8 years (as well as by persons with reduced physical, sensory or mental capabilities, or lack of experience or required knowledge) provided that they are under surveillance, or after they have been instructed relating to the safe use and have understood the potential dangers. Children should not play with the appliance. Cleaning and maintenance must be performed by the user and not by unsupervised children.
8. Do not bring modifications to the product that compromise the safety.

9. Keep connections dry.
10. If the power supply cord is damaged avoid to use it. Let the Manufacturer, or the After Sale Service, or some similar qualified person replace it, in order to avoid any risk.
11. Disconnect the appliance from the supply line, if you don't use it for a long time.
12. Always unplug the appliance before doing any maintenance operation.
13. Periodically verify the integrity of the appliance. If defects are found, do not use it; call an Authorized After Sale Service.
14. In case of malfunction or fault, call an Authorized After Sale Service, and request original spare parts.



In case of steady connection to the wire, a bipolar circuit breaker with contact opening distance of at least 3 mm must be fitted upstream from the supply line.

This hand dryer must be installed out of the range of a person using the bath or the shower.

Disconnect the appliance from the power supply when not used.

For safety reasons, never attach the device above bath tubs, wash basins, showers, or other fittings where there may be water.

FEATURES

The mod. 715 (with plastic shell) and the mod. 716 (with metal shell) electronic hand dryers have a double protection device in the heating element, that makes the machine stop automatically after 60 seconds of continued work. The main features of the appliances are high power, easy installation and use, safety and reliability.

FITTING INSTRUCTIONS



This appliance is intended for indoor use only

The hands dryers have been specifically designed for vertical attachment on the wall with the air outlet toward the bottom.

Make sure that the wall where you plan to mount the appliance is solid and free of electrical cables or water pipes inside.

Position

- The appliance can be installed and used in bathroom, washroom, kitchen, etc.
- The distance should be around 110 cm from the ground.
- Keep a certain distance between the dryer and the door, to avoid hits when opening and closing the door.

Installation

1. Following the diagram in Fig. 1, drill 4 holes on the wall.
2. Take the shell of the appliance away from the body, unscrewing by a screw-driver.
3. Fasten the body to the wall, by means of 4 dowels (provided).
4. Fasten the shell to the body by screws.
5. Connect the appliance to the power supply.

FUNCTION

- The hand dryer works automatically. After washing your hands, put them near to the wind hole, located at the bottom. The warm air flows immediately. As your hands leave the air outlet, the appliance automatically stops, in order to avoid infection of germs.
- If you wish a cold air flow (ambient temperature) switch the heating element off pushing the red button at the bottom of the appliance
- To short the work time, please shake the water away from your hands before the use.

EN IMPORTANT

This product conforms to EU Directive 2002/96/EC.

This appliance bears the symbol of the barred waste bin. This indicates that, at the end of its useful life, it must not be disposed of as domestic waste, but must be taken to a collection centre for waste electrical and electronic equipment, or returned to a retailer on purchase of a replacement.



It is the user's responsibility to dispose of this appliance through the appropriate channels at the end of its useful life. Failure to do so may incur the penalties established by laws governing waste disposal.

Proper differential collection, and the subsequent recycling, processing and environmentally compatible disposal of waste equipment avoids unnecessary damage to the environment and possible related health risks, and also promotes recycling of the materials used in the appliance.

For further information on waste collection and disposal, contact your local waste disposal service, or the shop from which you purchased the appliance.

Manufacturers and importers fulfil their responsibilities for recycling, processing and environmentally compatible disposal either directly or by participating in collective systems.