

12/2016

Mod: RVC60-CM

Production code: 800VC-4E



Diamond
catering equipment

MODELS VC-4E AND VC-4ED

STARTING UP

- 1° Connect the apparatus to an electricity outlet which has 230v and earth lead.
- 2° Press the red switch. This will light up indicating that the apparatus is connected.
- 3° Programme the working temperature by means of the scale on the thermostat control. The orange pilot light will be illuminated, indicating that the apparatus is beginning to warm up.

From this moment it is the thermostat which takes over the control of the temperature of the apparatus, switching on the resistance (orange pilot light on) or switching it off (orange pilot light off).

It is not advisable to programme a temperature in excess of 60° maximum to keep food warm.

- 4° Press the orange coloured switch to light up the apparatus.
- 5° To switch the apparatus off, turn the thermostat to zero, press the orange and red switches to shut off the light and cutting off the current from the apparatus respectively.