

# **MOD**: E9/4SPA8-N

Production code : DIPQR98A



#### STOVE - SOLID TOP INSTALLATIONS AND USE INSTRUCTIONS

# TABLE OF CONTENTS

#### 1-2. GENERAL AND SAFETY INFORMATION

- 3. POSITIONING AND HANDLING
- 4. POWER SUPPLY CONNECTIONS
- 5. OPERATIONS FOR COMMISSIONING
- REPLACING COMPONENTS

- 7. INSTRUCTIONS FOR USE
- 8. MAINTENANCE
- WASTE DISPOSAL
- 10. TECHNICAL DATA / IMAGES

# DESCRIPTION OF PICTOGRAMS

Danger indications. Immediate hazardous situation which could result in serious injury or death. Possibly dangerous situation that could cause serious injury or death.



High voltage! Caution! Dänger of death! Non-observănce can cause serious injury or death



Pericolo Risk of high temperatures, non-compliance may result in serious injury or death.



Danger of leakage of high-temperature materials. non-observance can cause serious injury or death.



Danger of crushing of limbs during handling and / or positioning, non-compliance may result in serious

injury or death. Prohibition indications. Unauthorised persons (including children, disabled individuals and people with limited physical, sensory and mental abilities) are prohibited from performing procedures. anv

Children being supervised not to play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Prohibition for the heterogeneous operator to perform any type of operation (maintenance and/or other) that should instead be carried out by a qualified and authorised technician. Prohibition for the homogeneous operator to perform any type of operation (maintenance and/or other) without having first read the entire documentation specifics.



Obligation indications. Obligation to read the instructions before carrying out any work.



Obligation to exclude the power supply upstream of the appliance whenever it is necessary to operate safely.



Obligation to use safety goggles.



Obligation to use protective gToves.



Obligation to use a protective helmet.



Obligation to use safety shoĕs.

 


Other indications. Indications to implement the correct procedure, non-compliance máy cause a dangerous

situation.

Advice and suggestions to ensure the correct usage procedure.

"Homogeneous" Operator (Qualified Technician). Expèrt operator authorised for handling, transporting, installing, servicing, repairing and scrapping the appliance.





Earthing symbol

Symbol for attachment to the Equipotential system



Obligation to respect the regulations for waste disposal.



## GENERAL AND SAFETY INFORMATION

FOREWORD / Original instructions. This document has been drawn up in the mother language of the manufacturer (Italian).

The information it contains is for the sole use of the operator authorised to use the appliance in question.

Operators must be trained concerning all aspects regarding functioning and safety. Special safety prescriptions (Obligations-Prohibitions-Dangers) are carried in a specific chapter concerning these issues. This document cannot be handed over to third parties to take vision of it without written consent by the manufacturer. The text cannot be used in other publications without the written consent of the manufacturer.

The use of: Figures/Images/Drawings/ Layouts inside the document, is purely indicative and can undergo variations. The manufacturer reserves the right to modify it, without being obliged to communicate his acts.

# PURPOSE OF THE DOCUMENT

/ Every type of interaction between the operator and the appliance during its entire life cycle has been carefully assessed both during designing and while drawing up this document. We therefore hope that this documentation can help to maintain the characteristic efficiency of the appliance.

By strictly keeping to the indications it contains, the risk of injuries while working and/or of economical damage is limited to a minimum.

HOW TO READ THE DOCUMENT

I The document is divided into chapters which gather by topics all the information required to use the appliance in a risk-free way. Each chapter is divided into paragraphs; each paragraph can have titled clarifications with subtitles and descriptions.

**KEEPING THE DOCUMENT** / This document and the rest of the contents of the envelope, are an integral part of the initial supply. It must therefore be kept and used appropriately during the entire operational life of the appliance. **ADDRESSEES** / This document is drawn up as follows:

- Homogeneous operator / Expert operator authorised for handling, transporting, installing, servicing, repairing and scrapping the equipment.
- **Generic operator** / Person authorised and employed to operate the appliance with guards active, capable of performing routine tasks.

#### **OPERATOR TRAINING**

**PROGRAM** / By specific request, it is possible to carry out a training course for users, installers and technicians, following the procedures indicated in the order confirmation.

# PRE-ARRANGEMENTS DEPENDING ON CUSTOMER /

Unless different contractual agreements were made, the following normally depend on the customer:

- setting up the rooms (including masonry work, foundations or channelling that could be requested);
- smooth, slip-proof floor;
- pre-arrangement of installation place and installation of equipment respecting the dimensions indicated in the layout (foundation plan);
- pre-arrangement of auxiliary services adequate for requirements of the system (electrical mains, gas network, drainage system);
- pre-arrangement of electrical system in compliance with regulatory provisions in force in the place of installation;
- sufficient lighting, in compliance with standards in force in the place of installation;
- safety devices upstream and downstream the energy supply line (residual current devices, equipotential earthing

systems, safety valves, etc.) foreseen by legislation in force in the country of installation:

- earthing system in compliance with standards in force;
- pre-arrangement of a water softening system, if needed (see technical details).

# CONTENTS OF THE SUPPLY / The supply vary depending on the order. • Appliance • Lid/s • Metallic rack/s • Rack support grid

• Pipes and/or wires for connections to energy sources (only when indicated in work order).

**INTENDED USE** / This device is intended for professional use. The use of the appliance treated in this document must be considered "Proper Use" if used for cooking or regeneration of goods intended for alimentary use; any other use is to be considered "Improper use" and therefore dangerous.

These appliances are intended for commercial activities (e.g. restaurant kitchens, canteens etc) and in commercial companies (e.g. bakeries etc.) but not for the continuous food production. The appliance must be used according to the foreseen conditions stated in the contract within the prescribed capacity limits carried in the respective paragraphs.

Only use original accessories and spare parts supplied by the manufacturer to maintain regulatory compliance.

## **ALLOWED OPERATING**

**CONDITIONS** / The appliance has been designed to operate only inside of rooms within the prescribed technical and capacity limits. The following indications must be observed in order to attain ideal operation and safe work conditions. The appliance must be installed in a suitable place, namely, one which allows normal running, routine and extraordinary maintenance operations.

The operating area for maintenance must be set up in such a way that the safety of the operator is not endangered. The room must also be provided with the features required for installation, such as:

- maximum relative humidity: 80%;
- minimum cooling water temperature > + 10 °C;
- the floor must be anti-slip, and devices positioned perfectly level;
- the room must be equipped with a ventilation system and lighting as prescribed by standards in force in the country of the user;
- the room must be set up for draining greywater, and must have switches and gate valves which cut all types of supply upstream the appliance when needed;
- The walls/surfaces immediately close/contact to the appliance must be fireproof and/or isolated from possible source of heat

TEST INSPECTION AND WAR-**RANTY / Testing**: the equipment has been tested by the manufacturer during the assembly stages at the site of the production plant. All certificates related to the testing performed will be delivered to the customer upon request. Guarantee: the warranty is 12 months from the date of invoicing of the equipment, this period cannot be extended. It covers the faulty parts only. Carriage and installation charges are for the buyer's account. Electric components, accessories as well as other removable parts are not covered by the guarantee. Labor costs relating to the intervention of authorized by the manufacturer at the customer's premises, for removal of defects under warranty are charged to the dealer. Excluded are all tools and supplies, possibly supplied by the manufacturer together with the machines. Damage occurred in transit or due to incorrect installation or maintenance can't be considered. Guarantee is not transferable and replacement of parts and appliance is at the final discretion of our company. The Manufacturer is responsible for the equipment in its original configuration and only for original spare parts replacement. The manufacturer declines all responsibility for improper use, for damages caused as a result of operations not covered in this manual or not authorized in advance by the manufacturer.

THE WARRANTY TERMINATES **IN CASE OF / • Damage caused by** transport "ex works" (EXW) and / or by handling, should this event occur, the customer must inform the retailer and the carrier (eg. via e-mail and / or website) and write down on the copies of the transport documents what It's happened. The technician authorized to install the appliance will evaluate the damage and decide if the installation can be carried out. The warranty also terminates in the presence of: • Damage caused by incorrect installation. / • Damage caused by parts worn due to improper use. / Damage caused by use of non-original spare parts. / • Damage caused by incorrect maintenance and/or lack of maintenance. / . Damage caused by failure to comply with the procedures described in this document.

**AUTHORISATION** / Authorisation refers to the permission to operate an activity intrinsic to the appliance. Authorisation is given to anyone who is responsible for the appliance (manufacturer, purchaser, signer, dealer and/ or location owner).

TECHNICAL DATA and IMAGES / The section is at the ending of this manual.



Every technical change has an effect on the operation or

safety of the appliance and must therefore be performed by technical personnel of the manufacturer or by technicians who are formally authorised by the same. Failure to do so exempts the manufacturer from any liability for for any possible resulting modifications or damage.

Upon arrival, check the integrity of the appliance and its components (e.g. power cord), prior to use. In the presence of faults do not start the appliance and contact the nearest service centre.

Read the instructions before acting.

Wear protective equipment suitable for the operations to be performed. As far as personal protective equipment is concerned, the European Community has issued Directives which the operators must comply with Noise  $\leq$  70 dB.

It is forbidden the installation of stand alone equipment WITHOUT anti-tip kit (ACCESSORY). TOP versions èxcluded.

Before making the connections check the technical data shown on the rating plate of the appliance and the technical data in this manual. It is strictly forbidden to tamper with or remove the plates and picto-grams applied to the equipment.

Disconnect all supplies, if present (e.g. water - gas electrical) upstream the appliance whenever you need to work in safe conditions.

Connect the appliance if present, in the sequence of the water, then to the gas network. Ensure there are no leaks then proceed with the connections to the mains.

The appliance is not designed to work in an explosive atmosphere and as such its installation and use is categorically prohibited in such environmen-

Position the entire structure. respecting the installation dimensions and characteristics indicated in the specific chapters of this manual.

The appliance is not intended 🖙 for rėcessed installation. / The appliance must be used in a well ventilated area. / The appliance must have free drainage 'inot hindered or impeded by foreiàn bodies).

The gas equipment must be installed beneath an extraction hood whose system must have specifications in compliance with the current regulations in the country of use.

Once the appliance is connected to the power and drain sources, it must remain static (fixed) in the place of use and maintenance. Incorrect connection may cause danger.

Use where appropriate flexible cable for connection to the mains electricity supply with characteristics not inferior to the type with insulation model H07RN-F. The supply voltage supported by the cable with the appliance working must not differ from the nominal voltage value ± 15% shown at the bottom of the technical data table.



The appliance must be included in an "Equipotential" ground discharge system.



Drainage of the appliance must be conveyed into the grey water discharge net-work in an open "glass" unsiphoned formation.



The appliance must only be used for the purposes indicated. Any other use must be dered "IMPROPER" and considered therefore the manufacturer declines all liability for any consequent damage to persons or property.



Particular safety prescriptions (obligation-prohibitions-danger) are detailed in the specific chapter concerning these issues.



Do not obstruct the heat extraction and/or dissipation openings.



Do not leave flammable objects or material near the appliance.







Disconnect supplies if pres-

ent (e.g. water - gas - electrical) upstream the appliance whenever you need to work in safe conditions.

Whenever it is necessary to operate inside the appliance (connections, commissioning, checking operations, etc.) prepare for the necessary operations removal of panels, elimination of electric-gas-power supply) in compliance with the safety conditions.

# **DUTIES AND QUALIFICA-**TIONS REQUIRED OF OPE-RATORS

Prohibition for the homogeneous operator to perform any type of operation (mainte-

nance and/or other) without having first read the entire documentation.





The information contained in this document is for the use of

the qualified technical operator who is authorised for: handling, installation and maintenance of the appliance in question.





The operating structions have been drawn up for the "Ge-

neric" operator (Operator with limited responsibilities and tasks). Person authorised and employed operate the appliance with guards active and capable of performing routine maintenance (cleaning the appliance).

The operators who use the appliance must be trained in all aspects concerning its functioning and safety features. They must therefore interact using appropriate methods and instruments, complying with required safety standards.

The "Generic" operator must operate on the appliance after the technician has completed installation (transportation, fixing electrical, water, gas and drain connections).

**WORK AREAS** AND HAZARDOUS ZONES /

To better define the scope of intervention and the relevant work zones, the following classification is provided:

- Dangerous zone: any zone within and/or in proximity to a machine in which the presence of an exposed person constitutes a risk in terms of the health and safety of such a person;
- Exposed person: any person that is found wholly or partly in a dangerous zone.

Maintain a minimum distance from the appliance when operating in such a way as to avoid endangering the safety of the operator in case of unexpected circumstances.

# The following are also danger zones /

 All the work areas within the appliance

- All the areas protected by appropriate safety and protection systems such as safety photocell photoelectric curtains, protective panels, interlocked doors, protective casing.
- All the zones within the control units, electrical cabinets and junction boxes.
- All the zones around the appliance in operation when the minimum safety distances are not being respected.

# **EQUIPMENT REQUIRED** FOR INSTALLATION /

The authorised technical operator, in order to perform the installation operations correctly, must respect the following requirements:

- 3 and 8 mm screwdriver
- Adjustable pipe wrench
- Gas use tools (hoses etc.)
- Electrician's scissors
- Water use tools (hoses etc.)
- 8 mm hex socket wrench
- Gas leak detector
- Tools for electric use (cables, terminal blocks etc.)

- 8 mm nut driver

- Complete installation set (ele, EN gas etc.)

In addition to the tools listed, an equipment lifting device is required. This equipment must comply with all the regulations relating to lifting equipment.

INDICATION ON RESIDUAL RISK / Even though the rules for "good manufacturing practice" and the provisions of Taw which regulate manufacturing and mar-keting of the product have been implemented, "residual risks" still remain which, due to the very nature of the appliance, it has not been possible to eliminate. These risks include:

RESIDUAL RISK **ELECTROCUTION /** This risks remains when intervening on live electrical and/or electronic devices.



RESIDUAL RISK OF BUR-NING / This risks remains when unintentionally coming into contact with materials at high temperatures.

RESIDUAL RISK BURNS DUE TO LEAKING OF MATERIAL / This risks

remains when unintentionally coming into contact with materials at high temperatures. Containers that are too full of liquids or solids that during warming change morphology (changing from a solid to a liquid), can, if used incorrectly, cause burns. During operations, the containers used must be placed on easily visible levels.



RESIDUAL RISK OF CRU-SHING LIMBS / This risk exists where there is acci-

dental contact between the parts during positioning, transportation, storage and assembly.

RESIDUAL RISK OF **EXPLOSIONS / This risk re**mains when:

- there is smell of gas in the room;
- appliance used in an atmosphe-

re containing substances which risk exploding;

 using food in closed containers (such as jars and cans), if they are not suitable for the purpose.



**RESIDUAL RISK OF FIRE/** This risk exists by flammable liquids / material flammable



### POSITIONING AND HANDLING



Before proceeding with the operations, see "General safety information".

### **OBLIGATIONS - PROHIBITIONS -ADVICE**



Upon receipt, open the machine packaging and ensure that the machine and accessories have

not been damaged during transportation. Where this is found to be the case. notify the carrier immediately and do not proceed with installation but contact the qualified and authorised personnel. The manufacturer is not liable for damage caused during transportation.

#### HANDLING SAFETY /



Failure to follow the instructions reported below could result in exposure to the risk of serious injury.



The operator authorised for the handling and installation operations of the appliance must pre-

pare, if necessary, a "safety plan" in order to ensure the safety of the persons involved in the operations. In addition, they must follow and strictly and scrupulously implement the laws and regulations relating to mobile sites.



Ensure that the lifting means adopted have capacity that is adequate for the loads to be lifted and are in a good state of maintenance.



Perform the handling operations using lifting means with a capacity appropriate to the weight of the appliance increased by 20%.



Follow the directions on the packaging and/or on the same appliance before handling.



Check the centre of gravity of the load before lifting the appliance.



Lift the appliance to a minimum height from the ground in order to ensure its handling.



Do not stand or pass under the appliance during lifting and handling.

# **HANDLING - TRANSPORTATION** / - see SECT. IMAGES - REF. a).



A).

The orientation of the packed appliance must be maintained according to the instructions given by the pictograms and lettering on the outer packaging (detail

1. Position the lifting means paying attention to the centre of gravity of the

load to be lifted (detail B-C).



- Lift the appliance enough to move it.
- 3. Place the appliance on the site chosen for final positioning.

**STORAGE** / The storage methods of the materials must include pallets, containers, conveyors, vehicles, tools and lifting devices that are suitable to prevent damage due to vibration, impact, abrasion, corrosion, temperature or other conditions that might arise. The parts stored should be periodically checked to detect possible deterioration.

#### DISPOSAL OF PACKAGING

Disposal of the packing materials is the responsibility of the recipient that should proceed in accordance with the laws in force in the country of installation of the appliance.

- Remove in sequence the upper and lower corner protectors:
- 2. Remove the protective material used for packaging;
- Lift the appliance as necessary and remove the pallet:
- 4. Place the appliance on the ground;
- 5. Remove the means used for lifting:
- 6. Clean the area of operations from all the material removed:



Having removed the packaging, there should not be any signs of tampering, dents or other anoma-

lies. Where evidence of these is found, immediately notify the customer service.

REMOVAL OF PROTECTIVE MA-TERIALS / The appliance is protected on the exterior surfaces with a covering of adhesive film which must be removed manually after positioning of the appliance. Carefully clean the appliance, externally and internally, manually removing all the material used to protect the parts.



Be careful not to damage stainless steel surfaces. No not use corrosive products, abrasive material or sharp tools.



Do not use pressurised direct water or steam cleaners jets for cleaning operations



Carefully read the indications contained on the labels of the products used. Wear protective equipment suitable for the operations to be performed (see the protection information shown on the package label).



Rinse the surfaces with tap water and dry them with an absorbent cloth or other non-abrasive material.

#### **CLEANING AT COMMISSIONING /**

Apply the cleaning liquid using normal spray over the entire surface of the cooking chamber and manually thoroughly clean the entire surface using a non-abrasive sponge.

Afterwards rinse the cooking chamber with drinking water.

Let the liquid containing detergent and/ or other impurities flow off into the drain hole.

Having successfully completed the operations described, carefully wipe the cooking chamber with a non-abrasive cloth. If necessary, repeat the operations described above for a new cleaning cycle.

Also clean with detergent and water the parts removed and clean them.

With the operations completed, place the parts removed in the appropriate housings of the various pieces of equipment.

# LEVELLING AND SECURING see SECTION IMAGES - REFE-RENCES b).

Position in the work place (see operation and environmental limit conditions permitted), previously made suitable, of the appliance.

The tasks of levelling and securing include: adjustment of the appliance as a

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER, ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED

single independent unit. Place a spirit level on the structure (detail D).

Adjust the levelling feet (detail E) according to the indications provided by the level.



Perfect levelling is achieved by adjusting level and feet on the width and depth of the appliance.

# "SERIES" ASSEMBLY / see SECT. IMAGES - REF. c).

In the models provided, remove the knobs and unscrew the screws for the fixing of the panel (detail F).



Flammable walls / The minimum distance of the appliance from the side walls must be 15 cm

and from the rear wall must be 20 cm. If it is lower, insulate the walls close to the appliance with fireproof and / or insulating treatments.

Place the equipments in order to make

their sides perfectly adhere (detail G). Carry out the appliance levelling as previously described (detail E).

To place the equipment adherent each other perfectly (part G). Level the equipment as described above (detail E). Insert the screws in their housings and lock the two structures with the locking nuts (part H1-H3). Replace the protective caps between the devices (part H2). Repeat, if necessary, the sequence of leveling and fixing operations for the remaining equipment.

#### INTRODUCTION OF TERMINAL (OPTIONAL)) see SECT. IMAGES

**REF.** c) / In order to introduce the terminal, position it and fix it with the equipped screws provided (detail L1).

Once the described operations have been carried out, position again the panels and knobs of the different appliances in the respective housings.



# POWER SUPPLY CONNECTIONS



Before proceeding with the operations, see "General safety information".



These operations must be performed by qualified and authorised operators, in accordance with the laws in force and using the appropriate materials described.



Generally, the appliance is delivered without electric mains supply cable, without pipes for connection to the water, drainage and gas networks.

#### **ELECTRICAL CONNECTION**

Electrical connection should be performed in compliance with the local regulations in force, only by authorised and competent personnel. In the first instance, examine

the data shown on the technical data table of this manual, on the serial plate and on the electrical diagram.



Connect the equipment to an overvoltage category III omnipolar device.

**EARTHING / It is essential to earth** the unit. To this purpose, it is necessary to connect to an efficient earthing system the terminals marked with the symbols placed on the line-receiving terminal box. The earthing system should com-

SPECIFIC WARNINGS / The electrical safety of this unit is assured only when it is correctly connected to an efficient earthing system as stated in the electrical local safety regulations in force; the Manufacturer declines any responsibility for

ply with the local law in force.

thing also makes the automatic intervention of the residual current device easier. Protection earthing involves not only the electrical system, but also all the other systems and metallic parts of the building, including piping, beams, heating system and

so on, so that the whole building turns out

to be under safety conditions, also in case

a lightning should hit the building.

the non-compliance with these safety regulations. It is necessary to verify this fundamental safety requisite and, in case of doubt, ask for an accurate testing of the system by professionally qualified personnel.The Manufacturer cannot be deemed responsible for any damages caused by the lack of unit earthing.



Never interrupt the earth wire (Yellow-Green).

#### CONNECTION TO THE DIFFE-RENT ELECTRIC DISTRIBUTION **NETWORKS / see SECT. IMAGES** - REF. d)



If necessary, remove the terminal box protection panel located on the back of the machine.

The equipment is delivered to work with the voltage indicated on the technical label attached on the appliance. Any other connection is to be considered improper and therefore dangerous.



It is mandatory to respect the connection provided by the manufacturer, visible on the connection label near the terminal board.



It is forbidden to modify the wiring inside the equipment

ELECTRICAL CONNECTION OF THE CABLE TO THE TERMINAL BOARD / Connect the power cable to the terminal board as described in: "Power supply connection" and indicated on the connection plate.. The diagram and the table (see Technical data) indicate the possible connections according to the mains voltage.

# CONNECTION TO "EQUIPOTEN-TIAL" SYSTEM - see SECT. IMAGES

- REF. e) / The protective earthing consists of a series of contrivances, which ensure the same earth potential in the electrical earths, thus preventing the same earths from being tensioned.

The earthing has the aim to ensure that the earths of the household appliances have the same potential of the earth. Ear-

Before proceeding with the operations, see "General safety info".



The appliance must be included in an "Equipotential" system, which efficiency must be tested, according to

the rules in force in the installation country.



The electrician preparing the general electrical system must guarantee a system in conformity with the regulations, for what concerns the direct and indirect contacts.



The electrician must connect all the different earths to the same potential, in order to achieve a good "Equipotential" earthing system in the area where the different appliances will be in-



For what concerns the connection of the appliance to the room Equipotential system, use an electrical yel-

low/green cable, suitable to the power of the devices installed.

The appliance plate "Equipotential" is usually on its panel, near the system used for the connection; carry out the connection after having recognized the same plate (see schematic drawing for the correct location).

Connect an edge of the earth electric cable (the cable must be characterized by the double colour yellow/green) to the system used for the appliance "Equipotential" connection (see schematic drawing Fig. 1).

Connect the opposite edge of the earth electrical cable to the system used for the "Equipotential" connection of the area where the appliance will be installed (Fig. 2).



#### GENERAL WARNINGS

Operators have a duty to familiarise themselves adequately, using this manual before performing any intervention, adopting the specific safety requirements to make every kind of human-computer interaction safe.

Any technical modification that affects the operation or safety of the machine must only be carried out by the technical personnel of the manufacturer or by technicians that are formally authorised by the manufacturer. Failure to do so exempts the manufacturer from any liability for for any possible resulting modifications or damage.

Even after appropriate familiarisation, upon the first use of the appliance, in any case simulate a number of test operations to save more rapidly the main functions of the appliance, e.g. start-up, shut-down, etc.

The appliance is provided already tested by the manufacturer and fitted with the type of gas and electrical supply specified on the rating plate applies.

FIRST COMMISSIONING START UP / Upon completion of the operations of positioning and connection to the power sources, perform a series of operations such as: 1. Cleaning away of the protective materials (oils, grease, silicones, etc.) inside and outside of the cooking chamber (see section 3 / Removal of protective materials).

2. General checks and controls such as: Check opening of switches & network gate valves (water, electricity, gas when applicable); Checking of drains; Checking and monitoring of the external fumes/vapour extraction; Checking

and monitoring of the protection panels (all the panels must be fitted correctly).

#### **DESCRIPTION OF STOP MODES**

Generally, in stoppage conditions caused by faults and emergencies, in the event of imminent danger, it is mandatory to close all the locking devices on the supply lines upstream the appliance (Water-Gas-Ele).

# STOPPAGE DUE TO FAULTY OPERATIONS

Safety component / STOP: In situations or circumstances which can be dangerous, a safety thermostat is triggered, automatically stopping heat generation. The production cycle is interrupted until the cause of the fault is resolved. **RESTARTING**: After the problem that triggered the safety thermostat is resolved, the authorised technician can restart the appliance by means of the specific controls.

# COMMISSIONING FOR INITIAL START-UP

When commissioning the appliance and when starting it after a prolonged stop, it must be tho-

roughly cleaned to eliminate all residue of extraneous material (see chapter 3 / Removal of protective materials).

#### DAILY ACTIVATION

- 1. Check the cleanliness and hygiene of the appliance.
- Make sure that the room exhaust system works properly.
- 3. When necessary, plug the appliance into the appropriate socket.
- Open the network locks upstream the appliance (Gas - Water -Electric).
- Make sure that the water drain (if present) is not clogged.

Proceed with the operations described in "Starting production".



In order to free air in the pipes, open the network lock, turn the knob of the appliance while pressing it in the piezoelectric position, place a flame (match or the likes) on the pilot light and wait for it to ignite.

**DAILY DECOMMISSIONG** / Upon completion of the operations described above:

- 1. Close the network locks upstream the appliance (e.g. Water Gas Electric).
- 2. Make sure that the drain cocks (if present) are "Closed".
- 3. Check the cleanliness and hygiene of the appliance.

#### PROLONGED DECOMMISSIONING

/ In case of prolonged inactivity, perform all the procedures described for daily putting out of service and protect the parts most exposed to oxidation as indicated below:

1. Use lukewarm water with a bit of

soap to clean the parts;

- 2. Rinse the parts thoroughly, without use pressurised direct water or steam cleaners jets for cleaning operations;
- 3. Dry the surfaces carefully using non-abrasive material;
- 4. Wipe a non-abrasive cloth lightly soaked with food-safe Vaseline oil over all of the stainless steel surfaces in order to create a protective film.

For appliances with d oors and rubber gaskets, leave the door slightly ajar to let it air out and spread protective talcum powder on the rubber gasket surfaces.

# Periodically air the appliances and rooms.



To make sure that the appliance is in perfect technical conditions, arrange for service at least once

a year by an authorised technician of the assistance service.



## REPLACING COMPONENTS



# PLEASE CALL TECHNICAL AUTHORIZED SERVICE AND READ THE TECHNICAL MANUAL



# INSTRUCTIONS FOR USE

Green indicator light;
 Red indicator light;

5. Hotplate;

6. Cooking Compartment (Oven).

# LOCATION OF MAIN COMPONENTS - see SECT. IMAGES - REF. g)

The layout of the figures is purely indicative and can undergo variations.

- 1. Hotplate switch-on and temperature control knob;
- 2. Oven switch-on and temperature control knob:

KNOBS, GATE VALVES, BUTTONS AND INDICATOR LIGHT MODES AND FUNCTIONS / - see SECT. IMAGES - REF. g)

The layout of the keys in the figures is

purely indicative and can be subject to variations.

SWITCH-ON KNOB. Performs one function:

1. Switches electricity inside circuit on and off.

THERMOSTAT KNOB. It performs three different functions:

Adjusting cooking temperature.

2. Heating phase Start/Stop. / 3. Grill function

GREEN INDICATOR LIGHT: The 3) Indicator is subordinated to use of the switch-on knob.

Lighting of the indicator signals the operating phase.

4) RED INDICATOR LIGHT: When present, the indicator is subordinated to use of the thermostat knob. Lighting of the indicator signals the heating phase.

#### STARTING PRODUCTION



Before proceeding with the operations, see chapters 2 and 5



Before proceeding with these operations, see "Daily activation".



The products must be placed in the specific cooking containers and positioned correctly on the

hotplates and/or in the cooking compartment of the oven.



Use pots with diameter smaller than cooking plate.

# SWITCHING ON/OFF / see SECT. IMAGES - REF. h)

Do as follows to begin the cooking process: 1. Turn the knob to adjust the cooking temperature (Fig. 1 HÓTPLATES -Fig. 2 OVEN).

2. When the green light is on it means operation is in progress (Fig. 1-2 A) When the yellow light is on it means heating is in progress (Fig. 2 B).

3. Turn the knob to "Zero" (Fig. 1-2 C) to stop heat generation.



The oven cooking temperature is set by turning the thermostat knob. (See indications on knob).



Hotplate heating speed is set by turning the knob (Position 0-6). Position 6 is the maximum heating speed.

Before using the oven for the first time, it is advisable to pre-heat it at the highest setting for 30-40 minutes with the door closed. This burns any oily residue that could release unpleasant odours.

LOADING / UNLOADING THE PRO-DUCT / see SECT. IMAGES - REF. i) When cooking has finished, switch the appliance off. Turn the switch-on knob to "Zero" (Fig. 9B).



The amount of the product inside the container must not exceed 3/4 its capacity.

1. Place the container in the middle of the hotplate (Fig. 3).

When cooking is over, remove the container from the hotplate and put it in a place prepared beforehand.

Open the oven door to load it. Put the container in the cooking compartment in the middle of the grid (Fig. Close the oven door.



When opening the doors, step to the side of the appliance to avoid direct heat.

When the product is cooked, unload it and put it in a place prepared beforehand.

After the product has been unloaded, load it once again or else perform the operations described in "Deactivation".

**DEACTIVATION** / At the end of the work cycle, turn the knobs on the appliance to "Zero".

The appliance must be cleaned regularly and every incrustation or food deposit removed. See chapter: "Cleaning instructions".

If present, the indicator lights must be off at the end of the work cycle.

Check the cleanliness and hygiene of the appliance. See "Maintenance".

Close the network locks upstream the appliance (e.g. Gas - Water - Electric).



# **OBLIGATIONS - PROHIBITIONS -**ADVICE



Before proceeding with the operations, see chapters 2 and 5



If the appliance is connected to a flue, the exhaust pipe must be cleaned according to that foreseen by specific regulatory provisions of the country (contact your installer for information).

The appliance is used to prepare food products. Keep the appliance and the surrounding area constantly clean. Failure to keep the appliance in ideal hygienic conditions could cause it to deteriorate quickly and create dangerous situations.

Filth deposit built up near heat sources can burn during normal use of the appliance and create dangerous situations. The appliance must be cleaned regularly and every incrustation or food deposit removed.

The chemical effect of salt and/or vinegar or other acid substances can in the long run cause the inside of the hob to corrode during cooking. At the end of the cooking cycle of such substances, the appliance must be

washed thoroughly with detergent, abundantly rinsed and carefully dried.

MAINTENANCE

Be careful not to damage stainless steel surfaces. No not use corrosive products, abrasive material or sharp tools.

The liquid detergent for cleaning the hob must have certain chemical features: pH greater than 12, without chlorides/ammonia, viscosity and density similar to water. Use non-aggressive products for cleaning the inside and outside of the appliance (use detergents on the market for cleaning steel, glass and enamel).

Carefully read the indications carried on the labels of the products used. Wear protective equipment suitable for the operations to be performed (see the protective equipment car-

ried on the package label).

In the event of prolonged inactivity, besides disconnecting the supply lines, you must thoroughly clean all the inside and outside parts of the appliance.

Wait for the temperature of the appliance and all its parts to cool off, so that the operator is not burnt.

#### DAILY HOTPLATE CLEANING





Remove everything from the cooking compartment. Use a standard sprayer to apply the liquid detergent on the whole surface



(cooking compartment, lid and all exposed surfaces) and using a non-abrasive sponge, clean the entire appliance thoroughly by hand.

When finished, rinse the cooking compartment abundantly with tap water (do not use pressurised direct water or steam cleaners jets for cleaning operations).

When these operations have been performed successfully, dry the cooking compartment carefully using a nonabrasive cloth. If necessary, repeat the operations described above for a new cleaning cycle.



Applicable models only - Check the filling condition of the collection drawer frequently to pre-

vent overflowing

Empty, if necessary: pull the draw out of its seat, rinse it and dry it. Put it back in its seat



 
Humidity residue deposited on the hotplate/s can damage the appliance and cause the hotplate/s

to wear quickly.

In order to eliminate all humidity, once routine cleaning has been finished, turn the appliance on and run it at minimum for approximately 2/3' and then turn it back off (see procedure part 3 Instructions for use: Switching On/Off).

### **DAILY OVEN CLEANING**





Heat up the cooking compartment for about 20'. Open the door to let the cooking compartment cool off for a few seconds.

Use a standard sprayer to apply the liquid

detergent on the whole surface of the cooking compartment and, using a nonabrasive sponge, clean the entire surface thoroughly by hand.

When finished, rinse the cooking compartment abundantly with tap water (do not use pressurised direct water or steam cleaners jets for cleaning operations).

When these operations have been performed successfully, dry the cooking compartment carefully using a nonabrasive cloth.

If necessary, repeat the operations described above for a new cleaning cycle. Clean the parts previously removed from the cooking compartment (grills, trays and other removable objects) with detergent and tap water, rinse them carefully and dry them before putting them back. In order to eliminate all humidity, once routine cleaning has been finished, turn the appliance on and run it at minimum for approximately 20' and then turn it back off (see chap. Instructions for use / Switching On/Off).

## **CLEANING FOR PROLONGED** DEACTIVATION /

To conclude the operations see chap. 5 / Operations for commissioning / Prolonged decommissioning

Air out the appliances and rooms regularly.

# SUMMARISED TABLE / **OPERATION - FREQUENCY**



Before proceeding with the operations, see chap.2 "Duties and qualifications"



Should a problem occur, the generic operator performs the first search and, if qualified, elimina-

tes the cause of the problem and restores the appliance correctly.

If the problem cannot be resolved, turn the appliance off, di-

sconnect it from the electrical mains and shut all the supply valves. Then contact authorized customer service.

The authorized maintenance technician intervenes when the generic operator was not able to pinpoint the cause of the problem, or whenever restoration of correct ope-

ration of the appliance entails executing operations for which the generic operator is not qualified.



If the power cable is damaged, contact the authorised technical assistance service to have it replaced.

NEW! REMOVABLE BOTTOM / VD. SECT. ILL - REF. f)

In the models provided (free cupboard bottom), it is possible to remove the lower surface for installation and maintenance operations (eg inspections, connections, cleaning etc). To remove the bottom, unscrew and remove it (Part A). To reposition the bottom, insert and screw again (Part B).



In case of doors, need to disassembled before (hinges and fixing).

OPERATION		FREQUENCY
	Cleaning parts in contact with foodstuff / Cleaning hotplates	Daily
	3Clean drawer (in applicable models)	When necessary
	Cleaning at commissioning	Upon arrival after installation
	Cleaning flue / Checking ther- mostat and microswitch	Upon arrival after installation - Yearly
	Checking safety valve	Upon arrival after installation - Every 6 months

#### TROUBLESHOOTING

Whenever the appliance does not work properly, try to solve the less serious problems using this table.

FAULT	POSSIBLE CAUSE	INTERVENTION
The appliance does not turn on.	<ul> <li>The master switch is not connected.</li> <li>The residual current device or circuit breaker has tripped.</li> </ul>	switch.  • Call technical authorized
The cooking compartment is stained.	<ul><li> Quality of the water.</li><li> Ineffective detergent.</li><li> Insufficient rinsing.</li></ul>	<ul> <li>Filter the water (Call technical authorized service)</li> <li>Use the recommended detergent.</li> <li>Rinse once again.</li> </ul>
The light indicators do not turn on.	<ul> <li>The master switch is not connected.</li> <li>The residual current device or circuit breaker has tripped.</li> </ul>	switch.  • Call technical authorized

B

If the problem cannot be resolved, turn the appliance off, disconnect it from the electrical mains and shut all the supply valves. Then contact authorized customer service.



### **DEACTIVATION AND** SCRAPPING OF APPLIANCE

Obligation of disposing of materials using the legislative procedure in force in the country where the appliance is scrapped

In compliance with Directives (see n. 0.1 Section), relating to the reduction of use of hazardous substances in electrical and electronic equipment, as well as waste disposal. The symbol of the barred waste bin carried on the appliance or its packaging indicates that the product at the end of its useful life it must be disposed of separately from other waste.

Differentiated waste collection of this appliance at the end of its life is organised and implemented by the manufacturer. The user who wishes to get rid of this appliance must contact the manufacturer and follow the instructions received to separately dispose of the appliance at the end of its life. An appropriate collection and dispatching of exhausted appliances to environmentally compatible recycling, treatment and disposal plants helps to prevent damaging effects on health and environment and also guarantees that the component parts of exhausted appliances are effectively recycled or reused. Holders of exhausted appliances who dispose of them illegally will be prosecuted. Specialised personnel is in charge of deactivation and scrapping of the appliance.

The decommissioning and dismantling of the appliance must be carried out by qualified personnel, either mechanical or electrical, that must wear appropriate personal protective equipment such as protective clothing appropriate to the operations to be performed, protective gloves, safety shoes, head gear and goggles.

Before commencing dismantling of the appliance, ensure around the appliance a space that is large enough and arranged in such a way as to allow all movements without risk.

The following are necessary:

- Disconnect the power supply.
- Disconnect the appliance from the
- Remove the electrical cables exiting the appliance.
- Close the water inlet tap (mains valve) from the mains supply.
- Disconnect and remove the pipes from the appliance water system.
- Disconnect and remove the grey water discharge pipe.

After this operation, area around the appliance may form and therefore, before continuing with operations, dry these wet areas.

After restoring the operational area as described:

- Remove the protective panels.
- · Disassemble the appliance in its main parts.
- Separate the parts of the appliance according to their nature (e.g. metals, electrical parts etc.) and deliver them to recycling centres.

### WASTE DISPOSAL

During operation and maintenance, do not disperse pollutants (oils, grease, etc.) into the environment and perform differentiated waste disposal depending on the composition of the different materials and in compliance with relevant laws in force.

Illegal waste disposal will be prosecuted by laws in force in the territory where the violation has been ascertained.