

MOD : WR-LV40-PM

Production code : XDLM C400PM



WR-LV40-PM

Floor-Standing Hand Wash Basin (2 waters)



EN

Installation Guide



FR

Guide d'Installation



NL

Installatiehandleiding



ES

Guía de Instalación



IT

 
 
Guida all'Installazione



DE

Installationsanleitung

WR-LV40-PM

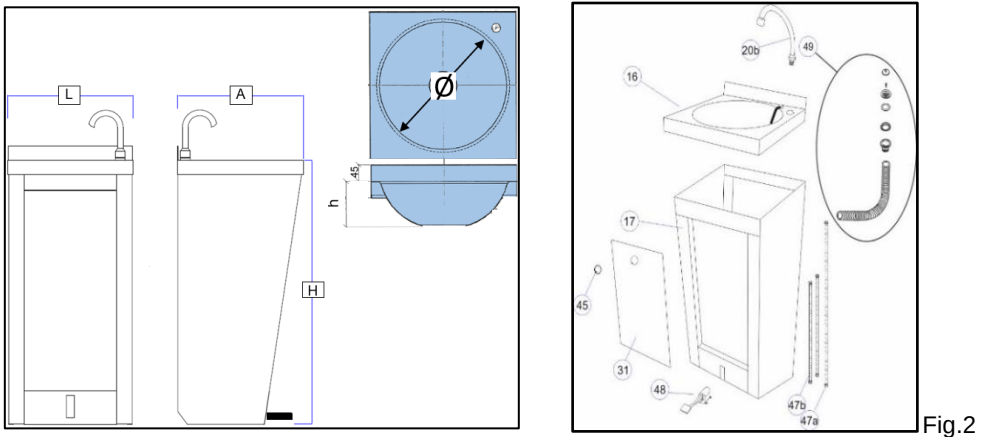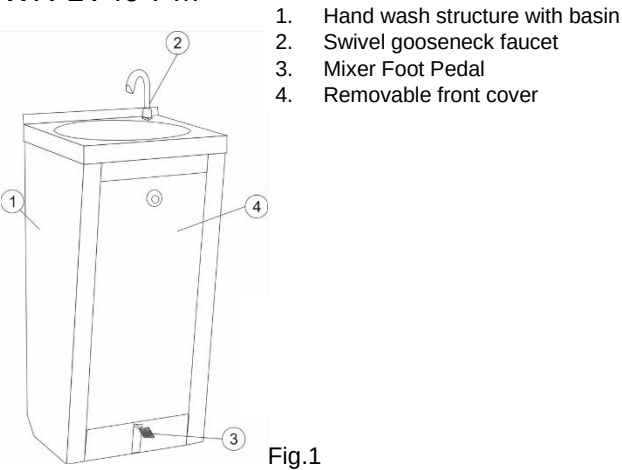

		Dimensions (mm)						
		Hand Wash			Basin			
MOD.	KG	L	W	H	Ø	l	w	h
WR-LV40-PM	10	400	400	840	350	-	-	150

Table 1

We reserve the right to change specifications without notice for the purpose of product improvement.



REMARK!

Whenever you need to order a component, you must provide:

- ✓ Model
- ✓ Serial Nr..
- ✓ Spare Part nr.

Packing Contents

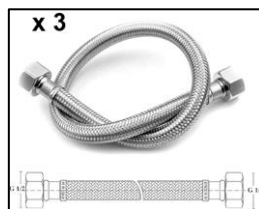 
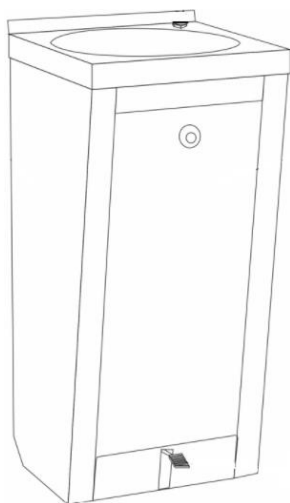 


Fig. 3

Recommended Tools

1	2	3	4	5	6

Fig.4

TABLE OF CONTENTS

1. INTRODUCTION

1.1. Symbols & Marks

1.2. Purpose of use

2. GENERAL SAFETY INFORMATION

3. INSTALLATION

4. CLEANING

5. MAINTENANCE AND ANOMALIES

6. WARRANTY AND LIABILITY

7. RECYCLING

1. INTRODUCTION



Read these instructions carefully before installing and use this product, even if you feel that you are familiar with this type of installations. Keep the installation guide in a safety place for future reference, and in the case of passing on or selling the product to third parties, these instructions must be delivered together with it.

For your convenience, register the model and serial number (located on the product identification plate). These 2 numbers should always be displayed when you have questions about the product or need assistance/maintenance.

This product has been manufactured by qualified people, using high quality materials granting that you have acquired a great product!!!

1.1. Symbols & Marks

In this manual, and on labels placed on the product, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions must be followed very carefully to avoid any risk of accident, personal injury or property damage.



WARNING! This symbol highlight risks that are likely to cause injury or could result in death.



CAUTION! This symbol highlights a potentially hazardous situation that must be avoided. Failure to do so may result in minor to moderate injury.



REMARK! This symbol highlights important recommendations and information for the effective use of the device and minimizing potential failures.

1.2. Purpose of use



CAUTION!

The hand wash basin is solely for the use of washing hands, arms and the face. For service catering, these appliances are intended to be installed in places such as:

- ✓ kitchens of hotels and restaurants;
- ✓ canteens, schools and hospitals;
- ✓ exhibitions, offices and other work environments (e.g.: farms);

Operating the appliance for any other purpose shall be deemed a misuse of the device. The user shall be solely liable for improper use of the device.

2. GENERAL SAFETY INSTRUCTIONS

Follow the below instructions to ensure a safe installation:

- Before installing the equipment, check whether there is any visible damage on the outside of the product and if yes contact the seller/distributor.
- The product is protected with a plastic film surrounding its structure. Make sure that you remove it before start installing it.
- DO NOT install this product on unlevel or unstable surfaces.
- Shut down the water supply before installation, maintenance, or removal.
- ALWAYS ensure all components are clean, intact, and securely tightened before use. Otherwise clean them.
- This installation requires basic mechanical skills.
- Proper installation is the responsibility of the installer.
- Product failure due to improper installation is not covered under the warranty.
- ALWAYS wear personal protective equipment (PPE) suitable for your task.
- Use ANSI-approved eye and ear protection if installing this product with a power drill.
- Keep this installation guide

3. INSTALLATION

Before starting installing the product, read and make sure that you understand all the installations steps.

Installation and maintenance should be performed by a qualified technician according to the instructions provided and in accordance with legal requirements of each country. A wrong installation can cause irreparable damage to the components. Complaints due to wrong installation are not covered by warranty.

STEP 1

Ensure that the floor where the product will be installed is level and stable.



WARNING

Even being a floor-standing hand wash basin, it must be fixed to the wall to prevent it from falling and causing property damage or personal injury.



REMARK!

Consider the position of the water supply and the wastewater gear before mark the holes position on the wall.

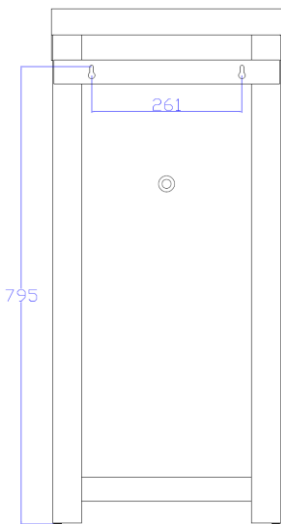 


Fig.5

Before assembling the accessories, mark and drill the superior holes on the wall to fix the product. **These 2 fixing points are enough to ensure that the product does not move or tip over.**

- Correctly measure the distance between those holes and the height of these to the floor and mark it on the wall (Fig.5)
- Drill the holes place the wall plugs, and point the screws already with the nuts on the wall.
- Don't fix it to the wall before assembling the components,
- The front cover is removable for having access to the internal part of the product when it is fixed to the wall.

STEP 2

Components Assembling

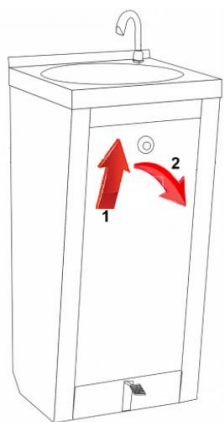 


Fig. 7

- Remove the front cover to access the mixer pedal that is already mounted on the structure.

Note: At this stage you can access from the rear of the product, but is easier if you connect the hoses from the front.

- To remove it, place your finger in the upper hole and pull it vertically (1-up) and then pull it out (2) as shown in Fig. 7.

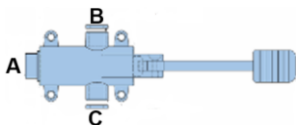 


Fig. 8

- Connect the longest hose in position "A" of the mixer foot pedal (No. 3), fixing it through the BSP nut $\frac{1}{2}$ " existing at the hose end. The other end of the hose shall be connected to the entrance of the tap, when it is assembled.
- The remaining two hoses should be connected to connect to ends (B) and (C) using the BSP nuts $\frac{1}{2}$ " Once the basin is properly fixed to the wall, the other ends of these hoses have to be attached with the BSP nuts $\frac{1}{2}$ " to the premises hot and cold-water inlets respectively.



Fig.9

- Mount the drain valve set at the basin, following the assembly sequence, printed in the accessories bag (Fig.8). Make sure they are well sealed to avoid possible future leaks.
- Assemble the Swivel gooseneck faucet (No.2)
- Connect the end of the hose from the position "A" to the water entrance of the faucet.

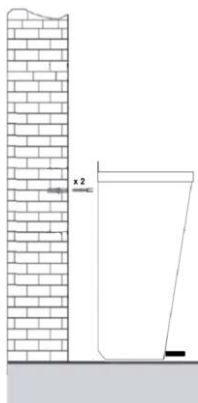 


Fig.10

- Fix the product to the wall. It is essential to confirm that it is level and well! Secure.
- Complete supply and waste (siphon) water connections to the existing pipe system. Make sure it is well sealed to avoid possible future leaks.

4. CLEANING & DESCALING



CAUTION!

NEVER use abrasive products, solvents or acids.

- Clean the externals of the unit as required; using a damp cloth and an appropriate cleaning product.
- Clean the faucet also with a detergent appropriate to clean stainless-steel and then rinse and wipe off with a dry soft cloth.



REMARK!

In the case of having limestone stains, simply mix baking soda and water into a paste and spread it over the sink. Baking soda is a great product at removing stains of water deposits, food and grease.

5. MAINTENANCE AND ANOMALIES

Carry out a periodic check of the equipment to ensure greater durability of the components. This must be done by a qualified technician.

- Installation and repair interventions must strictly comply with current national and local safety regulations.
- Any technical interventions as well as assembly and maintenance must only be carried out by a qualified technician. The manufacturer is not responsible for damages resulting from repairs and other interventions carried out by unqualified people. Use only spare parts of origin.

Possible faults and solutions:

Failure	Possible Causes	Action to take
Water leakage at the junctions of hoses with other components.	O-rings are worn out or loose.	Replace the O-rings
Water leakage from the hoses.	Hoses with tiny cracks or holes	Replace the hoses
Water leakage at the faucet.	Faucet internal O-rings are worn or loose	Contact a plumber to repair or replace the faucet
There is no water coming out from the faucet.	The water supply circuit is closed.	Check the circuit tap and if closed, open it. Then check if there is water in the basin hose inlets. If there is water in the hose's inlets and still there is no water coming out from the faucet, contact a plumber.
	The pedal mixer is defective	Contact a plumber to repair or replace the parts

Manufacturer recommends the use of original parts.

6. WARRANTY AND LIABILITY

The warranty is valid for 1 year from the date of purchase and covers defects of origin, whether material or manufacturing.

The warranty is limited to the replacement of faulty parts or products and excludes any consequential loss or expense incurred by the buyer.

Manufacturer is not liable for any damages or faults caused by:

- Defects which arise from faulty installation, inadequate maintenance, incorrect use or fair wear and tear are not covered by the guarantee;
- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts;
- We recommend to use original parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

7. RECYCLING

Do not dispose the packaging, protective materials and this product in household waste.

Follow the EU and your country rules and legislation, and dispose them in a duly authorized collection/recycling centre.

The manufacturer declines every responsibility on any print and/or transcription mistake contained in this instruction manual.

Any time and without notice, the manufacturer can change features and data of this document with the proposal of keeping on increase the quality of its products and, therefore, this manual cannot be considered as a contract with respect to third parties.