

MOD : WR-LV41-PW

Production code : XDLM C400 WPAE



WR-LV41-PW

Mobile and autonomous hand wash basin



EN

Installation Guide & User Manual



FR

Guide d'Installation & Manuel d'Utilisation



NL

Installatiehandleiding & gebruikershandleiding



ES

Guía de Instalación & Manual del Usuario



IT

Guida all'installazione & Manuale Utente



DE

Installationsanleitung & Benutzerhandbuch

WR-LV40-PM

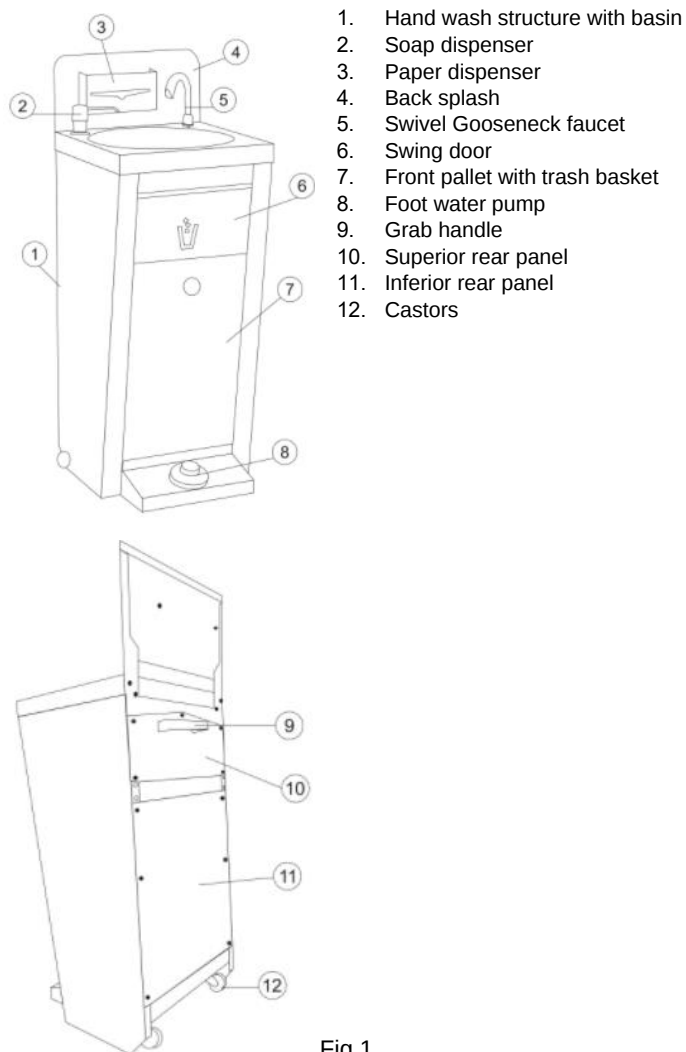


Fig.1

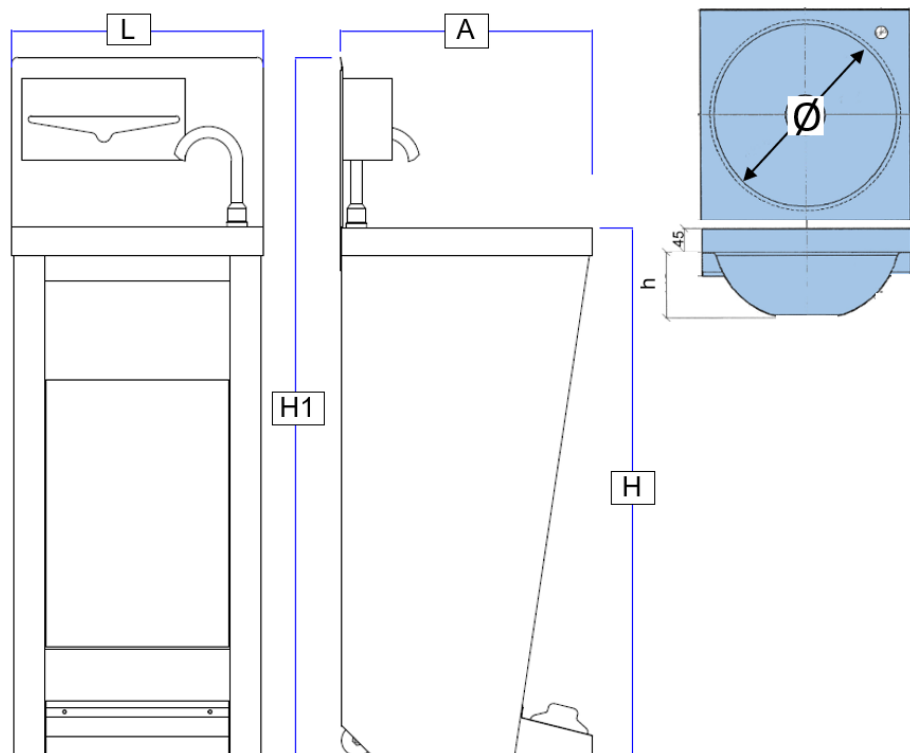


Fig.2

		Dimensions (mm)						
		Hand Wash			Basin			
MOD.	KG	L	W	H	Ø	l	w	h
WR-LV41-PW	16	400	400	840	350	-	-	150

Table 1

We reserve the right to change specifications without notice for the purpose of product improvement.

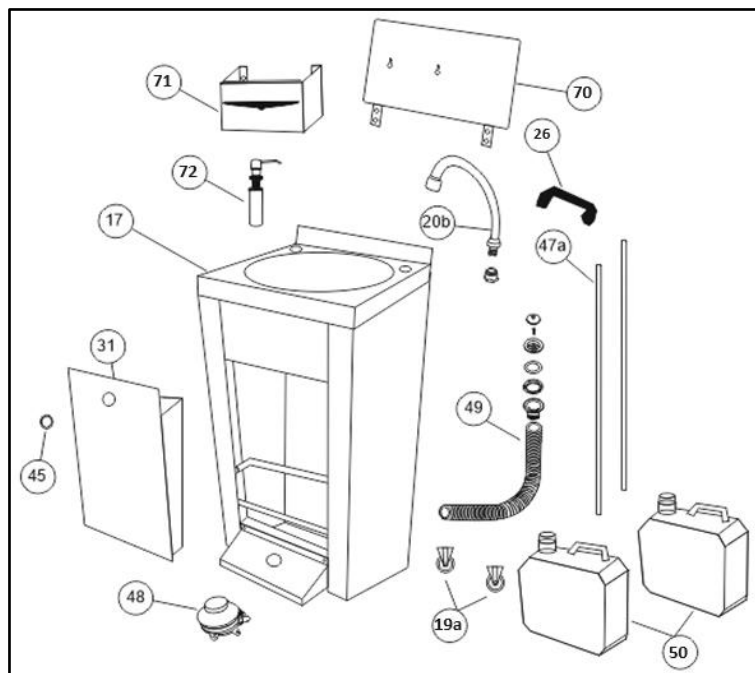


Fig. 3



REMARK!

Whenever you need to order a component, you must provide:

- ✓ Model
- ✓ Serial Nr..
- ✓ Spare Part nr.

Packing Contents

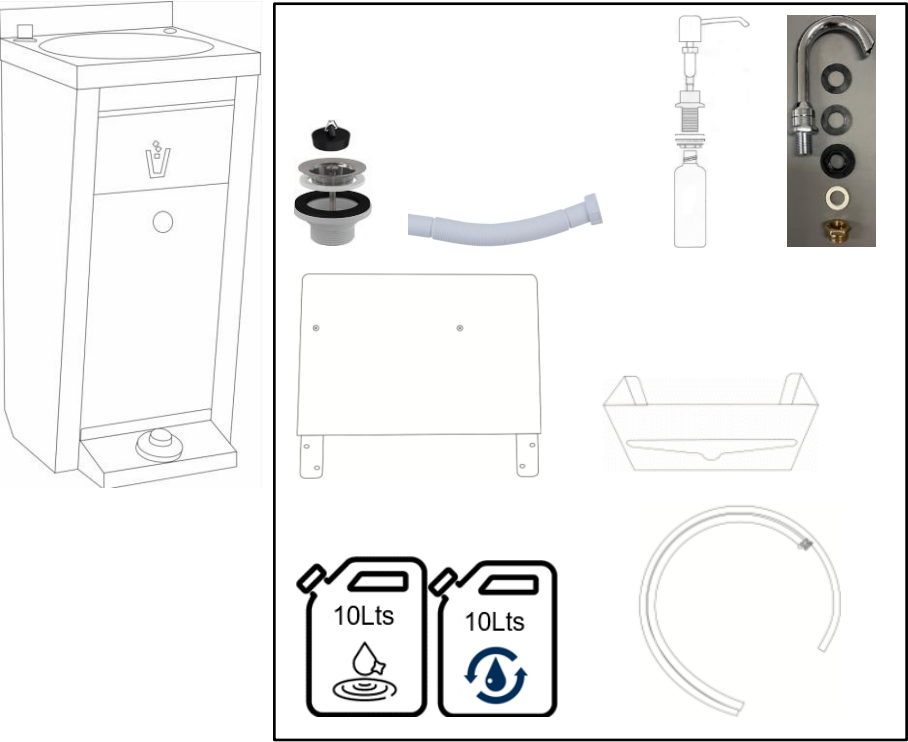


Fig. 4

Please notify the seller or distributor on the day of receipt if anything is missing or damaged.

Recommended Tools

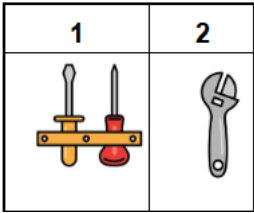


Fig.5

Components Assembly

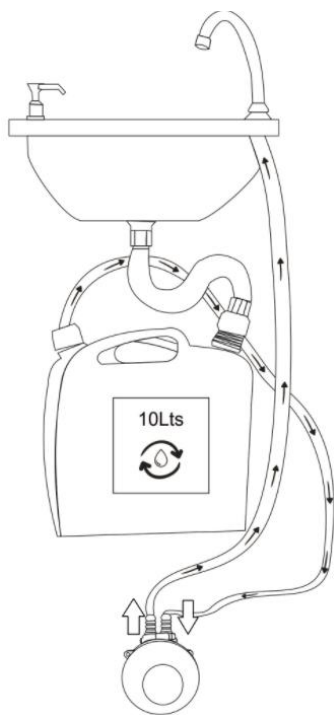


Fig.6

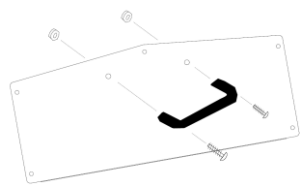


Fig.7

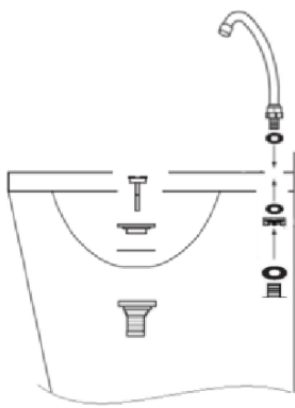


Fig.8

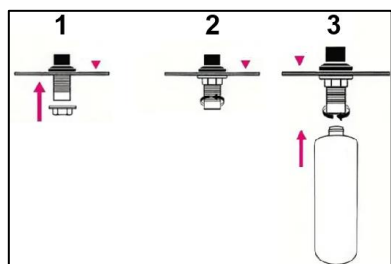


Fig.9

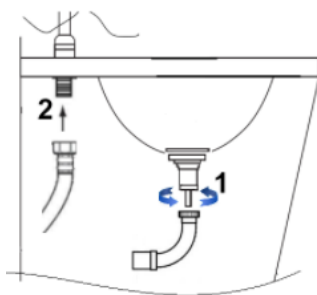


Fig.10

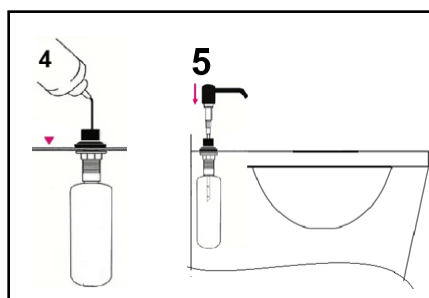


Fig.11

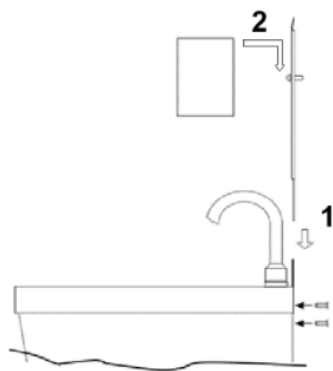


Fig.12

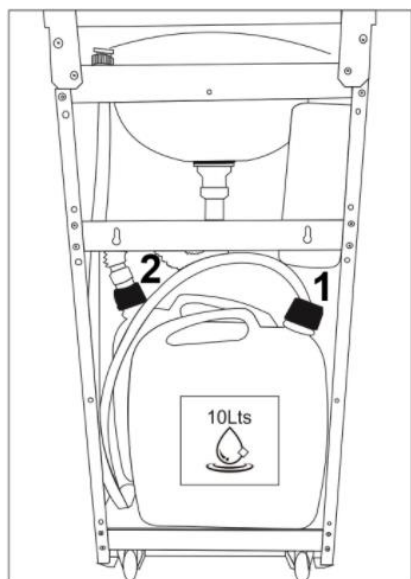


Fig.13

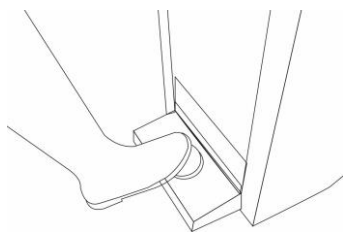


Fig 14

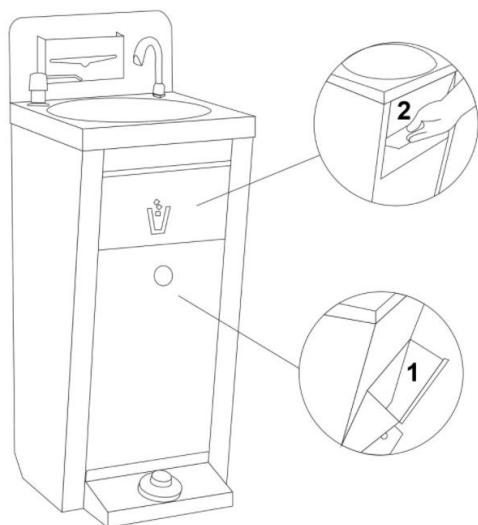


Fig 15

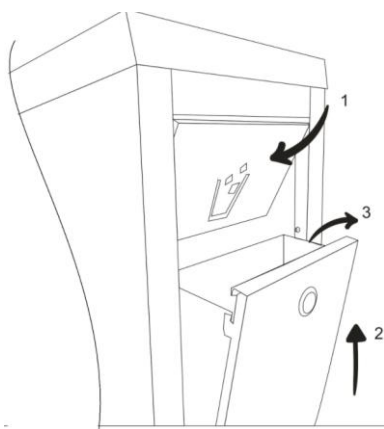


Fig.16

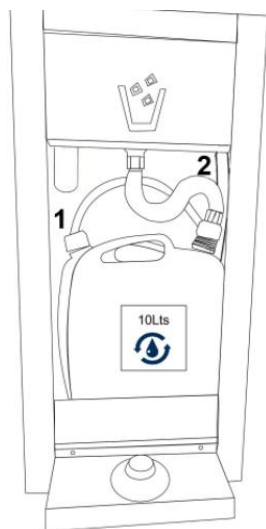


Fig.17

EN

TABLE OF CONTENTS

- 1. INTRODUCTION**
 - 1.1. Symbols & Marks
 - 1.2. Purpose of use
- 2. GENERAL SAFETY INFORMATION**
- 3. INSTALLATION & USE**
- 4. CLEANING**
- 5. MAINTENANCE AND ANOMALIES**
- 6. WARRANTY AND LIABILITY**
- 7. RECYCLING**

1. INTRODUCTION



Read these instructions carefully before installing and use this product, even if you feel that you are familiar with this type of installations. Keep the installation guide in a safety place for future reference, and in the case of passing on or selling the product to third parties, these instructions must be delivered together with it.

For your convenience, register the model and serial number (located on the product identification plate). These 2 numbers should always be displayed when you have questions about the product or need assistance/maintenance.

This product has been manufactured by qualified people, using high quality materials granting that you have acquired a great product!!!

1.1. Symbols & Marks

In this manual, and on labels placed on the product, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions must be followed very carefully to avoid any risk of accident, personal injury or property damage.



WARNING! This symbol highlight risks that are likely to cause injury or could result in death.



CAUTION! This symbol highlights a potentially hazardous situation that must be avoided. Failure to do so may result in minor to moderate injury.



REMARK! This symbol highlights important recommendations and information for the effective use of the device and minimizing potential failures.

1.2. Purpose of use



CAUTION!

The hand wash basin is solely for the use of washing hands, arms and the face. This product is intended for use in external and/or internal locations and when there is no water supply nearby.

Operating the appliance for any other purpose shall be deemed a misuse of the device. The user shall be solely liable for improper use of the device.

2. GENERAL SAFETY INSTRUCTIONS

Follow the below instructions to ensure a correct assembly and operation of this product

- Before installing the equipment, check whether there is any visible damage on the outside of the product and if yes contact the seller/distributor.
- The product is protected with a plastic film surrounding its structure. Make sure that you remove it before start installing it.
- DO NOT install this product on unlevel or unstable surfaces and ensure that the surface is capable of safely supporting the unit weight when fully laden with water.
- Children should be supervised while using the mobile hand wash basin.
- ALWAYS ensure all components are clean, intact, and securely tightened before use. Otherwise clean them.
- Move the product always with the clean water and waste water containers are empty. Tilt the product back slightly for the rear and use the castor to move it on a flat surface.
- This portable hand wash is only suitable for use where there is no risk for the unit to be adversely affected by its surrounding environment.
- The assembly of the components may require basic mechanical skills.
- Proper assembly is the responsibility of the installer.
- Product failure due to improper installation is not covered under the warranty.
- ALWAYS wear personal protective equipment (PPE) suitable for your task.
- Keep this Installation & Instruction Manual for future reference.

3. INSTALLATION & USE

Before starting installing the product, read and make sure that you understand all the installations steps.

Installation and maintenance should be performed by a qualified technician according to the instructions provided and in accordance with legal requirements of each country.

A wrong assembly can cause irreparable damage to the components. Complaints caused by improper assembly are not covered by warranty.



WARNING

Move the product always with the clean water and waste water containers empty. Tilt the product back slightly for the rear and use the castor to move it on a flat surface.





REMARK!

The hand washer basin is delivered with the pump connections made by the manufacturer and as per the diagram shown in Fig.6.

All other components must be assembled by a technician with basic mechanical and plumbing skills.

Do not be worried if water is present in the tanks or pipes of the unit, this is normal and part of quality control procedures.

Ensure that the floor where the product will be installed is level and stable.

STEP 1

- Remove the superior rear panel (Nº.10) by loosening the screws and also the front panel (Nº.7) as shown in Fig.16. This will allow you to access all accessories sent inside the product as well as their assembly.
- Once the front panel has been removed:
 - ✓ take out the accessories box;
 - ✓ remove the suction hose from the clean water tank without removing the screw cap;
 - ✓ remove the flexible tube/siphon from the wastewater tank, loosening the screw cap. Do not disconnect the flexible tube from the screw cap.
 - ✓ take out from the unit both containers.
- Assemble the plastic handle into the superior rear panel with the 2 screws and nuts pre-assembled in the handle (Fig 7).
- Assemble the Swivel gooseneck faucet, place the seal into the threaded inlet of the swivel faucet and thread the Male/Female Brass Reducer 3/4" x 1/2". After that, assemble also the draining valve as per Fig.8.
- Assemble the soap bottle (Fig 9). Do not insert the pump head into the bottle yet.
- Insert the sealant (sent inside the plastic bag along with the drain valve) into the siphon tube and connect it to the drain valve using the siphon nut (Fig.10-1).
- Tighten the end of the longer hose to the connector of the swivel faucet (Fig.10-2)
- Pour liquid soap in the bottle, insert the "flat end" of pump tube/straw into the pump and insert the dispenser set into the bottle (Fig.11).
- Slide the backsplash onto the main body. Once the backsplash is in the correct position, the 4 screw holes are aligned. Fasten the back-splash with the 4 screws pre-assembled in the holes (Fig.12-1)
- Hang the paper dispenser in the screws pre-placed in the back-splash and tighten them, if necessary (Fig.12-2)

STEP 2



REMARK!

Water containers **SHOULD BE** placed in the position shown in Fig.13 (back view) or Fig. 17 (front view), to ensure a greater efficiency and durability of the product.

Before refix the superior rear door, its recommended to operate the foot pump and pass water through the product.

- Fill the clean water container and insert the suction hose into it and through the existing hole of the screw cap. Ensure that the hose tip is placed at the bottom of the container to remove as much water as possible. Put the tank inside the product, placing it against the back and so that the neck is under the soap bottle of the container (the correct position is shown in the Fig.13-1 and Fig.17-1).
- Place the waste water tank against the dirty water container (near to the front panel) and so the neck facing the side where the tap is positioned as shown in the Fig.13-2 and Fig.17-2. Re-screw the tank cap with the flexible tube (siphon) already fitted and ensure that it is well fitted to avoid water spill.
- Put your foot above the pump (Fig.14) and actuate it by compressing and slowly releasing the foot, for several times, until the water comes out of the faucet.
- Check that there are no water leaks.

Once all of the above steps are successfully completed, replace the superior rear panel (with the handle already assembled -Fig.7) and secure them with the 5 screws.

- Pull the front panel and put the garbage bag into trash bin, welded to the inside of the front panel (Fig.15-1).
- Push the swing door to throw away the paper towels (Fig.15-2)
- Put the paper towels in the paper dispenser (Nº.3).

The product is ready now to be used.



REMARK!

After installation and/or after refilling, the manual foot pump needs to be primed, several times, to remove air from the hoses. Repeat the operation until the water comes out of the faucet.

During normal use of the product, the access to the containers can be done from the front of the product.

Remove the front panel following the steps shown in the Fig.16.

- When the water container is empty, remove it from the unit, pull the hose out the neck (without removing the screw cap) and refill it with clean water.
- Replace the clean water hose into the neck of the container and through the hole of screw cap.

Make sure that the water clean container is placed in the position shown in Fig. 17-1.

- When the waste water container is full, remove the flexible tube/siphon, unscrewing the container cap, and then take it out from the unit.
- Dispose of the waste water in the place designated for wastewater.

Make sure that the waste water container is placed in the position shown in Fig.17-2 and re-screw the cap with the flexible tube (siphon) already fitted.

4. CLEANING & DESCALING



CAUTION!

NEVER use abrasive products, solvents or acids.

- Clean the externals of the unit as required; using a damp cloth and an appropriate cleaning product.
- Clean the faucet also with a detergent appropriate to clean stainless-steel and then rinse and wipe off with a dry soft cloth.
- Wash both jerricans every time you refill (clean water) and pour (waste water).



REMARK!

In the case of having limestone stains, simply mix baking soda and water into a paste and spread it over the sink. Baking soda is a great product at removing stains of water deposits, food and grease.

There are also in the market prosperes descaling products recommended to stainless steel that can be used to this effect.

5. MAINTENANCE AND ANOMALIES

Carry out a periodic check of the equipment to ensure greater durability of the components. This must be done by a qualified technician.

- Any technical interventions as well as assembly and maintenance must only be carried out by qualified technician. The manufacturer is not responsible for damages resulting from repairs and other interventions carried out by unqualified people. Use only spare parts of origin.
- Any repair carried out by people other than authorized agents will result in the cancellation of the warranty.

Possible faults and solutions:

Failure	Possible Causes	Action to take
Water leakage at the junctions of hoses with other components.	O-rings are worn out or loose. The metal clamps are not tight enough.	Replace the O-rings. Tighten the clamps.
Water leakage from the pipe.	There is no sealant or it is not in the correct position. Pipe with tiny cracks or holes	Check the connections. Replace the hoses
Water leakage at the faucet.	Faucet internal O-rings are worn or loose	Contact a plumber to repair or replace the faucet
There is no water coming out from the faucet.	The water foot pump supply is defective.	Contact a plumber to repair or replace the parts

Manufacturer recommends the use of original parts.

6. WARRANTY AND LIABILITY

The warranty is valid for 1 year from the date of purchase and covers defects of origin, whether material or manufacturing.

The warranty is limited to the replacement of faulty parts or products and excludes any consequential loss or expense incurred by the buyer.

Manufacturer is not liable for any damages or faults caused by:

- Defects which arise from faulty installation, inadequate maintenance, incorrect use or fair wear and tear are not covered by the guarantee;
- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts;
- We recommend to use original parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

7. RECYCLING

Do not dispose the packaging, protective materials and this product in household waste.

Follow the EU and your country rules and legislation, and dispose them in a duly authorized collection/recycling centre.

The manufacturer declines every responsibility on any print and/or transcription mistake contained in this instruction manual.

Any time and without notice, the manufacturer can change features and data of this document with the proposal of keeping on increase the quality of its products and, therefore, this manual cannot be considered as a contract with respect to third parties.