# MOD : CF08-HCW

**Production code : FSH 800 - WHITE**

**10/2026**

# INSTRUCTIONS FOR INSTALLATION AND USE VENTILATED WARMING DISPLAY

Congratulations for purchasing this top end professional equipment! You have chosen equipment that combines optimum technical properties with extreme user comfort. We want you to get the greatest possible satisfaction out of this equipment.

## 1. SAFETY INSTRUCTIONS

Please respect these instructions scrupulously to avoid any risk of fire, electric shock, scald or other wounds and damage. During the use of this appliance, fundamental circumspection of security must always be noticed, such as:

- Take into account the instructions to be systematically kept with the appliance.
- Install the appliance always in instructions respect. A 10 cm distance minimum with the partition or the wall is necessary.
- Protect the appliance from direct light of the sun, frost and humidity.
- Never leave the appliance within the reach of children or disabled persons without surveillance.
- The machine has to be used only by qualified person.
- Never move the appliance when it is working.
- Check that the appliance is definitely off before connecting it up or disconnecting it.
- Do not touch the hot surfaces of the appliance. The temperature of the hot surfaces can be very important when the appliance is working. Always use handles and control knobs.
- Do not use the appliance for other functions than determined use.
- Do not leave the electrical cord in contact of hot surfaces.
- The appliance should not be used close to combustible materials.
- During use, look after not to obstruct hearings of aeration of the appliance
- To avoid any electric shock, never plunge the cord or plug in water or quite other liquid.
- If the cord is harmed, it must be replaced by the producer, it’s after sale service or persons of similar skills to avoid any risk.
- Entrust repairs only to a skilled person.
- Use only spare parts of origin.
- Before cleaning the appliance, do not forget to disconnect it.

## 2. CONTENTS OF CARDBOARD PACKAGING

| | |
|---|---|
| Device: | A ventilated warming Display 4 faces |
| Accessories: | 3 glass shelves |
| | 1 shelf grid |
| | Technical documentation of the thermostat |
| | The present note |

## 3. CONFORMITY OF USE

Use the appliance only to keep warm your goods at constant temperature from 30°C to 70°C. The water drawers enables to control the humidity to keep your products moist and delicious.

## 4. WAY OF FUNCTIONING

Specially designed for snacks bars, pubs, bakeries, tearooms. These displays are fully panoramic and showcase quiche, pizza, croissants, buns, savories… beautifully.
These warming displays are fitted with 3 glass shelves, rear openings with 2 doors for a rapid and easy use.

You can set the inside humidity by adding water in the left and right drawers located under the tray. The temperature regulation is done thanks to the electronic thermostat preset in factory to 75°C.

To turn on your display in showcase mode without heating, press the switch (n°1 on picture). The lighting light up.
If you need heating and ventilation to work, press the switch (n°3 on picture).




| | |
|---|---|
| 1 | On/Off switch LED |
| 2 | Electronic thermostat |
| 3 | On/Off switch |

# 5. FUNCTIONING / MANIPULATION

## a) Installation / Assembly:

- Place the equipment on a stable and horizontal surface.
- Position the accessories
- A distance of 10 cm from the partition or the wall is considered enough.
- Never place the device near a wall or near a partition made of combustible materials even if it is very well isolated.

## b) First starting:

**When switching on, make sure that the temperature of the showcase has stabilized at the ambient temperature of the room.**

During use, you can pour some water in the left and right container under the tray to adjust the inside humidity in the display.

### *First cleaning*

Clean the device before the first use. (See 6 Cleaning)

### *Connection of the device*

- Make sure that the voltage and frequency of the electrical system comply with the values indicated on the nameplate.
- Always check that the electric power supply cable or plug are free of damage.
- Make sure that every control knob is positioned on 0.
- Connect the electric power supply cable to a socket with a protection wire.
- The display is now connected.

NB: To connect the display to a socket without any protection wire, or to connect directly to the electrical system, ask for a qualified electrician to make the connection.

## c) Use of device :

### *Elements of command and display*

| **Command/Display** | **Function** |
|---|---|
| Digital switch (n°1 on the picture) | Light On/Off |
| Electronic thermostat (n°2 on the picture) | Temperature setting |
| Switch (n°3 on the picture) | Display power |


***Starting***

Press the switch (n°1 on picture), to light up the lighting ramps.
Press the switch (n°3 on picture) to turn on ventilation and heating
The electronic thermostat (n°2 on picture) shows the temperature. The inside temperature displays. The A mark is on : the unit is in warming mode.

***Temperature setting***

To reduce the temperature, press the ‘SET’ key, the A mark flashes and the preset temperature appears. Press the B key until you reach the requested temperature, then confirm by pressing the ‘SET’ key.

To increase the temperature, press ’SET’ key, the A mark flashes and the present temperature appears. Press the C key until you reach the requested temperature, then confirm by pressing the ‘SET’ key.

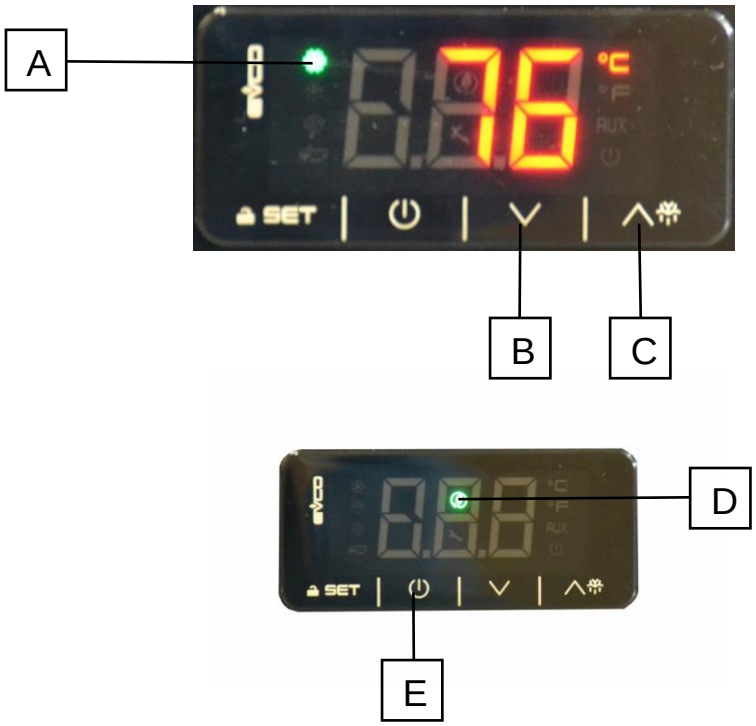


For energy saving, the screen moved to standby mode after 15 minutes (see D mark). To come back on display mode, press any key of the screen.
The E mark (on/off) is used to turn ON or OFF the heating system. You can also use the food display as a neutral display, without the heating system.

***Stopping the appliance***

Press both switches (n°1 and 3 on picture) on 0 : the machine is completely off
let the appliance cool down.
Disconnect the appliance.

Clean the equipment. (See 6 cleaning)

**d) Breakdown / repair:**

In case of breakdown or of damaged part, please call your after-sales service and confide any technical operation to qualified person.
When you contact the after-sales service of your distributor or your store, give him the complete reference of your device (commercial name, type and serial number). This information appears on the visible descriptive plate behind the device.

## 6. CLEANING AND MAINTENANCE

Disconnect the device.
- Let cool completely the device before any technical intervention or cleaning.
- Clean your machine regularly after each use
- Only use non-abrasive products, clean regularly the external walls of your device with warm water and wash liquid: avoid the abrasive towelling. Rinse your device with a wet sponge.
- Never clean the device under a water jet, the infiltrations would risk to damage it in an irreparable way.
- Never immerse the device, the cord or the plug in the water or quite other liquid to avoid any electric shock.
- During a prolonged non-use, we recommend you strongly to keep the device shielded from the humidity.

## 7. TECHNICAL SPECIFICATIONS

| Model | CF08-HCB / CF08-HCW | CF12-HCB / CF12-HCW |
|---|---|---|
| Effective Volume | 350 L | 500 L |
| Dimensions | 801x752x1402 mm | 1202x752x1402 mm |
| Weight | 135 Kg | 172 Kg |
| Power | 3000 W | 3000 W |
| Temperature | +30°C à +85°C | +30°C à +85°C |
| Voltage | 220-240 V ~ | 220-240 V ~ |
| Glasses | 615 x 540 mm (x3) | 940 x 540 mm (x3) |

## 8. NORMS AND LEGALS DISPOSALS

The device is conform to :
IEC/EN 60335-1
IEC/EN 60335-2-49
EN 55014-1 + 55014-2
EN 61000-3-3 + 61000-3-3

# 9. ELIMINATION OF THE ELECTRIC AND ELECTRONIC WASTE

The device respects the directives :

2002 / 96 / CE ( DEEE) N°34270064800021
2002 / 95 / CE ( ROHS)
2066/95 CE
2004/108 CE



**Reach rule**

Never put the device among household waste.
The device must be put down in a center of recycling for the electric equipments. The materials of the device are indeed reusable. By eliminating correctly the electric and electronic wastes, the recycling and quite other shape of re-use of worn equipment's, you participate in a significant way in the environmental protection. For any information about the collection of electric and electronic waste, please contact your distributor.

# 10. GUARANTEE

## Conditions of guarantee

The guarantee applicable to any device is the commercial guarantee of the distributor or the retailer. Please contact the store where you bought your device to know the precise conditions.

The guarantee grants no right for damages.

The dispositions which follow are not exclusive of the profit of the legal guarantee planned by articles 1641 and following ones of the Civil code relative to the defects and the latent defects.

## Exclusion clauses of the guarantee

**Bad installation and bad maintenance, in particular if they do not respect current regulations or instructions appearing in this user guide.**

Cannot benefit from the guarantee the repairs required as a result of false operations, of inappropriate use, of carelessness or of excess loads of the device, as well as those resulting from variations of the power supply, over tension or from defective installations

.

The damage due to shocks, bad weather is not flatware by the guarantee. The material travels at the risks of the user; in case of delivery by carrier, the consignee has to have reservations towards the carrier before any delivery of the device.

The guarantee comes to an end in case of intervention, of repair, of modification by no qualified persons, or of use in inappropriate purposes.