MOD : WR-GP7A-8G

Production code : DVMPLG78A

10/2026

TABLE OF CONTENTS

1-2. GENERAL AND SAFETY INFORMATION
3. POSITIONING AND HANDLING
4. POWER SUPPLY CONNECTIONS
5. OPERATIONS FOR COMMISSIONING
6. GAS TYPE CHANGEOVER
7. REPLACING COMPONENTS
8. INSTRUCTIONS FOR USE
9. MAINTENANCE
10. WASTE DISPOSAL
11. TECHNICAL DATA / IMAGES

DESCRIPTION OF PICTOGRAMS



Danger indications. Immediate hazardous situation which could result in serious injury or death. Possibly dangerous situation that could cause serious injury or death.



High voltage! Caution! Danger of death! Non-observance can cause serious injury or death



Pericolo Risk of high temperatures, non-compliance may result in serious injury or death.



Danger of leakage of high-temperature materials, non-observance can cause serious injury or death.



Danger of crushing of limbs during handling and / or positioning, non-compliance may result in serious injury or death.



Prohibition indications. Unauthorised persons (including children, disabled individuals and people with limited physical, sensory and mental abilities) are prohibited from performing any procedures. Children being supervised not to play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Prohibition for the heterogeneous operator to perform any type of operation (maintenance and/or other) that should instead be carried out by a qualified and authorised technician. Prohibition for the homogeneous operator to perform any type of operation (maintenance and/or other) without having first read the entire documentation specifics.



Obligation indications. Obligation to read the instructions before carrying out any work.



Obligation to exclude the power supply upstream of the appliance whenever it is necessary to operate safely.



Obligation to use safety goggles.



Obligation to use protective gloves.

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.


Obligation to use a protective helmet.


Obligation to use safety shoes.


Other indications. Indications to implement the correct procedure, non-compliance may cause a dangerous situation.


Advice and suggestions to ensure the correct usage procedure.


"Homogeneous" Operator (Qualified Technician). Expert operator authorised for handling, transporting, installing, servicing, repairing and scrapping the appliance.


"Heterogeneous" Operator (Operator with limited skills and tasks). Person authorised and employed to operate the appliance with guards active, capable of performing simple tasks.


Earthing symbol


Symbol for attachment to the Equipotential system


Obligation to respect the regulations for waste disposal.

GENERAL AND SAFETY INFORMATION

FOREWORD /This document has been drawn up in the mother language of the manufacturer (Italian).
The information it contains is for the sole use of the operator authorised to use the appliance in question.
Operators must be trained concerning all aspects regarding functioning and safety. Special safety prescriptions (Obligations-Prohibitions-Dangers) are carried in a specific chapter concerning these issues. This document cannot be handed over to third parties to take vision of it without written consent by the manufacturer. The text cannot be used in other publications without the written consent of the manufacturer.
The use of: Figures/Images/Drawings/ Layouts inside the document, is purely indicative and can undergo variations. The manufacturer reserves the right to modify it, without being obliged to communicate his acts.

PURPOSE OF THE DOCUMENT / Every type of interaction between the operator and the appliance during its entire life cycle has been carefully assessed both during designing and while drawing up this document. We therefore hope that this documentation can help to maintain the characteristic efficiency of the appliance.
By strictly keeping to the indications it contains, the risk of injuries while working and/or of economical damage is limited to a minimum.

HOW TO READ THE DOCUMENT / The document is divided into chapters which gather by topics all the information required to use the appliance in a risk-free way. Each chapter is divided into paragraphs; each paragraph can

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

have titled clarifications with subtitles and descriptions.

KEEPING THE DOCUMENT / This document and the rest of the contents of the envelope, are an integral part of the initial supply. It must therefore be kept and used appropriately during the entire operational life of the appliance.

ADDRESSEES / This document is drawn up as follows:
- **Homogeneous operator / Expert op**erator authorised for handling, transporting, installing, servicing, repairing and scrapping the equipment.
- **Generic operator** / Person authorised and employed to operate the appliance with guards active, capable of performing routine tasks.

OPERATOR TRAINING PROGRAM / By specific request, it is possible to carry out a training course for users, installers and technicians, following the procedures indicated in the order confirmation.

PRE-ARRANGEMENTS DEPENDING ON CUSTOMER /
Unless different contractual agreements were made, the following normally depend on the customer:
• setting up the rooms (including masonry work, foundations or channelling that could be requested);
• smooth, slip-proof floor;
• pre-arrangement of installation place and installation of equipment respecting the dimensions indicated in the layout (foundation plan);
• pre-arrangement of auxiliary services adequate for requirements of the system (e.g. electrical mains, gas network, drainage system);
• pre-arrangement of electrical system in compliance with regulatory provisions in force in the place of installation;
• sufficient lighting, in compliance with standards in force in the place of installation;
• safety devices upstream and downstream the energy supply line (residual current devices, equipotential earthing systems, safety valves, etc.) foreseen by legislation in force in the country of installation;
• earthing system in compliance with standards in force;
• pre-arrangement of a water softening system, if needed (see technical details).

CONTENTS OF THE SUPPLY /
The supply vary depending on the order. • Appliance • Lid/s • Metallic rack/s • Rack support grid • Pipes and/or wires for connections to energy sources (only when indicated in work order).
• Gas type change kit supplied by yhe manufacturer

INTENDED USE / This device is intended for professional use. The use of the appliance treated in this document must be considered “Proper Use” if used for cooking or regeneration of goods intended for alimentary use; any other use is to be considered “Improper use” and therefore dangerous.
These appliances are intended for commercial activities (e.g. restaurant kitchens, canteens etc) and in commercial companies (e.g. bakeries etc.) but not for the continuous food production.
The appliance must be used according to the foreseen conditions stated in the contract within the prescribed capacity limits carried in the respective paragraphs.
Only use original accessories and spare parts supplied by the manufacturer to maintain regulatory compliance.

ALLOWED OPERATING CONDITIONS / The appliance has been designed to operate only inside of rooms within the prescribed technical and capacity limits. The following indications must be observed in order to attain ideal operation and safe work

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

conditions. The appliance must be installed in a suitable place, namely, one which allows normal running, routine and extraordinary maintenance operations. The operating area for maintenance must be set up in such a way that the safety of the operator is not endangered. The room must also be provided with the features required for installation, such as:

- maximum relative humidity: 80%;
- minimum cooling water temperature > + 10 °C ;
- the floor must be anti-slip, and devices positioned perfectly level;
- the room must be equipped with a ventilation system and lighting as prescribed by standards in force in the country of the user;
- the room must be set up for draining greywater, and must have switches and gate valves which cut all types of supply upstream the appliance when needed;
- The walls/surfaces immediately close/contact to the appliance must be fireproof and/or isolated from possible source of heat

TEST INSPECTION AND WARRANTY / Testing: the equipment has been tested by the manufacturer during the assembly stages at the site of the production plant. All certificates related to the testing performed will be delivered to the customer upon request. **Guarantee: the warranty is 12 months from the date of invoicing of the equipment, this period cannot be extended.** It covers the faulty parts only. Carriage and installation charges are for the buyer's account. Electric components, accessories as well as other removable parts are not covered by the guarantee. Labor costs relating to the intervention of authorized by the manufacturer at the customer's premises, for removal of defects under warranty are charged to the dealer. Excluded are all tools and supplies, possibly supplied by the manufacturer together with the machines. Damage occurred in transit or due to incorrect installation or maintenance can't be considered. Guarantee is not transferable and replacement of parts and appliance is at the final discretion of our company. The Manufacturer is responsible for the equipment in its original configuration and only for original spare parts replacement. The manufacturer declines all responsibility for improper use, for damages caused as a result of operations not covered in this manual or not authorized in advance by the manufacturer.consideration in this manual or without prior authorisation of the manufacturer himself.

THE WARRANTY TERMINATES IN CASE OF / • Damage caused by transport "ex works" (EXW) and / or by handling, should this event occur, the customer must inform the retailer and the carrier (eg. via e-mail and / or website) and write down on the copies of the transport documents what It's happened. The technician authorized to install the appliance will evaluate the damage and decide if the installation can be carried out. The warranty also terminates in the presence of: • Damage caused by incorrect installation. / • Damage caused by parts worn due to improper use. /• Damage caused by use of non-original spare parts. / • Damage caused by incorrect maintenance and/or lack of maintenance. / • Damage caused by failure to comply with the procedures described in this document.

AUTHORISATION / Authorisation refers to the permission to operate an activity intrinsic to the appliance. Authorisation is given to anyone who is responsible for the appliance (manufacturer, purchaser, signer, dealer and/ or location owner).

TECHNICAL DATA and IMAGES / The section is at the ending of this manual.

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

Every technical change has an effect on the operation or safety of the appliance and must therefore be performed by technical personnel of the manufacturer or by technicians who are formally authorised by the same. Failure to do so exempts the manufacturer from any liability for for any possible resulting modifications or damage.

Upon arrival, check the integrity of the appliance and its components (e.g. power cord), prior to use. In the presence of faults do not start the appliance and contact the nearest service centre.

Read the instructions before acting.



Wear protective equipment suitable for the operations to be performed. As far as personal protective equipment is concerned, the European Community has issued Directives which the operators must comply with. **Noise ≤ 70 dB.**

It is forbidden the installation of stand alone equipment WITHOUT anti-tip kit (ACCESSORY). TOP versions excluded.

Before making the connections check the technical data shown on the rating plate of the appliance and the technical data in this manual. **It is strictly forbidden to tamper with or remove the plates and pictograms applied to the equipment.**

Disconnect all supplies, if present (e.g. water - gas - electrical) upstream the appliance whenever you need to work in safe conditions.

Connect the appliance if present, in the sequence of the water, then to the gas network. Ensure there are no leaks then proceed with the connections to the mains.

The appliance is not designed to work in an explosive atmosphere and as such its installation and use is categorically prohibited in such environments.

Position the entire structure, respecting the installation dimensions and characteristics indicated in the specific chapters of this manual.

The appliance is not intended for recessed installation. / The appliance must be used in a well ventilated area. / The appliance must have free drainage (not hindered or impeded by foreign bodies).

The gas equipment must be installed beneath an extraction hood whose system must have specifications in compliance with the current regulations in the country of use.

Once the appliance is connected to the power and drain sources, it must remain static (fixed) in the place of use and maintenance. Incorrect connection may cause danger.

Drainage of the appliance must be conveyed into the grey water discharge network in an open “glass” unsiphoned formation.

The appliance must only be used for the purposes indicated. Any other use must be considered “IMPROPER” and therefore the manufacturer declines all liability for any consequent damage to persons or property.

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

Particular safety prescriptions (obligation-prohibitions-danger) are detailed in the specific chapter concerning these issues.

Do not obstruct the heat extraction and/or dissipation openings.

Do not leave flammable objects or material near the appliance.

Disconnect all supplies if present (e.g. water - gas - electrical) upstream the appliance whenever you need to work in safe conditions.

Whenever it is necessary to operate inside the appliance (connections, commissioning, checking operations, etc.) prepare for the necessary operations (removal of panels, elimination of supply) in compliance with the safety conditions.

DUTIES AND QUALIFICATIONS REQUIRED OF OPERATORS

Prohibition for the homogeneous operator to perform any type of operation (maintenance and/or other) without having first read the entire documentation.



The information contained in this document is for the use of the qualified technical operator who is authorised for: handling, installation and maintenance of the appliance in question.



The operating instructions have been drawn up for the “Generic” operator (Operator with limited responsibilities and tasks). Person authorised and employed to operate the appliance with guards active and capable of performing routine maintenance (cleaning the appliance).

The operators who use the appliance must be trained in all aspects concerning its functioning and safety features. They must therefore interact using appropriate methods and instruments, complying with required safety standards.

The “Generic” operator must operate on the appliance after the technician has completed installation (transportation, fixing electrical, water, gas and drain connections).

WORK AREAS AND HAZARDOUS ZONES /

To better define the scope of intervention and the relevant work zones, the following classification is provided:

• **Dangerous zone**: any zone within and/or in proximity to a machine in which the presence of an exposed person constitutes a risk in terms of the health and safety of such a person;

• **Exposed person**: any person that is found wholly or partly in a dangerous zone.

Maintain a minimum distance from the appliance when operating in such a way as to avoid endangering the safety of the operator in case of unexpected circumstances.

The following are also danger zones / • All the work areas within the appliance • All the areas protected by appropriate safety and protection systems such as safety photocell photoelectric curtains, protective panels, interlocked doors, protective casing.

• All the zones within the control

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

units, electrical cabinets and junction boxes.
• All the zones around the appliance in operation when the minimum safety distances are not being respected.

EQUIPMENT REQUIRED FOR INSTALLATION /
The authorised technical operator, in order to perform the installation operations correctly, must respect the following requirements:
- 3 and 8 mm screwdriver
- Adjustable pipe wrench
- Gas use tools (hoses, gaskets etc.)
- Electrician's scissors
- Water use tools (hoses, gaskets etc.)
- 8 mm hex socket wrench
- Gas leak detector
- Tools for electric use (cables, terminal blocks, industrial sockets etc.)
- 8 mm nut driver
- Complete installation set (gas etc.)

In addition to the tools listed, an equipment lifting device is required. This equipment must comply with all the regulations relating to lifting equipment.

INDICATION ON RESIDUAL RISK / Even though the rules for "good manufacturing practice" and the provisions of law which regulate manufacturing and marketing of the product have been implemented, "residual risks" still remain which, due to the very nature of the appliance, it has not been possible to eliminate. These risks include:

RESIDUAL RISK OF ELECTROCUTION / This risks remains when intervening on live electrical and/or electronic devices.

RESIDUAL RISK OF BURNING / This risks remains when unintentionally coming into contact with materials at high temperatures.

RESIDUAL RISK OF BURNS DUE TO LEAKING OF MATERIAL / This risks remains when unintentionally coming into contact with materials at high temperatures. Containers that are too full of liquids or solids that during warming change morphology (changing from a solid to a liquid), can, if used incorrectly, cause burns. During operations, the containers used must be placed on easily visible levels.

RESIDUAL RISK OF CRUSHING LIMBS / This risk exists where there is accidental contact between the parts during positioning, transportation, storage and assembly.

RESIDUAL RISK OF EXPLOSIONS / This risk remains when:
• there is smell of gas in the room;
• appliance used in an atmosphere containing substances which risk exploding;
• using food in closed containers (such as jars and cans), if they are not suitable for the purpose.

RESIDUAL RISK OF FIRE / This risk exists by flammable liquids / material use

OPERATIONAL MODE FOR A SMELL OF GAS IN THE ENVIRONMENT - see SECTION IMAGES - REFERENCES a)

If there is a smell of gas in the environment, it is mandatory to urgently implement the procedures described below.
- Immediately stop the gas supply (Close the network tap, detail A).
- Ventilate the room immediately.
- Do not operate any electrical device in the environment (Detail B-C-D).
- Do not operate any device which could produce sparks or flames (Detail B-C-D).

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

- Use a means of communication that is external to the environment where there is a smell of gas to warn the relevant entities (electricity operator and/or fire-fighters).
-

NEW! REMOVABLE BOTTOM / VD. SECT. ILL - REF. m)

In the models provided (free cupboard bottom), it is possible to remove the lower surface for installation and maintenance operations (eg inspections, connections, cleaning etc). To remove the bottom, unscrew and remove it (Part A). To reposition the bottom, insert and screw again (Part B).

If there are doors, they must first be disassembled (hinges and fixing).

POSITIONING AND HANDLING 3.

Before proceeding with the operations, see “General safety information”.

OBLIGATIONS - PROHIBITIONS - ADVICE

Upon receipt, open the machine packaging and ensure that the machine and accessories have not been damaged during transportation. Where this is found to be the case, notify the carrier immediately and do not proceed with installation but contact the qualified and authorised personnel.
The manufacturer is not liable for damage caused during transportation.

HANDLING SAFETY /

Failure to follow the instructions reported below could result in exposure to the risk of serious injury.

The operator authorised for the handling and installation operations of the appliance must prepare, if necessary, a “safety plan” in order to ensure the safety of the persons involved in the operations. In addition, they must follow and strictly and scrupulously implement the laws and regulations relating to mobile sites.

Ensure that the lifting means adopted have capacity that is adequate for the loads to be lifted and are in a good state of maintenance.

Perform the handling operations using lifting means with a capacity appropriate to the weight of the appliance increased by 20%.

Follow the directions on the packaging and/or on the same appliance before handling.

Check the centre of gravity of the load before lifting the appliance.

Lift the appliance to a minimum height from the ground in order to ensure its handling.

Do not stand or pass under the appliance during lifting and handling.

HANDLING - TRANSPORTATION / - see SECT. IMAGES - REF. b).

The orientation of the packed appliance must be maintained according to the instructions given by the pictograms and lettering on the outer packaging.

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

1. Position the lifting means paying attention to the centre of gravity of the load to be lifted (detail B-C).
2. Lift the appliance enough to move it.
3. Place the appliance on the site chosen for final positioning.

STORAGE / The storage methods of the materials must include pallets, containers, conveyors, vehicles, tools and lifting devices that are suitable to prevent damage due to vibration, impact, abrasion, corrosion, temperature or other conditions that might arise. The parts stored should be periodically checked to detect possible deterioration.

DISPOSAL OF PACKAGING

Disposal of the packing materials is the responsibility of the recipient that should proceed in accordance with the laws in force in the country of installation of the appliance.
1. Remove in sequence the upper and lower corner protectors;
2. Remove the protective material used for packaging;
3. Lift the appliance as necessary and remove the pallet;
4. Place the appliance on the ground;
5. Remove the means used for lifting;
6. Clean the area of operations from all the material removed;

Having removed the packaging, there should not be any signs of tampering, dents or other anomalies. Where evidence of these is found, immediately notify the customer service.

REMOVAL OF PROTECTIVE MATERIALS / The appliance is protected on the exterior surfaces with a covering of adhesive film which must be removed manually after positioning of the appliance. Carefully clean the appliance, externally and internally, manually removing all the material used to protect the parts.

Be careful not to damage stainless steel surfaces. No not use corrosive products, abrasive material or sharp tools.

Do not use pressurised direct water or steam cleaners jets for cleaning operations

Carefully read the indications contained on the labels of the products used. Wear protective equipment suitable for the operations to be performed (see the protection information shown on the package label).

Rinse the surfaces with tap water and dry them with an absorbent cloth or other non-abrasive material.

CLEANING AT COMMISSIONING /
Apply the cleaning liquid using normal spray over the entire surface of the cooking chamber and manually thoroughly clean the entire surface using a non-abrasive sponge.
Afterwards rinse the cooking chamber with drinking water.
Let the liquid containing detergent and/or other impurities flow off into the drain hole.
Having successfully completed the operations described, carefully wipe the cooking chamber with a non-abrasive cloth. If necessary, repeat the operations described above for a new cleaning cycle.

Also clean with detergent and water the parts removed and clean them.
With the operations completed, place the parts removed in the appropriate housings of the various pieces of equipment.

LEVELLING AND SECURING - see SECTION IMAGES - REF c).

Position in the work place (see operation and environmental limit conditions permitted), previously made suitable,

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

of the appliance.
The tasks of levelling and securing include: adjustment of the appliance as a single independent unit.
Place a spirit level on the structure (detail D).
Adjust the levelling feet (detail E) according to the indications provided by the level.

Perfect levelling is achieved by adjusting level and feet on the width and depth of the appliance.

"SERIES" ASSEMBLY / see SECT. IMAGES - REF. d).
In the models provided, remove the knobs and unscrew the screws for the fixing of the panel (detail F).

Flammable walls / The minimum distance of the appliance from the side walls must be 10 cm (15 cm per modello 900) and from the rear wall must be 20 cm. If it is lower, insulate the walls close to the appliance with fireproof and / or insulating treatments.

Install the appliances so as to exclude any accidental contact with high temperature surfaces, including hot combustion fumes coming out of the chimney (see identification with High temperatures warning label and description on page 2), to people who transit and / or operate within the work environment.
To place the equipment adherent each other perfectly (part G). Level the equipment as described above (detail E).
Insert the screws in their housings and lock the two structures with the locking nuts (part H1-H3).
Replace the protective caps between the devices (part H2).
Repeat, if necessary, the sequence of leveling and fixing operations for the remaining equipment.

INTRODUCTION OF TERMINAL (OPTIONAL) see SECT. IMAGES - REF. d). / In order to introduce the terminal, position it and fix it with the equipped screws provided (detail L1).

Once the described operations have been carried out, position again the panels and knobs of the different appliances in the respective housings.

POWER SUPPLY CONNECTIONS 4.

Before proceeding with the operations, see "General safety information".

These operations must be performed by qualified and authorised operators, in accordance with the laws in force and using the appropriate materials described.

Generally, the appliance is delivered without electric mains supply cable, without pipes for connection to the water, drainage and gas networks.

GASPOWER CONNECTIONS - see SECT. IMAGES - REF. e).
Features of the installation site /
The premises for installation of the appliance (type A1 under hood) must be equipped with features such as:
Air premises according to the provisions required by the local regulations in force. The extraction hood above the appliance must be in operation during use of the appliance itself.

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

The distance between the appliance and the filter of the extraction hood must be at least 20 cm.

Once the appliance is connected to the power and drain sources, it must remain static (fixed) in the place of use and maintenance.

A safety valve must be installed on the network upstream of the main supply line. It must be easily identifiable and accessible by the operator (Fig. 3)

To make the connection to the mains, it is necessary to have a hose conforming to the local law in force and with the characteristics specified in EN ISO 228-1 or EN 10226-1 / -2.

The gas supply pipe must comply with local regulations in force and must be periodically reviewed and/or replaced in accordance with local conformities in force, by authorized personnel.

If the hose is used , it must comply with the local regulations ; they must not be longer than 2 meters and must not touch parts of the equipment subject to high temperatures.

The outlet from the appliance is "male" type and 1/2"G. The connection pipe must be of "female" type and 1/2 "G as described by local standards.

The pipes must be screwed firmly to their attachment points.

Conduct a test to ensure that there are no gas leaks once the network gate valve is open (Fig. 4).

Do not connect the appliances to networks containing gas with carbon monoxide or other toxic components

Upon completion of the operations describe, close the network gate valve (Fig. 3).

If it is necessary to replace the nozzle to conform to another type of gas supply, see the procedure described in the Operations for commissioning (see chapter 5).

GAS TYPE CHANGE - see SECT. IMAGES - REF. f)

The appliance comes from the factory with setting to the type of power indicated on the plate. Any other configuration that changes the parameters set must be authorized by the manufacturer or by its representative.

The transformation from one type of power to another must be performed by qualified technical personnel authorized to perform the operation in question. The correct procedure to be implemented for the transformation is described in the relevant manual.

Injectors - By Pass - Pilot injectors - Apertures - and anything necessary for any gas transformation must be requested directly from the manufacturer.

At the end of the transformation from one type of power to another, change the label on the appliance with new the parameters reported on the adhesive document provided.

Two plates may need to be replaced in certain cases (oven equipment), one outside near the gas attachment and one inside (see image reference f).

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

GENERAL WARNINGS

Operators have a duty to familiarise themselves adequately, using this manual before performing any intervention, adopting the specific safety requirements to make every kind of human-computer interaction safe.

Any technical modification that affects the operation or safety of the machine must only be carried out by the technical personnel of the manufacturer or by technicians that are formally authorised by the manufacturer. Failure to do so exempts the manufacturer from any liability for for any possible resulting modifications or damage.

Even after appropriate familiarisation, upon the first use of the appliance, in any case simulate a number of test operations to save more rapidly the main functions of the appliance, e.g. start-up, shut-down, etc.

The appliance is provided already tested by the manufacturer and fitted with the type of gas and electrical supply specified on the rating plate applies.

In case of supply with LPG gas (Butane or Propane) at 50 mbar,a pressure stabilizer 50 mbar must be installed upstream of the appliance.

FIRST COMMISSIONING START UP / Upon completion of the operations of positioning and connection to the power sources, perform a series of operations such as:
1. Cleaning away of the protective materials (oils, grease, silicones, etc.) inside and outside of the cooking chamber (see section 3 / Removal of protective materials).
2. General checks and controls such as: Check opening of switches & network gate valves (e.g. water, electricity, gas when applicable); Checking of drains; Checking and monitoring of the external fumes/vapour extraction; Checking and monitoring of the protection panels (all the panels must be fitted correctly).

PRESSURE DETECTION GAS INLET

If the measured pressure is lower than the 20% compared to the nominal pressure (ex. G20 20 mbar ≤ 17 mbar) suspend the installation and contact the gas distribution service.

If the measured pressure is higher than the 20% compared to the nominal pressure (ex. G20 20 mbar ≤ 25 mbar) suspend the installation and contact the gas distribution service.

The constructor firm does not recognise the machines warranty in case the gas pressure is lower or higher than the values above described.

Make sure there are no gas leaks

After controlling the pressure and type of gas supply intervention may be required, such as: 1. Replacement of the nozzle (in the case where the type of network gas is different from that for which the appliance is preset- see chapter 6).

DESCRIPTION OF STOP MODES

Generally, in stoppage conditions caused by faults and emergencies, in the event of imminent danger, it is mandatory to close all the locking devices on the supply

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

lines upstream the appliance (Water-Gas-Ele).

STOPPAGE DUE TO FAULTY OPERATIONS

Safety component / STOP: In situations or circumstances which can be dangerous, a safety thermostat is triggered, automatically stopping heat generation. The production cycle is interrupted until the cause of the fault is resolved.

RESTARTING: After the problem that triggered the safety thermostat is resolved, the authorised technician can restart the appliance by means of the specific controls.

COMMISSIONING FOR INITIAL START-UP

When commissioning the appliance and when starting it after a prolonged stop, it must be thoroughly cleaned to eliminate all residue of extraneous material (see chapter 3 / Removal of protective materials).

DAILY ACTIVATION

1. Check the cleanliness and hygiene of the appliance.
2. Make sure that the room exhaust system works properly.
3. When necessary, plug the appliance into the appropriate socket.
4. Open the network locks upstream the appliance (Gas - Water - Electric).
5. Make sure that the water drain (if present) is not clogged.

Proceed with the operations described in “Starting production”.

In order to free air in the pipes, open the network lock, turn the knob of the appliance while pressing it in the piezoelectric position, place a flame (match or the likes) on the pilot light and wait for it to ignite.

DAILY DECOMMISSIONG / Upon completion of the operations described above:

1. Close the network locks upstream the appliance (e.g. Water - Gas - Electric).
2. Make sure that the drain cocks (if present) are “Closed”.
3. Check the cleanliness and hygiene of the appliance.

PROLONGED DECOMMISSIONING / In case of prolonged inactivity, perform all the procedures described for daily putting out of service and protect the parts most exposed to oxidation as indicated below:

1. Use lukewarm water with a bit of soap to clean the parts;
2. Rinse the parts thoroughly, without use pressurised direct water or steam cleaners jets for cleaning operations;
3. Dry the surfaces carefully using non-abrasive material;
4. Wipe a non-abrasive cloth lightly soaked with food-safe Vaseline oil over all of the stainless steel surfaces in order to create a protective film.

For appliances with doors and rubber gaskets, leave the door slightly ajar to let it air out and spread protective talcum powder on the rubber gasket surfaces.

Periodically air the appliances and rooms.

To make sure that the appliance is in perfect technical conditions, arrange for service at least once a year by an authorised technician of the assistance service.

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

UPSTREAM DYNAMIC PRESSURE CONTROL / See gas inlet pressure detection.

INJECTOR PRESSURE CONTROL

If the measured pressure is lower than the 20% compared to the entry pressure, suspend the installation and contact the authorized customer care service

If the measured pressure is higher than the entry pressure, suspend the installation and contact the authorized customer care service

REPLACEMENT OF PILOT BURNER INJECTOR - see SECT. IMAGES - REF. g)

1. Close the cut-off cock upstream the machine.
2. Demount if necessary, the plugs in order to avoid to damage it during the injector replacement (Fig. 2).
3. Unscrew the nut and demount the pilot injector (the injector is hooked to the compression fitting).
4. Replace the pilot injector (Fig. 1) with the one corresponding to the selected gas according to what reported in the reference Table.
5. Screw the nut with the new injector. (Fig. 2).
6. Reassemble the plug (Fig. 2).
7. Turn on the pilot burner to check whether there are no gas leakages.

Make sure there are no gas leaks

REPLACEMENT OF BURNER INJECTOR - see SECT. IMAGES - REF. h) / 1. Close the cut-off cock upstream the machine.
2. Unscrew the injector (Fig. 3)
3. Replace the injector with the one corresponding to the selected gas according to what reported in the reference Table.
4. Screw the new injector.

Make sure there are no gas leaks

ADJUSTMENT OF MAIN BURNER - see SECT. IMAGES - REF. i) / For primary air adjustment:

- Close the cut-off cock upstream the machine.
- Unscrew the locking screw (Fig. 1).
- Where required set the distance (X) mm of the bushing corresponding to the selected gas (see Gas Table).

Block the bushing with the screw and put a tampering detecting seal on it

ADJUSTMENT OF MINIMUM THERMAL RANGE - see SECT. IMAGES - REF. l)

In the provided models, the reduced thermal range is obtained with the “sized” by-pass minimum screw (Fig. 2), screwed hard (see Gas Table). Open the cut-off cock upstream the machine

In case of screw replacement put a tampering detecting seal on it at the end of the detection process

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

EN

Before proceeding see chap. 2

1. Remove the oil/ash container / 2. Disassemble the panel and the knob

REPLACING GAS TAP

1. Unscrew the gas inlet and outlet connections
2. Unscrew the thermocouple
3. Reassemble the new tap
4. Check the idle screw (see Technical Data Tables)

REPLACING THERMOCOUPLE

1. Unscrew the thermocouple from the tap
2. Unscrew the thermocouple from the pilot
3. Fit the new thermocouple and screw the connections

REPLACING IGNITION SPARK

1. Remove the high-voltage cable of the spark
2. Unscrew the nut
3. Replace the spark new
4. Connect the high voltage cable

REPLACING PIEZO

1. Remove the cable from the piezo electric ignitor
2. Remove the ignitor to replace
3. Fit the new piezo electric ignitor

REPLACING BURNER

1. Remove the grills, lava stone, lava stone grills and splash guards in sequence
2. Unscrew the fixing screws
3. Remove the burner
4. Position the new burner
5. Tighten the fixing screws

In models PLG78..., unscrew the burner plate that is to be replaced (Part. A) and retighten it on the new one as shown in Part. B / see SECT. IMAGES - REF. r)

When placing the removed parts back, do not invert their position

Once completed, refit:
1. Oil/ash container
2. Panel and knob

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

LOCATION OF MAIN COMPONENTS - see SECT. IMAGES - REF. n)

The layout of the figures is purely indicative and can undergo variations.

A) Cooking grill.
B) Lava stone.
C) Lava stone grid.
D) Oil/ash drainage container (700 Model) / Ash only drainage container (900 Model)
E) Burner adjustment knob (see Knobs, keys and indicator light modes and functions).
F) Piezoelectric button.
G) “Briquette” lava stone
H) Cooking fat drainage container (900 Model)

KNOBS, KEYS AND INDICATOR LIGHT MODES AND FUNCTIONS see SECT. IMAGES - REF. o).

The layout of the keys in the figures is purely indicative and can be subject to variations.

(1) PIEZOELECTRIC BUTTON (GAS). It performs one function:
1. When pressed, it produces the spark to ignite pilot light.

(2) BURNER REGULATION KNOB (GAS): It performs three functions:
1. Igniting the pilot light and burner.
2. Adjusting the flame (minimum - maximum).
3. Turning the appliance off.

STARTING PRODUCTION

Before proceeding see chapters 2 / Residual Risk and 5 / Daily Activation

When loading the product into the appliance and unloading it, there is a residual risk of being burnt; this risk can occur coming into unintentional contact with: hob - cooking compartment - recipients or material processed.

LAVA STONE LOADING / see SECT. IMAGES - REF. n) / Lift and remove cooking grills (part.A).
Distribute uniformly in the proper lodging the lava stone contained in the sack supplied (about 6 kg) to grant the stability of the grills on the splashguard (part. B).
Place again the cooking grills previously removed.

SWITCHING ON / see SECT. IMAGES - REF. p)

- Turn the knob while holding it in the piezoelectric position (Fig.2/A), and simultaneously press the piezoelectric button several times (Fig.2/B) until the pilot light is lit.
- Release the knob after about 20” and check to make sure the pilot light remains lit.

The pilot light can be seen through the hole on the panel.
When the pilot light has been lit, turn the thermostat knob to the desired temperature (Fig.2/C).

With the dual control (2 thermostat knobs) the temperature acts on half the surface of the plate for each control (Fig.3/A).

LOADING/UNLOADING THE PRODUCT / see SECT. IMAGES - REF. p)

Check that the cooking fat drainage container is present and positioned correctly (900 Model - Det. E)

Do not use pans or other containers to cook on the grill.

Wait for the correct temperature to be reached before placing food on the grill.

Flip the cooking grid depending to desired cooking mode: **Method A - see Fig. 3B / Method B - see Fig. 3C** - Lean food cooking

Place the product onto the cooking grill of the hob (Fig. 3).

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

When cooking is over, remove the item from the appliance using the specific cookware and put it in a place prepared beforehand.

During cooking, check the level of liquid inside the container frequently. (see chap. 5 / Deactivation)

Do not empty the cooking fat container into the ash container (900 Model). Follow the disposal procedures in force in the country of use / see ILL sect. - REF q) Fig. 4/C and Fig. 5.

DEACTIVATION / SEE CHAPTER 5

BURNT OIL DRAIN/ASH / SEE SECT. IMAGES - REF. Q)

Before operating, wait for the burnt oil to cool off.

The burnt oil collection container has a limited capacity. Keep an eye on the container as it fills while oil is emptied from the cooking compartment.

Do not fill the oil collection container beyond 3/4 its capacity to handle it safely.

- Remove the containers from their seats and empty them following the disposal procedures in force in the country of use (700 Model Fig. 4/B and Fig. 5 / 900 Model Fig. 4/B + Fig. 4/C and Fig. 5)
- When finished, put the emptied containers back in place.
- Close the network locks upstream the appliance (Gas - Water - Electric).
- Check the cleanliness and hygiene of the appliance and of the cooking containers. See “Maintenance”.

REPLACING LAVA STONE / see SECT. IMAGES - REF. o)

- Wait for the temperature of the hotplate to cool off so that the operator is not burnt.
- Lift the cooking plates and remove them (Detail A).
- Removed the worn stones (Detail B).
- Clean the housing of the stones (Detail C) and the ash containers, pulling them from their seat inside the appliance (Detail G).
- Reposition the collection containers in their housing.
- Distribute uniformly in the proper lodging the new lava stone contained in the sack supplied (about 6 kg medium size) to grant the stability of the grills on the splashguard (Detail B).
- Place again the cooking grills previously removed (Detail A).

NEW! “BRIQUETTE” LAVA STONE LOAD (OPTIONAL) / VD. SECT. ILL - REF n)

In the models provided, lift and remove the cooking grids (Part A).

Place the lava stone called “briquette” in the special housing. Model 700: No. 50 pieces / grid, about 5 kg ; Model 900: n. 65 pieces / grid, about 6.5 kg.

Place the lava stone correctly as shown (Part G).

Replace the cooking grills previously removed.

”BRIQUETTE” LAVA STONE REPLACEMENT /

In the models provided, see par. “Lava stone replacement” up to point 5 and then proceed with:

6. Correctly place the new lava stone known as a “briquette”, approx. 5 kg / 700 mod - 6.5 kg / 900 mod, into the designated housing (Det. C)
7. Put the previously removed cooking grill back in place (Det. A).

Proceed with the other operations (eg Ignition etc.)

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

OBLIGATIONS - PROHIBITIONS - ADVICE

Before proceeding see chapters 2 and 5.

If the appliance is connected to a flue, the exhaust pipe must be cleaned according to that foreseen by specific regulatory provisions of the country (contact your installer for information).

The appliance is used to prepare food products. Keep the appliance and the surrounding area constantly clean. Failure to keep the appliance in ideal hygienic conditions could cause it to deteriorate quickly and create dangerous situations.

Filth deposit built up near heat sources can burn during normal use of the appliance and create dangerous situations. The appliance must be cleaned regularly and every incrustation or food deposit removed.

The chemical effect of salt and/or vinegar or other acid substances can in the long run cause the inside of the hob to corrode during cooking. At the end of the cooking cycle of such substances, the appliance must be washed thoroughly with detergent, abundantly rinsed and carefully dried.

Be careful not to damage stainless steel surfaces. No not use corrosive products, abrasive material or sharp tools.

The liquid detergent for cleaning the hob must have certain chemical features: pH greater than 12, without chlorides/ammonia, viscosity and density similar to water. Use non-aggressive products for cleaning the inside and outside of the appliance (use detergents on the market for cleaning steel, glass and enamel).

Carefully read the indications carried on the labels of the products used. Wear protective equipment suitable for the operations to be performed (see the protective equipment carried on the package label).

In the event of prolonged inactivity, besides disconnecting the supply lines, you must thoroughly clean all the inside and outside parts of the appliance.

Wait for the temperature of the appliance and all its parts to cool off, so that the operator is not burnt.

DAILY CLEANING



Wait for the temperature of the grill to cool off so that the operator is not burnt. Do not use pressurised direct water or steam cleaners jets for cleaning operations.

1- Lift the cooking grills, and using a sponge, clean the entire surface thoroughly with soapy lukewarm water.
2- Rinse the parts and carefully dry all the surfaces using non-abrasive material;
3- Remove, if necessary (see unloading oil/ash) collection container, empty it and wash it. Afterwards dry it thoroughly and put it back in place.
4- **Carefully reposition all of the parts removed in their housing, making sure not to invert the assembly sequence.**

If necessary, repeat the operations e for a new cleaning cycle.

GRILLS: Use a sponge and neutral detergent liquid to remove incrustations. Clean the grills with a moist cloth. If necessary turn the appliance on to dry it (See Daily activation).

CLEANING FOR PROLONGED DEACTIVATION

/ See chapter 5 / Daily decommissioning / Prolonged decommissioning. **Air out the appliances and rooms regularly**

CLEANING FOR REPLACING LAVA STONES

When replacing the lava stones due to wear, you must: 1.Wait for the temperature of the hotplate to cool off so that the opera-

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

tor is not burnt.
2. Carry out the procedure described in "replacing lava stone" (see chap.8 / Instructions use)

SUMMARISED TABLE:
OPERATION - FREQUENCY

Before proceeding with the operations, see chap.2 "Duties and qualifications"

Should a problem occur, the generic operator performs the first search and, if qualified, eliminates the cause of the problem and restores the appliance correctly.

If the problem cannot be resolved, turn the appliance off, disconnect it from the electrical mains and shut all the supply valves. Then contact authorized customer service.

The authorized maintenance technician intervenes when the generic operator was not able to pinpoint the cause of the problem, or whenever restoration of correct operation of the appliance entails executing operations for which the generic operator is not qualified.

	OPERATION	FREQUENCY
	Cleaning appliance	Daily
	Cleaning parts in contact with foodstuff, hotplates and container	Daily
	Cleaning at commissioning	Upon arrival after installation
	Cleaning flue	Yearly
	Greasing the gas taps	In case of need
	Checking / Replacing gas supply pipes	In case of need

TROUBLESHOOTING

Whenever the appliance does not work properly, try to solve the less serious problems using this table.

FAULT	POSSIBLE CAUSE	INTERVENTION
The heating doesn't adjust/ The appliance is not hot	• Burner is broken • Excess of lava stone	• Clean burner and injector • Take away lava stone (see 8 / Loading lava stone)
The gas appliance does not turn on.	• Gas valve shut. • Air inside pipes. • Faulty piezoelectric igniter	• Open the gas valve. • Repeat the ignition operations. • Replace the piezo
The appliance makes smoke	• Lava stone very dirty	• Replace the lava stone (see chap. 8 / Replacing lava stone)

If the problem cannot be resolved, turn the appliance off, disconnect it from the electrical mains and shut all the supply valves. Then contact authorized customer service.

THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

DEACTIVATION AND SCRAPPING OF APPLIANCE



Obligation of disposing of materials using the legislative procedure in force in the country where the appliance is scrapped

In compliance with Directives (see n. 0.1 Section), relating to the reduction of use of hazardous substances in electrical and electronic equipment, as well as waste disposal. The symbol of the barred waste bin carried on the appliance or its packaging indicates that the product at the end of its useful life it must be disposed of separately from other waste.
Differentiated waste collection of this appliance at the end of its life is organised and implemented by the manufacturer. The user who wishes to get rid of this appliance must contact the manufacturer and follow the instructions received to separately dispose of the appliance at the end of its life. An appropriate collection and dispatching of exhausted appliances to environmentally compatible recycling, treatment and disposal plants helps to prevent damaging effects on health and environment and also guarantees that the component parts of exhausted appliances are effectively recycled or reused. Holders of exhausted appliances who dispose of them illegally will be prosecuted. Specialised personnel is in charge of deactivation and scrapping of the appliance.

The decommissioning and dismantling of the appliance must be carried out by qualified personnel, either mechanical or electrical, that must wear appropriate personal protective equipment such as protective clothing appropriate to the operations to be performed, protective gloves, safety shoes, head gear and goggles.

Before commencing dismantling of the appliance, ensure around the appliance a space that is large enough and arranged in such a way as to allow all movements without risk.

The following are necessary:
• Disconnect the power supply.
• Disconnect the appliance from the mains.
• Remove the electrical cables exiting the appliance.
• Close the water inlet tap (mains valve) from the mains supply.
• Disconnect and remove the pipes from the appliance water system .
• Disconnect and remove the grey water discharge pipe.

After this operation, a wet area around the appliance may form and therefore, before continuing with operations, dry these wet areas.

After restoring the operational area as described:
• Remove the protective panels.
• Disassemble the appliance in its main parts.
• Separate the parts of the appliance according to their nature (e.g. metals, electrical parts etc.) and deliver them to recycling centres.

WASTE DISPOSAL


During operation and maintenance, do not disperse pollutants (oils, grease, etc.) into the environment and perform differentiated waste disposal depending on the composition of the different materials and in compliance with relevant laws in force.

Illegal waste disposal will be prosecuted by laws in force in the territory where the violation has been ascertained.


THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.

INSTALLAZIONE / INSTALLATION


a)

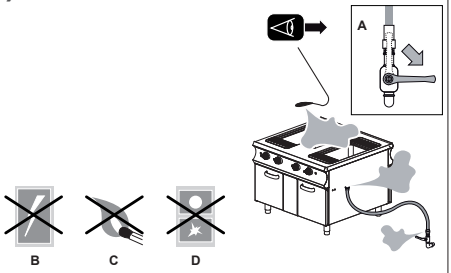

b)

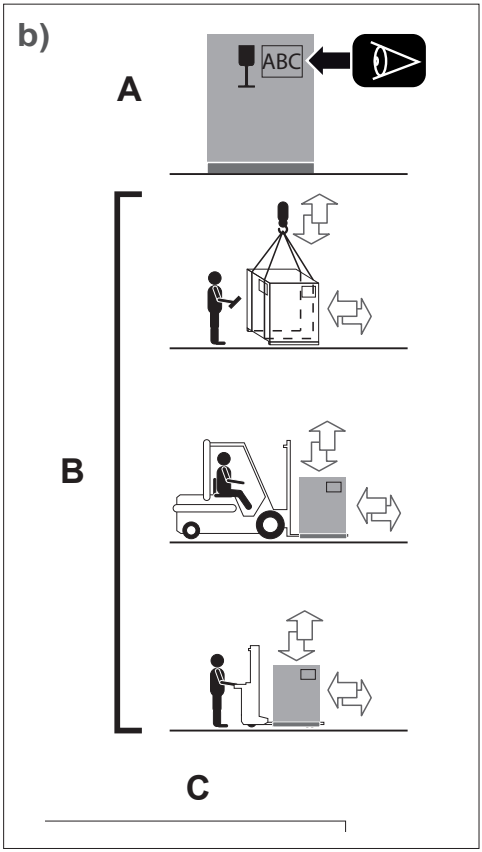



c)

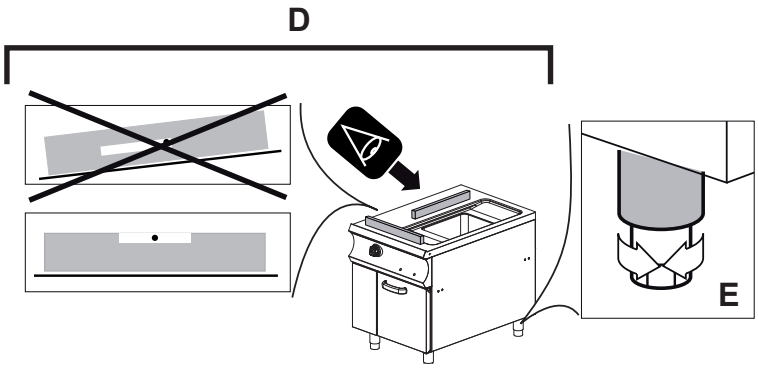



THE PRESENT MANUAL IS PROPERTY OF THE MANUFACTURER. ANY REPRODUCTION, EVEN PARTIAL, IS PROHIBITED.
IL PRESENTE MANUALE È DI PROPRIETÁ DEL FABBRICANTE E OGNI RIPRODUZIONE ANCHE PARZIALE È VIETATA.

d)

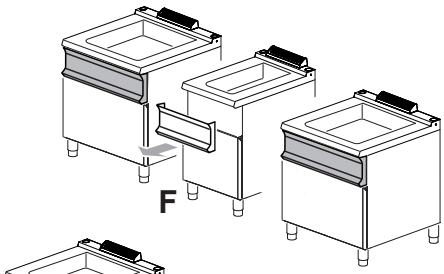


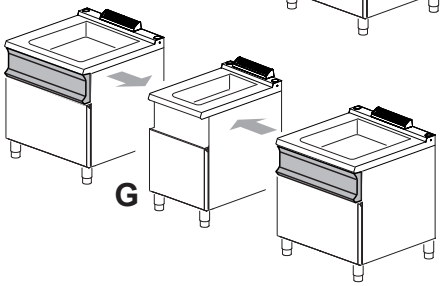

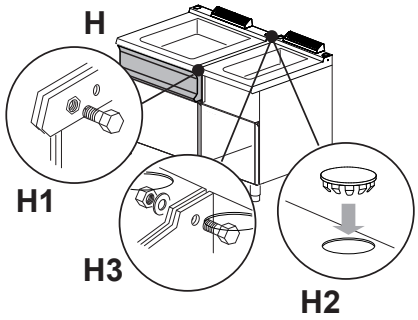

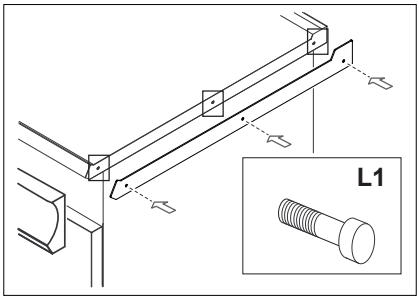


e)

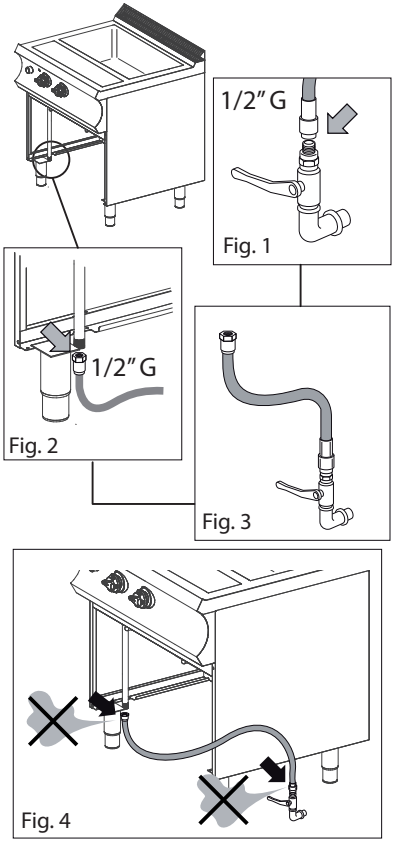


IL PRESENTE MANUALE È DI PROPRIETÀ DEL FABBRICANTE E OGNI RIPRODUZIONE ANCHE PARZIALE È VIETATA.


f)

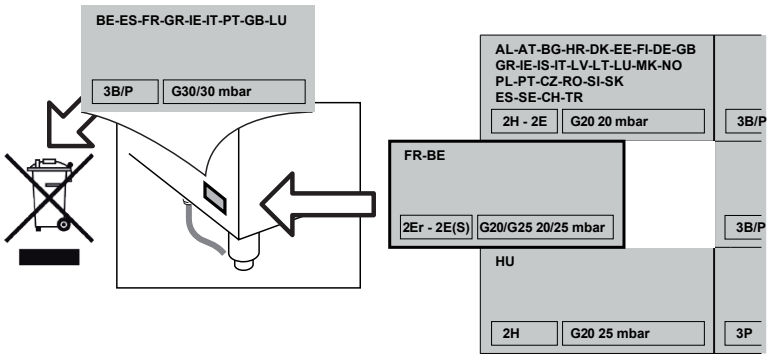


g)

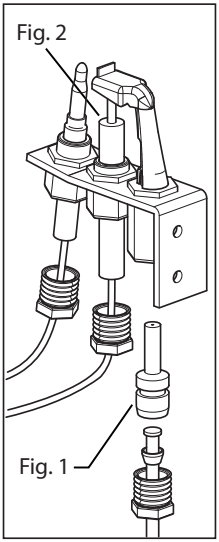


h)

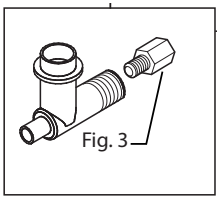

i)

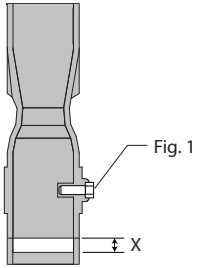


l)

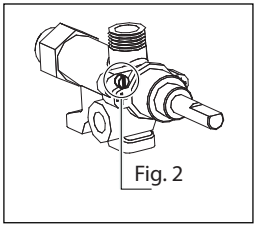


IL PRESENTE MANUALE È DI PROPRIETÁ DEL FABBRICANTE E OGNI RIPRODUZIONE ANCHE PARZIALE È VIETATA.


USO / USER

m)

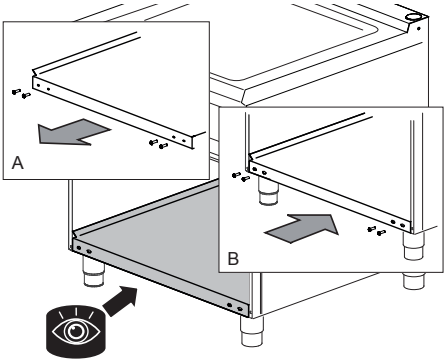


n)

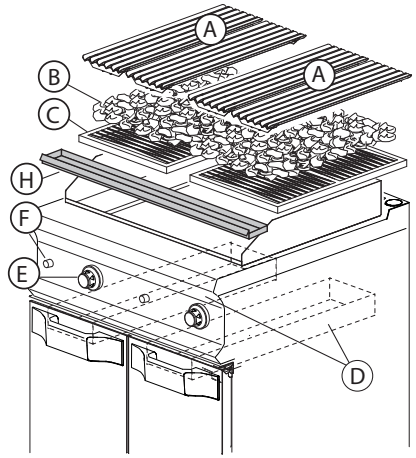

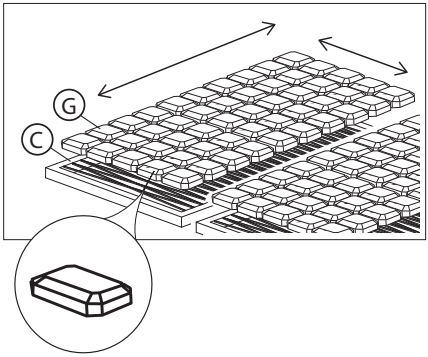



o)

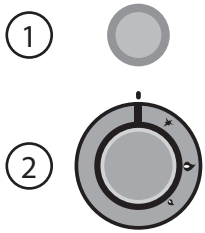


IL PRESENTE MANUALE È DI PROPRIETÀ DEL FABBRICANTE E OGNI RIPRODUZIONE ANCHE PARZIALE È VIETATA.


p)

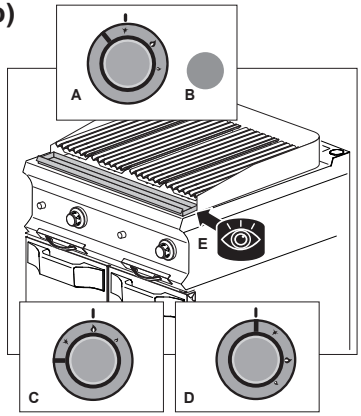

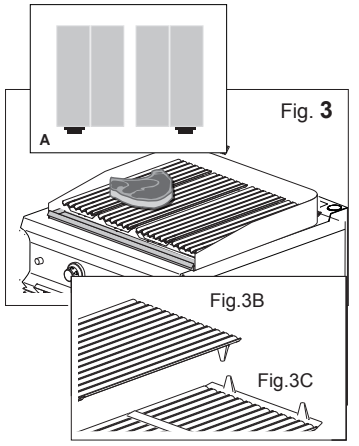


q)

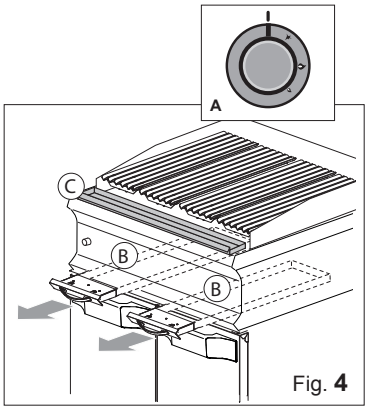

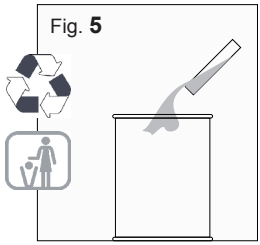

r)

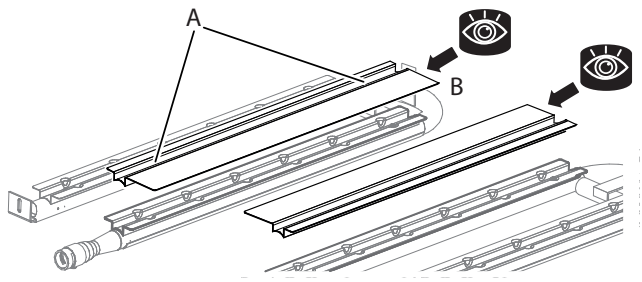

IL PRESENTE MANUALE È DI PROPRIETÀ DEL FABBRICANTE E OGNI RIPRODUZIONE ANCHE PARZIALE È VIETATA.