

03/2018

Mod: BBRV-N

Production code: BFB0000017 (FP01V)



Diamond
catering equipment

**GAS STOCKPOT STOVE FLOORING
GAS TYPE CHANGEOVER
INSTRUCTIONS FOR THE SKILLED TECHNICAL OPERATOR**



Tasks and qualifications required for the operators

	“Homogeneous” Operator (SKILLED OPERATOR) Learned operator, authorized to carry out the handling, transport, installation, maintenance, repair and demolition of the equipment.
	The homogeneous operator can not carry out any type of operation (installation, maintenance and/or other) without having first examined the whole documentation.

Working zones and dangerous zones

The following classification has been established for a better definition of the intervention field and of the corresponding working zones:

- Dangerous zones: any zone inside and/or near a machine, where the presence of an exposed person represents a risk for the safety and health of said person.
- Exposed person: any person completely or partly in a dangerous zone.

	During operation, keep a minimum distance from the machine front and lateral zones, in order not to jeopardize the operator safety if anything unexpected should happen.
---	--

The dangerous zones are also:

- All the working areas inside the machine
- All the areas protected by special protection and safety systems, such as photocells photoelectric barriers, protection panel, interlocked doors, protection guard.
- All the zoned inside control units, electrical panels and connector blocks.
- All zones around the functioning machine, when the minimum safety distances are not complied with.

Equipment necessary for installation

For the correct execution of the installation operations, the authorized technical operator must provide himself with the tools provided, such as:

Flat head screwdriver from 3 and 8 mm.	Iron drill from 3 mm to 14 mm.	Tools for electrical use (cables, terminal boards, industrial outlets etc.).
Crosshead screwdriver small and medium.	Self-locking pliers.	Tools for gas use (pipes, gaskets etc.).
Fixed spanners from 6 mm to 13 mm.	Torx. spanners set.	Tools for water use (pipes, gaskets etc.).
Electrician shears. Portable drill.	Gas leaks detector.	Kit for gas type changeover, supplied from the manufacturer.

Obligations - Prohibitions - Suggestions - Recommendations

	The unauthorized persons can not carry out any type of intervention.
	Read the instructions before performing any type of operation.
	Wear a protection outfit, suitable to the operations to be performed. For what concerns the personal protection devices, the European Community has issued the directives which the operators must follow.
	Absolute prohibition to damage or remove the plates and pictograms applied to the machine.
	Interrupt every form of supply (electrical - gas - water) upstream the machine each time it's necessary to operate in safety conditions.
	Do not leave objects or inflammable material next to the machine.

 	For all the users indications concerning the rules, directives and disposal procedures, refer to the use manual, supplied with the machine.
---	---

Assembly leveling feet


Place the equipment in the correct position.

Screw in the supplied feet and proceed to the leveling of the equipment:


1. Place a level on the structure (detail A).
2. Adjust the leveling legs (especially B).



The perfect leveling is obtainable by adjusting leveling feet in the width and depth sense of the equipment.

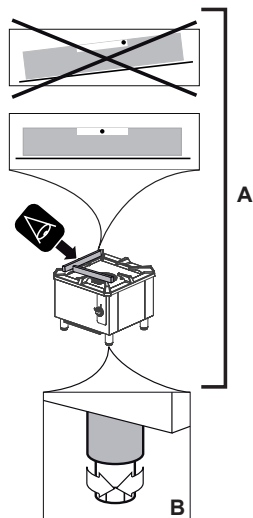

Gas type changeover

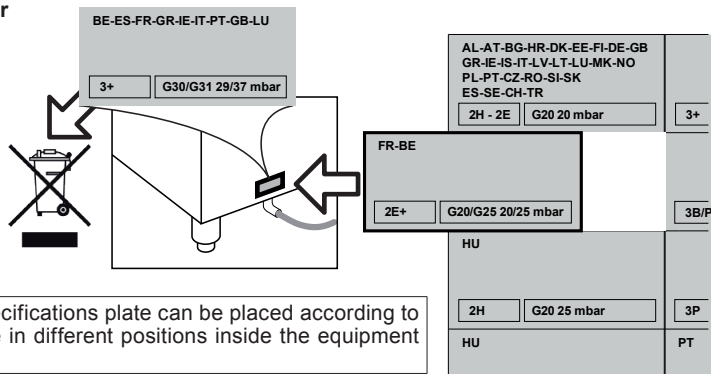

The gas specifications plate can be placed according to the machine in different positions inside the equipment itself.



The machine leaves the factory predisposed to the type of supply reported on the plate. Every other configuration must be authorised by the manufacturer or his mandatory.



Ask for Injectors - By Pass - Pilot injectors - Diaphragms - And what needed to the possible gas transformation directly to the manufacturer.



At the end of the transformation from a type of supply to another, replace the plate placed onto the equipment with the new parameters reported on the issued adhesive document.



Plates to be replaced in some cases can be two, an external one next to the gas coupling and an internal one.



Upstream dynamic pressure control

The pressure is measured with a $0 \div 80$ mbar pressure measurer. The pressure intake is usually next to the gas coupling on the supply ramp.

- Close the cut-off cock upstream the machine (Fig. 1);
- unscrew the pressure intake screw (Fig. 3);
- place the instrument for the detection (pressure measurer);
- Open the cut-off cock upstream the machine (Fig. 2);
- Turn on the burners at the maximum power and detect the pressure read by the instrument.

Once the read-out is finished:

- Close the cut-off cock upstream the machine (Fig. 1).
- Reassemble the screw with gas seal washer in the appropriate seat, open the cut-off cock upstream the machine (Fig. 2) and check there are no gas leakages.

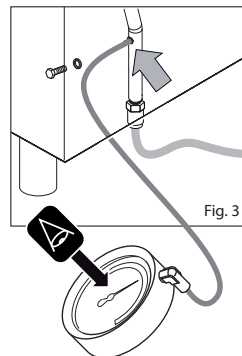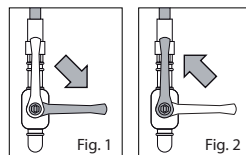




 If the measured pressure is lower than the 20% compared to the nominal pressure (ex. G20 20 mbar $\leq$ 17 mbar) suspend the installation and contact the gas distribution service.

 If the measured pressure is higher than the 20% compared to the nominal pressure (ex. G20 20 mbar $\leq$ 25 mbar) suspend the installation and contact the gas distribution service.

 The constructor firm does not recognise the machines warranty in case the gas pressure is lower or higher than the values above described.




Replacement of pilot burner injector

- Close the cut-off cock upstream the machine.
- Demount if necessary, the plugs in order to avoid to damage it during the injector replacement (Fig. 2).
- Unscrew the nut and demount the pilot injector (the injector is hooked to the compression fitting).
- Replace the pilot injector (Fig. 1) with the one corresponding to the selected gas according to what reported in the reference Table.
- Screw the nut with the new injector.
- Reassemble the plug.
- Turn on the pilot burner to check whether there are no gas leakages.

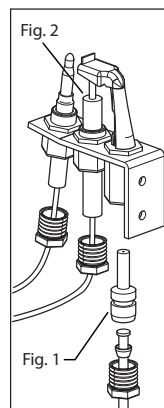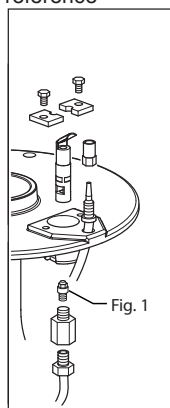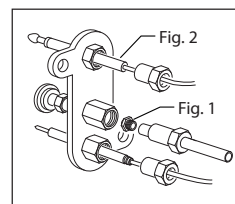

Replacement of burner injector


- Close the cut-off cock upstream the machine.
- Unscrew the injector from its own seat (Fig. 3).
- Replace the injector with the one corresponding to the selected gas according to what reported in the reference Table.
- Screw hard the injector into the appropriate seat.

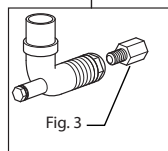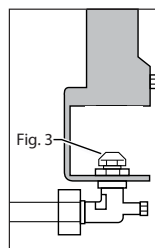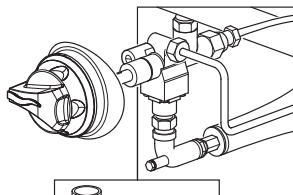

Adjustment of main burner

For primary air adjustment:



- Close the cut-off cock upstream the machine.
- Unscrew the locking screw (Fig. 1).
- Where required set the distance (X) mm of the bushing corresponding to the selected gas (see Gas reference Table).
- Block the bushing with the screw and put a tampering detecting seal on it.
- Open the cut-off cock upstream the machine.
- Turn on the pilot burner and the main burner according to the instructions described in the ignition chapter.

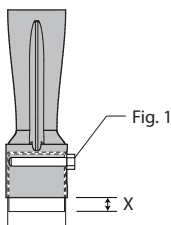

Adjustment of minimum thermal range

In the provided models, the reduced thermal range is obtained with the "sized" by-pass minimum screw (Fig. 2), screwed hard (see reference Gas Table).

- Open the cut-off cock upstream the machine;
- In case of screw replacement put a tampering detecting seal on it at the end of the detection process.

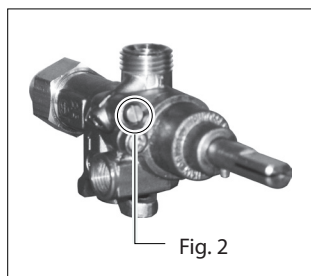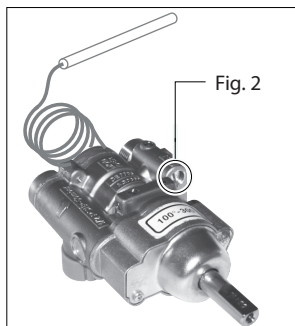

DATI TECNICI – TECHNICAL DATA – DONNEES TECHNIQUES – TECNISHE DATEN – DATOS TÉCNICOS

MODELLO	Dim (cm)	Bruciatori gas 12 kW	Tot. (kW)	Consumi totali gas				Attacco gas Ø "	Alimentazione (kW)	
				G20 m³/h	G25 m³/h	G30 kg/h	G31 kg/h			
MODEL	Dim (cm)	Gas burners. 12 kW	Tot. (kW)	Total gas consumption				Gas cou- pling Ø "	Electrical supply (kW)	
				G20 m³/h	G25 m³/h	G30 kg/h	G31 kg/h			
MODELE	Dim (cm)	Bruleurs gaz 12 kW	Tot. (kW)	Consommation totale de gaz				Fixation gaz Ø "	Alimentation électrique (kW)	
				G20 m³/h	G25 m³/h	G30 kg/h	G31 kg/h			
MODELO	Dim (cm)	Quemador gas 12 kW	Tot. (kW)	Consumo total de gas				Junta gas Ø "	Alimentación eléctrica (kW)	
				G20 m³/h	G25 m³/h	G30 kg/h	G31 kg/h			
MODELL	Größe (cm)	Gasbrenners 12 kW	Tot. (kW)	Gesamt Gasverbrauch				Gas-An- schluss Ø "	Stromversorgung (kW)	
				G20 m³/h	G25 m³/h	G30 kg/h	G31 kg/h			
	FP01V	58x58x52	1	12	1,269	1,476	0,945	0,932	1/2"	-



- I diametri degli ugelli sono espressi in 1/100mm – The diameter of the nozzles are indicated in 1/100mm - Le diamètres des gicleur sont exprimés en 1/100mm - Diameter der Düsen ist in 1/100mm angegeben – Los diámetros de las boquillas se indican en 1/100mm
 - **RDA**:Regolazione dell' aria primaria; Regulation of primari air; Réglage del'air primaire; Primärlufteinstellung; Regulación de la entrada del aire

AT	Austria	EE	Estonia	IS	Iceland	PL	Poland
AL	Albania	ES	Spain	IT	Italy	PT	Portugal
BE	Belgium	FI	Finland	LT	Lithuania	RO	Romania
BG	Bulgaria	FR	France	LV	Latvia	SE	Sweden
CH	Switzerland	GB	United Kingdom	LU	Luxembourg	SI	Slovenia
CY	Cyprus	GR	Greece	MK	Macedonia	SK	Slovakia
CZ	Czech Republic	HR	Croatia	MT	Malta	TR	Turkey
DE	Germany	HU	Hungary	NL	Netherland		
DK	Denmark	IE	Ireland	NO	Norway		

IT, IE, GR, GB, ES, PT, BG, CZ, DK, FI, EE, SE, HR, LT, IS, LV*, NO, PL, RO, SI, SK, TR, AL, MK			
Modelli – Models – Modèles – Modelle – Modelo			FP01V
Tipo – Type – Bauart			A1
Potenza nominale - Nominal thermal power - Puissance thermique nominale - Nominal - Wärmeleistung - Potencia tèrmica nominal	(kW)		12
Consumo gas - Gasconsumption - Consommation de gaz - Gasverbrauch - Consumo de gas	G20	m³/h	1,269
	G30/31	kg/h	0,945/ 0,932
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G20 20 mbar		260K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G20 20 mbar		27
R.D.A.-X mm			6,5
BY PASS-Ø-1/100mm			180
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G30/31 50/50 mbar		175K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G30/31 50/50 mbar		19
R.D.A.-X mm			14
BY PASS-Ø-1/100mm			130

* Solo G20; Only G20; Seulement G20; Nur G20; Sólo G20



AT, CH			
Modelli – Models – Modèles – Modelle – Modelo			FP01V
Tipo – Type – Bauart			A1
Potenza nominale - Nominal thermal power - Puissance thermique nominale - Nominal - Wärmeleistung - Potencia tèrmica nominal	(kW)		12
Consumo gas - Gasconsumption - Consommation de gaz - Gasverbrauch - Consumo de gas	G20	m³/h	1,269
	G30/31	kg/h	0,945/ 0,932
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G20 20 mbar		260K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G20 20 mbar		27
R.D.A.-X mm			6,5
BY PASS-Ø-1/100mm			180
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G30/31 50/50 mbar		145/250K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G30/31 50/50 mbar		19
R.D.A.-X mm			14
BY PASS-Ø-1/100mm			130

BE, FR			
Modelli – Models – Modèles – Modelle – Modelo			FP01V
Tipo – Type – Bauart			A1
Potenza nominale - Nominal thermal power - Puissance thermique nominale - Nominal - Wärmeleistung - Potencia tèrmica nominal	(kW)		12
Consumo gas - Gasconsumption - Consommation de gaz - Gasverbrauch - Consumo de gas	G20	m³/h	1,269
	G25	m³/h	1,476
	G30/31	kg/h	0,945/ 0,932
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G20/25 20/25 mbar		260K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G20/25 20/25 mbar		27
R.D.A.-X mm			6,5
BY PASS-Ø-1/100mm			180
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G30/31 50/50 mbar		175K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G30/31 50/50 mbar		19
R.D.A.-X mm			14
BY PASS-Ø-1/100mm			130

DE			
Modelli – Models – Modèles – Modelle – Modelo			FP01V
Tipo – Type – Bauart			A1
Potenza nominale - Nominal thermal power - Puissance thermique nominale - Nominal - Wärmeleistung - Potencia tèrmica nominal	(kW)		12
Consumo gas - Gasconsumption - Consommation de gaz - Gasverbrauch - Consumo de gas	G20	m³/h	1,269
	G25	m³/h	1,414
	G30/31	kg/h	0,945/ 0,932
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G20 20 mbar G25 20 mbar		260K 260/250L
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G20 20 mbar G25 20 mbar		27
R.D.A.-X mm	G20 20 mbar G25 20 mbar		6,5 9,5
BY PASS-Ø-1/100mm	G20 20 mbar G25 20 mbar		180
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G30/31 50/50 mbar		145/250K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G30/31 50/50 mbar		19
R.D.A.-X mm			14
BY PASS-Ø-1/100mm			130

NL			
Modelli – Models – Modèles – Modelle – Modelo			FP01V
Tipo – Type – Bauart			A1
Potenza nominale - Nominal thermal power - Puissance thermique nominale - Nominal - Wärmeleistung - Potencia tèrmica nominal	(kW)		12
Consumo gas - Gasconsumption - Consommation de gaz - Gasverbrauch - Consumo de gas			
	G25	m³/h	1,476
	G31	kg/h	0,932
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G25 25 mbar		280K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G25 25 mbar		27
R.D.A.-X mm			9
BY PASS-Ø-1/100mm			180
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G31 37 mbar		175K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G31 37 mbar		19
R.D.A.-X mm			14
BY PASS-Ø-1/100mm			130
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G31 50 mbar		155/250K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G31 50 mbar		19
R.D.A.-X mm			14
BY PASS-Ø-1/100mm			130

PT			
Modelli – Models – Modèles – Modelle – Modelo			FP01V
Tipo – Type – Bauart			A1
Potenza nominale - Nominal thermal power - Puissance thermique nominale - Nominal - Wärmeleistung - Potencia tèrmica nominal	(kW)		12
Consumo gas - Gasconsumption - Consommation de gaz - Gasverbrauch - Consumo de gas	G20	m³/h	1,269
	G30/31	kg/h	0,945/ 0,932
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G20 20 mbar		260K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G20 20 mbar		27
R.D.A.-X mm			6,5
BY PASS-Ø-1/100mm			180
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G30/31 50/67 mbar		145/250K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G30/31 50/67 mbar		19
R.D.A.-X mm			14
BY PASS-Ø-1/100mm			130

MT, CY			
Modelli – Models – Modèles – Modelle – Modelo			FP01V
Tipo – Type – Bauart			A1
Potenza nominale - Nominal thermal power - Puissance thermique nominale - Nominal - Wärmeleistung - Potencia tèrmica nominal	(kW)		12
Consumo gas - Gasconsumption - Consommation de gaz - Gasverbrauch - Consumo de gas			
	G30/31	kg/h	0,945/ 0,932
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G30/31 30/30 mbar		260K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G30/31 30/30 mbar		19
R.D.A.-X mm			14
BY PASS-Ø-1/100mm			130

LU			
Modelli – Models – Modèles – Modelle – Modelo			FP01V
Tipo – Type – Bauart			A1
Potenza nominale - Nominal thermal power - Puissance thermique nominale - Nominal - Wärmeleistung - Potencia tèrmica nominal	(kW)		12
Consumo gas - Gasconsumption - Consommation de gaz - Gasverbrauch - Consumo de gas	G20	m³/h	1,269
	G31	kg/h	0,932
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G20 20 mbar		260K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G20 20 mbar		27
R.D.A.-X mm			6,5
BY PASS-Ø-1/100mm			180
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G31 37 mbar		145/250K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G31 37 mbar		19
R.D.A.-X mm			14
BY PASS-Ø-1/100mm			130
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G31 50 mbar		155/250K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G31 50 mbar		19
R.D.A.-X mm			14
BY PASS-Ø-1/100mm			130



HU			
Modelli – Models – Modèles – Modelle – Modelo			FP01V
Tipo – Type – Bauart			A1
Potenza nominale - Nominal thermal power - Puissance thermique nominale - Nominal - Wärmeleistung - Potencia tèrmica nominal	(kW)		12
Consumo gas - Gasconsumption - Consommation de gaz - Gasverbrauch - Consumo de gas	G20	m³/h	1,216
	G25.1	m³/h	1,473
	G30/31	kg/h	0,945/ 0,932
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G20 25 mbar G25.1 25 mbar		235K 260/350L
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G20 25 mbar G25.1 25 mbar		27
R.D.A.-X mm	G20 25 mbar G25.1 25 mbar		9,5
BY PASS-Ø-1/100mm	G20 25 mbar G25.1 25 mbar		180
Bruciatore principale - Main burner - Brûleur principal - Hauptbrenner - Quemador principal	G30/31 30/30 mbar		175K
Bruciatore pilota - Pilot burner - Brûleur pilote - Leitflamme - Quemador piloto	G30/31 30/30 mbar		19
R.D.A.-X mm			14
BY PASS-Ø-1/100mm			130